

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher-Price](#) /
- › [Fisher-Price Laugh & Learn Magical Lights Fishbowl Instruction Manual](#)

Fisher-Price DYM75

Fisher-Price Laugh & Learn Magical Lights Fishbowl Instruction Manual

Model: DYM75

INTRODUCTION

The Fisher-Price Laugh & Learn Magical Lights Fishbowl is an interactive toy designed for infants and toddlers aged 6 months to 3 years. It features a light-up castle, three interactive buttons, and five aquatic friends for put-and-take play. This toy helps introduce early learning concepts such as the alphabet, shapes, numbers, and colors through engaging sounds, songs, and phrases.

SAFETY INFORMATION

- Always supervise children during play.
- This product is not intended to be used with water. Avoid submerging the electronic components in liquid.
- Ensure all parts are securely attached before allowing a child to play.
- Dispose of batteries properly. Do not mix old and new batteries or different types of batteries.

WHAT'S INCLUDED

The Fisher-Price Laugh & Learn Magical Lights Fishbowl package includes:

- 1 x Fishbowl unit with light-up castle and interactive buttons
- 5 x Aquatic play pieces (various fish, crab, starfish)
- 3 x AAA batteries (pre-installed for demonstration purposes)



Image: The complete Fisher-Price Laugh & Learn Magical Lights Fishbowl set in its packaging, displaying the fishbowl unit and the five colorful aquatic play pieces.

SETUP

Battery Installation

The fishbowl requires 3 AAA batteries. Batteries are included for demonstration purposes but may need replacement for extended play.

1. Locate the battery compartment on the bottom of the fishbowl unit.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover and remove the cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.

4. Replace the battery compartment cover and tighten the screw.

Power On/Off and Volume Control

On the bottom of the fishbowl, there is a switch to control the power and volume settings.

- Slide the switch to the "ON" position for play.
- There are typically two volume settings: low and high. Adjust the switch to your preferred volume level.
- To turn off the toy, slide the switch to the "OFF" position.



Image: The underside of the fishbowl, highlighting the battery compartment and the power/volume control switch.

OPERATING INSTRUCTIONS

Interactive Play

The fishbowl offers multiple ways to engage your child:

- **Put-and-Take Play:** Encourage your child to place the five aquatic friends into and take them out of the fishbowl. This action activates lights, music, and educational phrases.
- **Button Interaction:** Press the three colorful buttons on the front of the fishbowl to hear songs and phrases about the alphabet (ABC button), shapes (triangle/square button), and numbers (123 button).
- **Wobbly Base:** Gently rock the fishbowl to activate a colorful light show and additional sounds, introducing cause and effect.



Image: A baby interacting with the fishbowl, demonstrating the put-and-take play feature with one of the aquatic friends.

Your browser does not support the video tag.

Video: A product overview demonstrating the various interactive features of the Fisher-Price Laugh & Learn Magical Lights Fishbowl, including lights, sounds, and put-and-take play.

Your browser does not support the video tag.

Video: A demonstration of the Fisher-Price Laugh & Learn Magical Lights Fishbowl, showcasing its fun and engaging features for babies.

CARE AND MAINTENANCE

- Wipe the fishbowl and aquatic pieces with a damp cloth and mild soap. Do not immerse the electronic fishbowl unit in water.
- Allow all parts to air dry completely before storing.
- Store the toy in a cool, dry place away from direct sunlight.
- Remove batteries if the toy will not be used for an extended period to prevent battery leakage.

TROUBLESHOOTING

No Sound or Lights

- Check if the power/volume switch on the bottom of the unit is in the "ON" position and not on the lowest volume setting.
- Ensure batteries are correctly installed with proper polarity.
- Replace old batteries with new AAA batteries.

Intermittent Functionality

- Weak batteries can cause intermittent operation. Replace with fresh batteries.
- Ensure the aquatic pieces are placed firmly into the fishbowl to trigger sensors.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.99 x 6.58 x 6.25 inches
Item Weight	1.59 ounces
Model Number	DYM75
Recommended Age	6 months - 3 years
Batteries Required	3 AAA batteries (included)
Manufacturer	Fisher-Price



Image: A side view of the fishbowl with key dimensions (height and width) indicated.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Fisher-Price website. Keep your purchase receipt as proof of purchase. You can find more information and support at the [Fisher-Price Store on Amazon](#).