

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EISL](#) /

› [EISL Washbasin Faucet Vico NI075TCO Instruction Manual](#)

## EISL NI075TCO

# EISL Washbasin Faucet Vico NI075TCO Instruction Manual

## 1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your EISL Washbasin Faucet Vico, model NI075TCO. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product. Retain this manual for future reference.

## 2. SAFETY INFORMATION

- Always turn off the main water supply before beginning any installation, maintenance, or repair work on the faucet.
- Ensure all connections are secure and properly sealed to prevent leaks.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals on the faucet's chrome finish, as this can cause damage.
- If you are unsure about any step in the installation or repair process, consult a qualified plumber.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- EISL Washbasin Faucet Vico (Model NI075TCO)
- Mounting hardware (nuts, washers, gaskets)
- Flexible hot and cold water connection hoses
- 1 1/4 inch eccentric fitting (pop-up waste)
- Instruction Manual

## 4. SPECIFICATIONS

| Feature      | Specification |
|--------------|---------------|
| Model Number | NI075TCO      |
| Manufacturer | Eisl Sanitär  |

|                     |                         |
|---------------------|-------------------------|
| Item Weight         | 1.49 Kilograms          |
| Product Dimensions  | 14.4 x 5.6 x 18.4 cm    |
| Material            | Brass                   |
| Finish              | Chrome                  |
| Installation Method | Single Hole, Deck Mount |
| Number of Handles   | 1 (Single Lever)        |
| Flow Rate           | 12.2 Liters Per Minute  |
| Hose Length         | 40 Centimeters          |
| Spout Height        | 75 Millimeters          |
| Special Features    | Pull-out spray          |

## 5. SETUP AND INSTALLATION

Follow these steps for proper installation of your EISL Washbasin Faucet:

- 1. Prepare the Installation Area:** Ensure the main water supply is turned off. Clear the area around the washbasin hole.
- 2. Mount the Faucet:** Insert the faucet body into the single hole on your washbasin. From underneath the basin, secure the faucet using the provided mounting hardware (gasket, washer, and nut). Tighten securely but do not overtighten.
- 3. Connect Water Hoses:** Attach the flexible hot and cold water hoses to the corresponding inlets on the faucet body. Connect the other ends of the hoses to your hot and cold water supply lines. Ensure connections are hand-tight, then use a wrench for a final quarter turn.
- 4. Install Eccentric Fitting:** Assemble the 1 1/4 inch eccentric fitting (pop-up waste) according to its separate instructions and install it into the drain hole of your washbasin. Connect the operating rod from the faucet to the eccentric fitting.
- 5. Check for Leaks:** Slowly turn on the main water supply and check all connections for leaks. If any leaks are detected, tighten the connections further.



Front view of the EISL Vico washbasin faucet, showcasing its chrome finish and single lever design.



Side view of the EISL Vico faucet mounted on a washbasin, highlighting its sleek profile and integrated pull-out spray.



Technical drawing illustrating the dimensions of the EISL Vico washbasin faucet, including height, width, and spout reach.

## 6. OPERATING INSTRUCTIONS

The EISL Vico faucet features a single lever for controlling water flow and temperature, and a pull-out spray for extended reach.

- **Water Flow and Temperature:** Lift the single lever handle to increase water flow. Move the lever to the left for hot water and to the right for cold water. The further you move the lever, the higher the temperature or colder the water will be.
- **Pull-out Spray:** Gently pull the spout head to extend the integrated spray hose. This allows for greater flexibility in directing water. Push the spout head back into the faucet body when finished.
- **Eccentric Fitting (Pop-up Waste):** The drain stopper is operated by a small lever located on the back or side of the faucet body. Push down the lever to close the drain and pull up to open it.



The EISL Vico faucet installed on a washbasin, with water flowing from the spout, demonstrating its operational state.

## 7. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your faucet.

- **Cleaning:** Clean the faucet regularly with a soft cloth and mild soap or a non-abrasive cleaner specifically designed for chrome finishes. Rinse thoroughly with water and dry with a soft cloth to prevent water spots. Do not use abrasive cleaners, acids, or solvents.
- **Aerator Cleaning:** If water flow decreases, the aerator at the end of the spout may be clogged. Unscrew the aerator, clean any debris, and rinse it under running water before reattaching.
- **Cartridge Replacement:** The faucet is equipped with a low-noise, replaceable ceramic cartridge. If you experience persistent drips or difficulty controlling water temperature/flow, the cartridge may need replacement. Contact a qualified plumber or EISL customer support for assistance.

## 8. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

| Problem                            | Possible Cause  | Solution   |
|------------------------------------|---|--|
| Low water flow                     | Clogged aerator; partially closed shut-off valve; kinked supply hose. | Clean aerator; ensure shut-off valves are fully open; check supply hoses for kinks.      |
| Water leaks from spout             | Worn cartridge.   | Replace the ceramic cartridge.   |
| Water leaks from base of faucet    | Loose mounting nut; damaged gasket.                                   | Tighten mounting nut; inspect and replace gasket if damaged.                             |
| Difficulty controlling temperature | Worn cartridge; incorrect hot/cold supply connection.                 | Replace the ceramic cartridge; verify hot and cold supply lines are connected correctly. |

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact EISL Sanitär GmbH directly or refer to the retailer from whom you purchased the product. Keep your proof of purchase for warranty claims.

### Related Documents - NI075TCO

|   |   |
|---|---|
|  | <p><a href="#">Eisl Duroplast WC Seat with Soft Close: Installation and Care Guide</a></p> <p>Detailed installation, safety, and care instructions for the Eisl Duroplast WC seat with automatic soft-close mechanism (Model EL-BAD-WC-Sitz-ED82118-ED82119-UB_0222). Learn how to properly install and maintain your Eisl toilet seat.</p>   |
|  | <p><a href="#">Eisl Überkopfbrause-Set DX12004BL-A Installation Manual - High Quality Shower System</a></p> <p>Comprehensive installation and user guide for the Eisl Überkopfbrause-Set DX12004BL-A shower system. Includes safety instructions, care tips, and assembly steps.</p>  |
|  | <p><a href="#">Eisl Flexo Foldable Kitchen Faucet for Under-Window Installation</a></p> <p>Discover the Eisl Flexo foldable kitchen faucet, a stylish and innovative product designed for kitchens with windows. Its low profile and 360° swivel spout allow for easy window operation. Features high-quality materials, ceramic seals, and a simple installation system. Available in glossy chrome.</p> |