

[Manuals.plus](#) /

› [SURKER](#) /

› SURKER SK-211 Electric Nose and Ear Hair Trimmer User Manual

SURKER SK-211

SURKER SK-211 Electric Nose and Ear Hair Trimmer User Manual

Model: SK-211

INTRODUCTION

Thank you for choosing the SURKER SK-211 Electric Trimmer. This versatile device is designed for precise and comfortable removal of unwanted hair from the nose, ears, and for shaping eyebrows, sideburns, beards, and mustaches. Please read this manual thoroughly before first use to ensure safe and optimal performance of your trimmer.

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury, electric shock, fire, or damage to the product, always follow these basic safety precautions:

- **Do not use near water:** This appliance is not waterproof. Avoid using it in bathrooms, near sinks, or any wet environments.
- **Keep out of reach of children:** This product is not suitable for children under 3 years of age. Adult supervision is recommended for older children.
- **Avoid contact with eyes and skin:** Exercise caution when trimming near sensitive areas.
- **Clean thoroughly after each use:** Regular cleaning ensures hygiene and maintains performance.
- **Use only for intended purpose:** Do not use the trimmer for any purpose other than personal hair removal as described in this manual.
- **Charging:** Use only the provided charging cable. Do not attempt to charge with other cables.

PACKAGE CONTENTS

Verify that all items are present in your package:

- SURKER SK-211 Trimmer Unit

- Nose and Ear Trimmer Attachment
- Beard Trimmer Attachment
- Sideburn Trimmer Attachment
- Charging Cable
- Cleaning Brush



Image: The SURKER SK-211 trimmer unit, charging cable, and a comb attachment, illustrating the typical package contents.

SETUP

Charging the Trimmer

The SURKER SK-211 is battery-operated and rechargeable. Before first use, or when the battery is low, charge the device fully.

1. Ensure the trimmer is switched OFF.
2. Connect the charging cable to the charging port on the trimmer.

3. Plug the other end of the charging cable into a suitable power outlet.
4. Allow the trimmer to charge for approximately 8 hours for a full charge. The charging indicator (if present) will show the charging status.
5. Once fully charged, disconnect the charging cable.

Attaching/Detaching Trimmer Heads

The trimmer comes with interchangeable heads for different grooming needs.

1. To attach a head: Align the desired trimmer head with the main unit and gently twist or push until it clicks securely into place.
2. To detach a head: Hold the main unit firmly and twist or pull the trimmer head off.



Image: The SURKER SK-211 trimmer unit shown with both the nose/ear trimmer head and the detail trimmer head, ready for attachment.

OPERATING INSTRUCTIONS

Ensure the trimmer is fully charged and the correct attachment is securely in place before use.

General Operation

1. **Power On/Off:** Slide the ON/OFF switch located on the trimmer body to the "ON" position to start the device. Slide it to "OFF" to turn it off.
2. **Trimming Technique:** Always use the trimmer on clean, dry skin. Move the trimmer gently against the direction of hair growth for best results.

Using the Nose and Ear Trimmer Attachment

This attachment is designed for safe and comfortable removal of unwanted nose and ear hair.

1. Attach the nose and ear trimmer head to the main unit.
2. Gently insert the trimmer tip into your nostril or ear canal. Do not insert too deeply.
3. Move the trimmer in a circular motion to cut hairs.
4. Breathe normally through your mouth when trimming nose hair.



Image: The SURKER SK-211 trimmer with the nose and ear hair attachment, ready for use.

Using the Beard and Sideburn Trimmer Attachment

This attachment is ideal for shaping and maintaining beards, mustaches, and sideburns.

1. Attach the beard/sideburn trimmer head to the main unit.
2. For precise lines, use the trimmer without a comb attachment.
3. For uniform length, attach the appropriate comb guide (if included) to the trimmer head.
4. Move the trimmer slowly and steadily against the direction of hair growth.



Image: The SURKER SK-211 trimmer with the detail trimmer attachment, suitable for beard and sideburn shaping.



Image: The SURKER SK-211 trimmer with the detail trimmer attachment and an attached comb guide for length control.

MAINTENANCE

Regular cleaning and proper care will extend the life of your SURKER SK-211 trimmer.

1. **Turn Off and Disconnect:** Always ensure the trimmer is switched OFF and disconnected from the charging cable before cleaning.
2. **Remove Trimmer Head:** Detach the trimmer head from the main unit.
3. **Clean Blades:** Use the provided cleaning brush to remove any trapped hairs from the blades and inside the trimmer head.
4. **Wipe Body:** Wipe the main body of the trimmer with a soft, dry cloth. Do not rinse the main unit under water.
5. **Reassemble:** Once clean and dry, reattach the trimmer head.
6. **Storage:** Store the trimmer in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

- **Trimmer does not turn on:**
 - Ensure the trimmer is fully charged.
 - Check that the ON/OFF switch is in the "ON" position.
- **Poor trimming performance:**
 - Clean the trimmer head and blades thoroughly to remove any hair buildup.
 - Ensure the trimmer head is securely attached.
 - The battery might be low; try recharging the device.
- **Trimmer makes unusual noise:**
 - Check for any foreign objects or excessive hair caught in the blades. Clean as per maintenance instructions.
 - Ensure the trimmer head is correctly attached.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	SK-211
Brand	SURKER
Power Source	Battery-Powered (Rechargeable)
Charging Time (Full Charge)	Approximately 8 hours
Blade Material	Metal
Recommended Applications	Nose, Ear, Eyebrows, Sideburns, Beard, Moustache
Product Dimensions (Package)	15.01 x 5 x 3 cm

Product Weight (Package)	240 g
--------------------------	-------

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for warranty claims.