

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SYSKA](#) /

› [SYSKA HD1605 1000W Hair Dryer User Manual](#)

SYSKA HD1605

SYSKA HD1605 1000W Hair Dryer User Manual

Model: HD1605

1. INTRODUCTION

The SYSKA HD1605 1000W Hair Dryer is designed to provide efficient and gentle hair drying for a smooth, frizz-free finish. Featuring a compact and foldable design, it is ideal for both home use and travel. This manual provides essential information for safe and effective operation, maintenance, and troubleshooting.



Figure 1: SYSKA HD1605 Hair Dryer with its retail packaging, highlighting key features.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or injury, always follow basic safety precautions when using electrical appliances.

- Do not use this appliance near water, such as in a bathtub, basin, or shower.
- Always unplug the appliance immediately after use.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being

administered.

- This appliance is for household use only.
- Ensure the input voltage (220-240V, 50Hz) matches your local power supply.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your SYSKA HD1605 Hair Dryer.



Figure 2: Overview of the SYSKA HD1605 Hair Dryer, illustrating its key features such as 2-speed setting, Health Breeze mode, Heat Balance Technology, Overheating Protection, Foldable Handle, and 1000W power.

- **Air Inlet Grille:** Located at the back, designed for quiet and efficient drying by reducing air swirl.
- **Nozzle:** Directs airflow for precise styling.
- **Speed/Heat Settings Switch:** Controls airflow speed and heat levels.
- **Foldable Handle:** Allows for compact storage and portability.
- **Hanging Loop:** A rubberized hook at the base of the handle for easy storage.



Figure 3: Top-down view of the SYSKA HD1605 Hair Dryer, showing the air inlet grille and overall design.



Figure 4: Angled view of the SYSKA HD1605 Hair Dryer, showcasing its sleek design and controls.

4. SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Unfold Handle:** If the handle is folded for storage, gently unfold it until it clicks into place.
4. **Connect to Power:** Plug the power cord into a suitable electrical outlet (220-240V, 50Hz).

5. OPERATING INSTRUCTIONS

The SYSKA HD1605 offers versatile drying options for various hair types and styling needs.

5.1 Powering On and Off

- To turn on the hair dryer, slide the speed/heat settings switch to your desired setting.

- To turn off the hair dryer, slide the switch back to the "0" (off) position.

5.2 Speed and Heat Settings

The hair dryer features two speed/heat settings:

- **Setting 1 (Gentle Dry):** Provides a mild airflow and heat, ideal for delicate drying or for setting styles. This is the "Health Breeze Mode" which protects hair from excess heat.
- **Setting 2 (Fast Dry):** Delivers stronger airflow and higher heat for quick drying.



Figure 5: A woman demonstrating the use of the SYSKA HD1605 Hair Dryer for styling.

5.3 Overheating Protection

The SYSKA HD1605 is equipped with an overheating protection feature. If the appliance overheats, it will automatically shut off. If this occurs, unplug the hair dryer and allow it to cool down for a few minutes before attempting to use it again. Ensure the air inlet and outlet are not blocked.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your hair dryer.

- **Cleaning:** Ensure the hair dryer is unplugged and cool before cleaning. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Air Inlet Grille:** Regularly check and clean the air inlet grille at the back of the dryer to prevent lint and dust buildup, which can restrict airflow and cause overheating. Use a soft brush or vacuum cleaner to remove debris.
- **Storage:** After use, allow the hair dryer to cool down. The foldable handle allows for convenient storage. You can also use the rubberized hanging loop for easy storage in homes, salons, or hotels.



Figure 6: The SYSKA HD1605 Hair Dryer with its handle folded, demonstrating its compact design for storage and travel.

7. TROUBLESHOOTING

If you encounter issues with your SYSKA HD1605 Hair Dryer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in; Power outlet issue; Overheating protection activated.	Ensure the plug is securely in the outlet. Test the outlet with another appliance. Unplug and allow the dryer to cool for several minutes.
Airflow is weak or inconsistent.	Blocked air inlet grille.	Unplug the dryer and clean the air inlet grille to remove any lint or dust buildup.
Hair dryer suddenly stops during use.	Overheating protection activated.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Check for and clear any blockages in the air inlet/outlet.
Unusual noise or smell.	Internal issue; Debris inside.	Immediately unplug the dryer. Do not attempt to repair it yourself. Contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	HD1605
Power Source	Corded Electric
Wattage	1000 Watts
Input Voltage	220-240 Volts, 50Hz
Dimensions (LxWxH)	16.5 x 6.5 x 18.5 cm
Item Weight	336 g
Color	Soft White
Material	Acrylonitrile Butadiene Styrene
Manufacturer	SYSKA LED Lights Pvt. Ltd.

9. WARRANTY AND CUSTOMER SUPPORT

Your SYSKA HD1605 Hair Dryer comes with a **2-Year Warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt as proof of warranty.

For technical assistance, warranty claims, or any other inquiries, please contact SYSKA customer support:

- **Customer Service Contact:** 18001028787
- **Manufacturer Address:** SYSKA House, Office No. S-2, 2nd Floor, Sakore Nagar, New Airport Road, Near Anand Residency, Pune-411014, Maharashtra, India
- You may also visit the official SYSKA website for more information and support.

