

LEMEGA M4+

LEMEGA M4+ Hi-Fi Compact Stereo System User Manual

Model: M4+

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your LEMEGA M4+ Hi-Fi Compact Stereo System. The M4+ is an all-in-one music system featuring a CD player, DAB/DAB+ digital radio, FM radio, Internet radio, Spotify Connect, Bluetooth connectivity, and USB playback. Please read this manual thoroughly before using the device to ensure proper function and to maximize your listening experience.

SAFETY INFORMATION

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not use this product near water. Clean only with a dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Protect the power cord from being walked on or pinched. Only use attachments/accessories specified by the manufacturer. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

- 1 x LEMEGA M4+ Unit
- 1 x User Manual
- 1 x Multi-Country Power Supply
- 1 x Remote Control

PRODUCT OVERVIEW

The LEMEGA M4+ features a sleek design with intuitive controls and a clear display. Below are images illustrating

the main unit and its remote control.



Figure 1: Front view of the LEMEGA M4+ Hi-Fi system with the included remote control. The unit features a central display, CD slot, and control buttons.



M4+ All-In-One Music System



CD Player



DAB/DAB+ Radio



Internet Radio



Spotify



Bluetooth



FM Radio

Figure 2: Overview of the M4+'s key features, including CD Player, DAB/DAB+ Radio, Internet Radio, Spotify, Bluetooth, and FM Radio capabilities.

SETUP

1. Power Connection

1. Connect the multi-country power supply to the DC IN port on the rear of the M4+ unit.
2. Plug the power supply into a suitable wall outlet.

2. Antenna Connection

For optimal DAB/DAB+ and FM radio reception, ensure the telescopic antenna on the rear of the unit is fully extended.

3. Initial Power-On

Press the Power button on the unit or remote control to turn on the M4+. The display will illuminate, and the system will begin its initial setup process.

4. Network Connection (Wi-Fi)

To access Internet Radio and Spotify Connect, the M4+ requires a Wi-Fi connection.

1. Navigate to the 'System Settings' menu using the control knob or remote.
2. Select 'Network' and then 'Wi-Fi Setup'.
3. Choose 'Scan' to find available Wi-Fi networks.
4. Select your network from the list and enter the password using the on-screen keyboard.
5. Confirm the password to establish the connection.

OPERATING INSTRUCTIONS

General Operation

- **Power On/Off:** Press the Power button.
- **Volume Control:** Rotate the main control knob or use the Volume +/- buttons on the remote.
- **Mode Selection:** Press the 'Mode' button on the unit or remote to cycle through available sources (CD, DAB, FM, Internet Radio, Bluetooth, USB, AUX).
- **Navigation:** Use the control knob to scroll through menus and press to select. Use the arrow buttons on the remote for navigation.

CD Player Operation

The M4+ features a slot-in CD player compatible with CD, CD-R, and CD-RW discs.

1. Select 'CD' mode.
2. Gently insert a CD into the slot on the front of the unit with the label side facing up. The disc will be drawn in automatically.
3. Playback will begin automatically. Use the Play/Pause, Skip, and Stop buttons on the unit or remote to control playback.



SLOT-IN CD PLAYER & REMOTE CONTROL

Enjoy outstanding sound and breathe new life into your CD collection with full remote control and song display on the 2.4" colour display.

Figure 3: The M4+ unit displaying the slot-in CD player and the remote control for convenient operation.

DAB/DAB+ Radio Operation

Enjoy high-quality digital radio broadcasts.

1. Select 'DAB' mode. The system will automatically scan for available stations on first use.
2. Use the control knob or arrow buttons to browse the station list.
3. Press the control knob or 'Select' button to tune into a station.
4. To save a preset: Press and hold the 'Preset' button, select a preset number, and press 'Select'.



DAB/DAB+AND FM RADIO

Enjoy all of your favourite DAB / DAB+ and FM stations with superior quality sound.
Easy set-up and quick auto-scan to access your favorite stations quickly.

Figure 4: The M4+ display showing a DAB radio station, highlighting the digital radio capabilities.

FM Radio Operation

Access traditional analog radio broadcasts.

1. Select 'FM' mode.
2. Use the control knob or arrow buttons to manually tune or perform an auto-scan for stations.
3. To save a preset: Press and hold the 'Preset' button, select a preset number, and press 'Select'.

Internet Radio Operation

Stream over 30,000 local and international radio stations via Wi-Fi.

1. Ensure the M4+ is connected to a Wi-Fi network (see Setup section).
2. Select 'Internet Radio' mode.
3. Browse stations by location, genre, or search for specific stations.
4. Select a station to begin streaming.



SMART STREAMS


Stream and enjoy over 30,000 radios from local or worldwide by wifi streaming. The built-in spotify connect, you can enjoy over 20 millions music tracks from spotify connect freely.

Figure 5: The M4+ screen showing options for 'Smart Streams', including Internet Radio and Spotify Connect.

Bluetooth Operation

Wirelessly stream audio from your smartphone or tablet.

1. Select 'Bluetooth' mode on the M4+. The unit will enter pairing mode.
2. On your mobile device, enable Bluetooth and search for 'LEMEGA M4+'.
3. Select 'LEMEGA M4+' to pair. Once connected, audio from your device will play through the M4+.

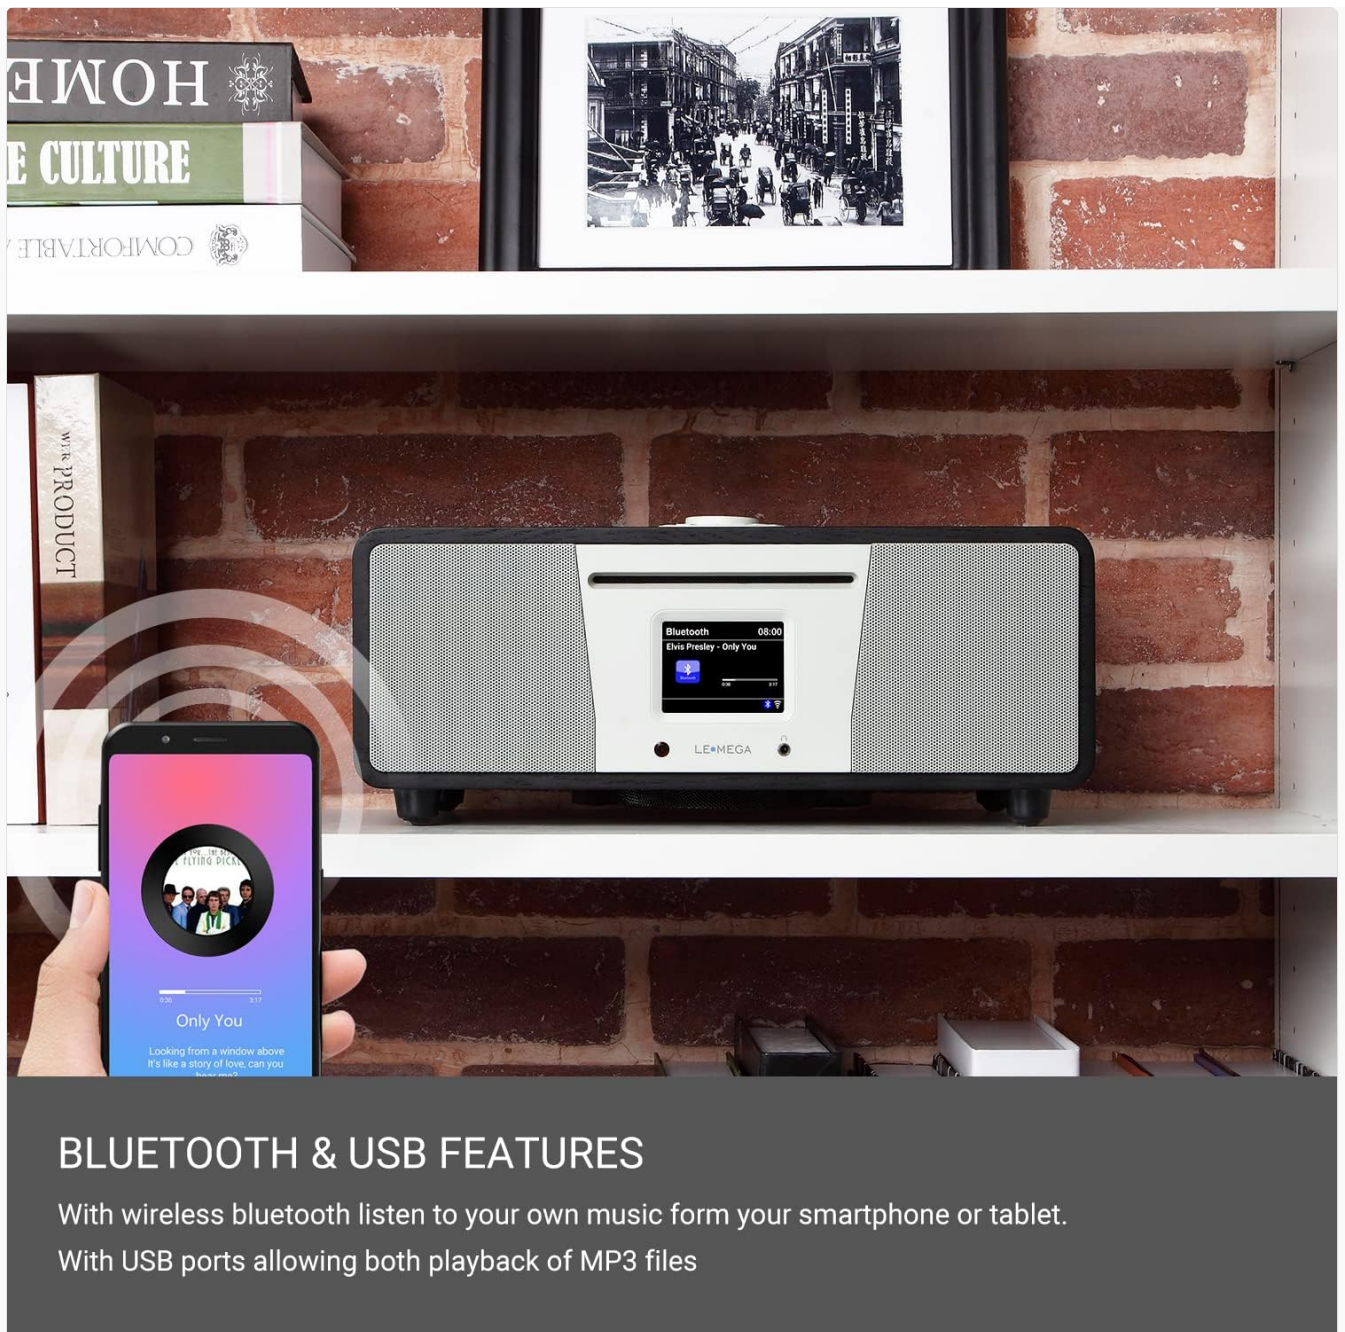

BLUETOOTH & USB FEATURES

With wireless bluetooth listen to your own music form your smartphone or tablet.

With USB ports allowing both playback of MP3 files

Figure 6: The M4+ unit wirelessly connected to a smartphone via Bluetooth, demonstrating audio streaming capability.

USB Playback

Play MP3 audio files from a USB flash drive.

1. Insert a USB flash drive into the USB port on the rear of the M4+.
2. Select 'USB' mode. The system will read the contents of the USB drive.
3. Navigate through folders and select an MP3 file to play.

Spotify Connect

Control your Spotify music directly from the Spotify app on your smartphone or tablet.

1. Ensure the M4+ and your mobile device are on the same Wi-Fi network.
2. Open the Spotify app on your device.
3. Play a song and tap the 'Devices Available' icon.
4. Select 'LEMEGA M4+' from the list to stream music through the system.

Alarm and Sleep Timer Functions

The M4+ includes dual alarms and a sleep timer.

1. **Setting Alarms:** Navigate to 'System Settings' > 'Alarm'. Configure two independent alarms with desired time, source (radio, CD, USB, buzzer), and volume.
2. **Sleep Timer:** Navigate to 'System Settings' > 'Sleep Timer'. Set a duration (e.g., 15, 30, 60 minutes) after which the unit will automatically turn off.



DUAL ALARMS CLOCK/SLEEP/SNOOZE

Dual independent alarms to schedule your alarms/snooze/sleep timer, Take your favorite radio stations or music as the alarm ringtone to wake you up.

Figure 7: The M4+ unit showing the time, indicating its dual alarm clock functionality.

System Settings

Access various system configurations:

- **Time/Date:** Set manually or synchronize via network.
- **Display:** Adjust brightness and backlight settings.
- **Equalizer:** Customize audio profiles.

- **Software Update:** Check for and install firmware updates.
- **Factory Reset:** Reset all settings to default.

MAINTENANCE

Cleaning

Wipe the unit with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. For the display, use a screen-specific cleaning solution if necessary, applied to a cloth, not directly to the screen.

Care for the Unit

Avoid placing the unit in direct sunlight, near heat sources, or in areas with high humidity or dust. Ensure adequate ventilation around the unit to prevent overheating. Handle CDs and USB drives carefully to prevent scratches or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely connected. Try a different power outlet.
No sound	Volume too low; Mute activated; Incorrect source selected	Increase volume. Check if mute is active. Select the correct audio source.
Cannot connect to Wi-Fi	Incorrect password; Router too far; Network issue	Verify Wi-Fi password. Move unit closer to router. Restart router.
Poor radio reception	Antenna not extended; Interference	Fully extend the telescopic antenna. Reposition the unit to reduce interference.
CD not playing	Disc inserted incorrectly; Disc scratched/dirty; Incompatible disc type	Ensure disc is inserted correctly (label up). Clean or replace disc. Use compatible CD, CD-R, CD-RW.
Bluetooth pairing fails	Device not in pairing mode; M4+ not in Bluetooth mode	Ensure both devices are in pairing mode. Check if M4+ is in Bluetooth source mode.

SPECIFICATIONS

- **Brand:** LEMEGA
- **Model Number:** M4+
- **Color:** Oak / Black
- **Connectivity Technology:** Bluetooth, USB, Wi-Fi

- **Supported Radio Bands:** FM, DAB, DAB+, Internet Radio
- **CD Compatibility:** CD, CD-R, CD-RW
- **USB Playback:** MP3 audio files
- **Power Source:** Mains Power (via included adapter)
- **Rechargeable Battery:** No
- **Item Weight:** 4.8 Kilograms
- **UPC:** 763230405990

WARRANTY INFORMATION

LEMEGA products are covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official LEMEGA website for detailed warranty terms and conditions specific to your region of purchase.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact LEMEGA customer support. Contact details can typically be found on the official LEMEGA website or in the documentation provided with your product.