

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Garmin](#) /

› [Garmin Approach G30 Handheld Golf GPS Instruction Manual](#)

Garmin G30

Garmin Approach G30 Handheld Golf GPS Instruction Manual

Model: G30 | Brand: Garmin

1. INTRODUCTION AND OVERVIEW

The Garmin Approach G30 is a sleek, compact handheld golf GPS designed to provide precise distance information and full-color course mapping. It features a 2.3-inch color touchscreen display, high-sensitivity GPS for quick satellite acquisition, and is preloaded with over 40,000 courses worldwide. The Touch Targeting feature allows for accurate distance measurement to any point on the course, while Green View enables precise pin placement for improved accuracy.



Figure 1: Garmin Approach G30 Handheld Golf GPS device.

2. WHAT'S IN THE Box

- Garmin Approach G30 device
- USB cable
- Belt clip
- Manual (this document)

3. SETUP

3.1 Charging the Device

Before first use, fully charge your Approach G30. Connect the small end of the USB cable to the device's charging port and the large end to a USB power adapter or a computer USB port. A full charge typically takes a few hours.

3.2 Powering On/Off

- To power on: Press and hold the power button until the screen turns on.

- To power off: Press and hold the power button until a prompt appears, then select 'Power Off'.

3.3 Initial Setup and Course Selection

Upon first power-on, the device will guide you through initial setup steps. Once complete, select 'Play Golf' to allow the high-sensitivity GPS to acquire satellites and locate nearby courses. You can then select your desired course from the list.

4. OPERATING THE DEVICE

4.1 Basic Navigation (Touchscreen)

The Approach G30 features a responsive touchscreen. Swipe left or right to navigate between different screens (e.g., course view, scorecard). Tap on screen elements to select options or input data.

4.2 Course View and Distances

The main screen displays key distances: front, middle, and back of the green. The device automatically recognizes the course and hole you are playing. The full-color course mapping provides a visual representation of the hole.

4.3 Green View and Pin Placement

Utilize the Green View feature to see the true shape of the green. You can touch and drag the pin icon on the screen to the day's actual pin location, which improves distance accuracy to the flag.

4.4 Hazards and Layup Distances

The device provides distances to various hazards and layup points on the course. These are typically displayed on a separate screen accessible by swiping or tapping an icon.

4.5 Shot Distance Tracking

To measure the distance of your shot, initiate the 'Measure Shot' function (usually found in the menu). Walk to your ball, and the device will display the distance from your previous location. Reset after each shot.

4.6 Scorecard

The integrated digital scorecard allows you to keep track of your score, putts, and other statistics for up to four players. The device offers auto score prompt and can sync with the Garmin Connect app for post-round analysis.

4.7 Course Updates

The Approach G30 supports auto course updates, ensuring you always have the latest course data for optimal accuracy.

4.8 Magnetic Mount

The device comes with a belt clip that can also be used to attach it to a golf cart frame via its magnetic properties, keeping your distances readily visible.

5. MAINTENANCE

5.1 Cleaning the Device

Regularly clean the device using a soft, lint-free cloth. Avoid harsh chemicals or abrasive materials that could damage the screen or casing.

5.2 Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device fully before long periods of inactivity. The Lithium Ion battery is included and required.

6. TROUBLESHOOTING

- **Device not powering on:** Ensure the device is fully charged. Try connecting it to a power source.
- **GPS not acquiring satellites:** Ensure you are in an open area with a clear view of the sky. Allow several minutes for initial acquisition.
- **Inaccurate distances:** Verify that the correct course is selected and the pin position is adjusted using Green View. Ensure the device has a clear GPS signal.
- **Touchscreen unresponsive:** Try restarting the device. Ensure the screen is clean and dry.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	2.1 x 0.8 x 3 inches
Item Weight	7 ounces
Item Model Number	010-01690-00
Batteries	1 Lithium Ion batteries required (included)
Screen Size	2.3 Inches
Human Interface Input	Touchscreen
Connectivity Technology	Bluetooth
Map Type	Golf Course
Battery Life	Up to 15 Hours
Color	Green

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Garmin website or contact Garmin customer service directly. Details can typically be found in the product packaging or on the Garmin support portal.