

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Simple Houseware](#) /

› [Simple Houseware Heavy Duty Clothing Garment Rack, Chrome \(Model BO-007-2\) Instruction Manual](#)

Simple Houseware BO-007-2

Simple Houseware Heavy Duty Clothing Garment Rack

MODEL: BO-007-2

Brand: Simple Houseware

Introduction

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your Simple Houseware Heavy Duty Clothing Garment Rack. Designed for durability and convenience, this chrome-finished rack features an extendable hanging rod, 360° swivel casters for mobility, and a collapsible design for easy storage. It is built to support up to 150 lbs, making it ideal for organizing various apparel and heavy garments.

Safety Information

- Ensure all parts are securely fastened before loading the rack.
- Do not exceed the maximum weight capacity of 150 lbs.
- Distribute weight evenly across the hanging rod to maintain stability.
- Use caution when moving the rack, especially when fully loaded, to prevent tipping.
- Keep small parts away from children during assembly.

Package Contents

Please verify that all components are present before beginning assembly:

- 2 x U-shaped Base Frames
- 2 x Vertical Support Poles
- 2 x Connecting Bars for Base
- 1 x Extendable Hanging Rod
- 1 x Bottom Wire Shelf
- 4 x 360° Swivel Casters (2 with brakes, 2 without)
- Hardware (screws, nuts, small wrench)

Setup & Assembly

Follow these steps to assemble your garment rack. No complex tools are required, as most parts click into place.

1. **Assemble the Base:** Connect the two U-shaped base frames using the connecting bars. Ensure the spring-loaded buttons click securely into place.
2. **Install Casters:** Attach the four 360° swivel casters to the bottom of the assembled base. Use the provided wrench to tighten the nuts. Ensure two casters with brakes are installed on one side for stability.
3. **Attach Vertical Support Poles:** Insert the two vertical support poles into the designated openings on the base frames. Press the spring-loaded buttons and slide them down until they lock into position.
4. **Place Bottom Wire Shelf:** Position the bottom wire shelf onto the lower horizontal bars of the base, ensuring it sits securely.
5. **Install Extendable Hanging Rod:** Insert the extendable hanging rod into the top of the vertical support poles. Press the spring-loaded buttons to adjust the height to your preference, then release to lock. The rod can also be extended horizontally by pulling out the ends.



The fully assembled Simple Houseware Heavy Duty Clothing Garment Rack, showcasing its sturdy chrome frame and

ample hanging space for various garments.



A detailed view of the rack's sturdy base and large 4-inch swivel casters, designed for smooth mobility.

Operating Instructions

- **Adjusting Height:** Press the spring-loaded buttons on the vertical poles and slide the hanging rod up or down to your desired height. Release the buttons to lock.
- **Extending Rod:** Pull the ends of the hanging rod outwards to extend its length from 42 inches to 67 inches, providing additional hanging space.
- **Moving the Rack:** Utilize the 360° swivel casters for easy movement. Engage the brakes on two casters to secure the rack in place.
- **Collapsing for Storage:** To collapse the rack, remove the hanging rod and bottom shelf. Press the spring-loaded buttons on the vertical poles and fold them down. The base frames can also be folded for compact storage.



The garment rack featuring its extendable hanging rod, illustrating how the width can be adjusted to accommodate more clothing.

Collapsible and Easy to Carry



Disclaimer: Travel Case Not Included

The collapsible design of the garment rack, shown folded down and fitting compactly into a suitcase for easy transport or storage.

Maintenance

- **Cleaning:** Wipe the chrome surface with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Inspection:** Periodically check all connections and fasteners to ensure they remain tight and secure.
- **Caster Care:** Keep casters free of lint and debris to ensure smooth rolling.


Troubleshooting

- **Rack is Unstable:** Ensure all connecting bars and vertical poles are fully locked into place. Distribute clothing weight evenly.
- **Casters Not Rolling Smoothly:** Check for hair or debris wrapped around the caster wheels. Clean as necessary. Ensure caster brakes are disengaged.
- **Hanging Rod Not Extending/Collapsing:** Verify that the spring-loaded buttons are fully depressed when attempting to adjust the rod. Check for any obstructions.

Specifications

Feature	Detail
---------	--------

Product Dimensions	18"D x 67.25"W x 62"H
Folded Dimensions	18.5" D x 23" W x 2.5" H
Material	Alloy Steel, Metal
Finish Type	Chrome
Load Capacity	150 Pounds
Special Features	Collapsible, Extendable Rods, Swivel Casters
Installation Type	Free Standing
Item Weight	8.75 pounds

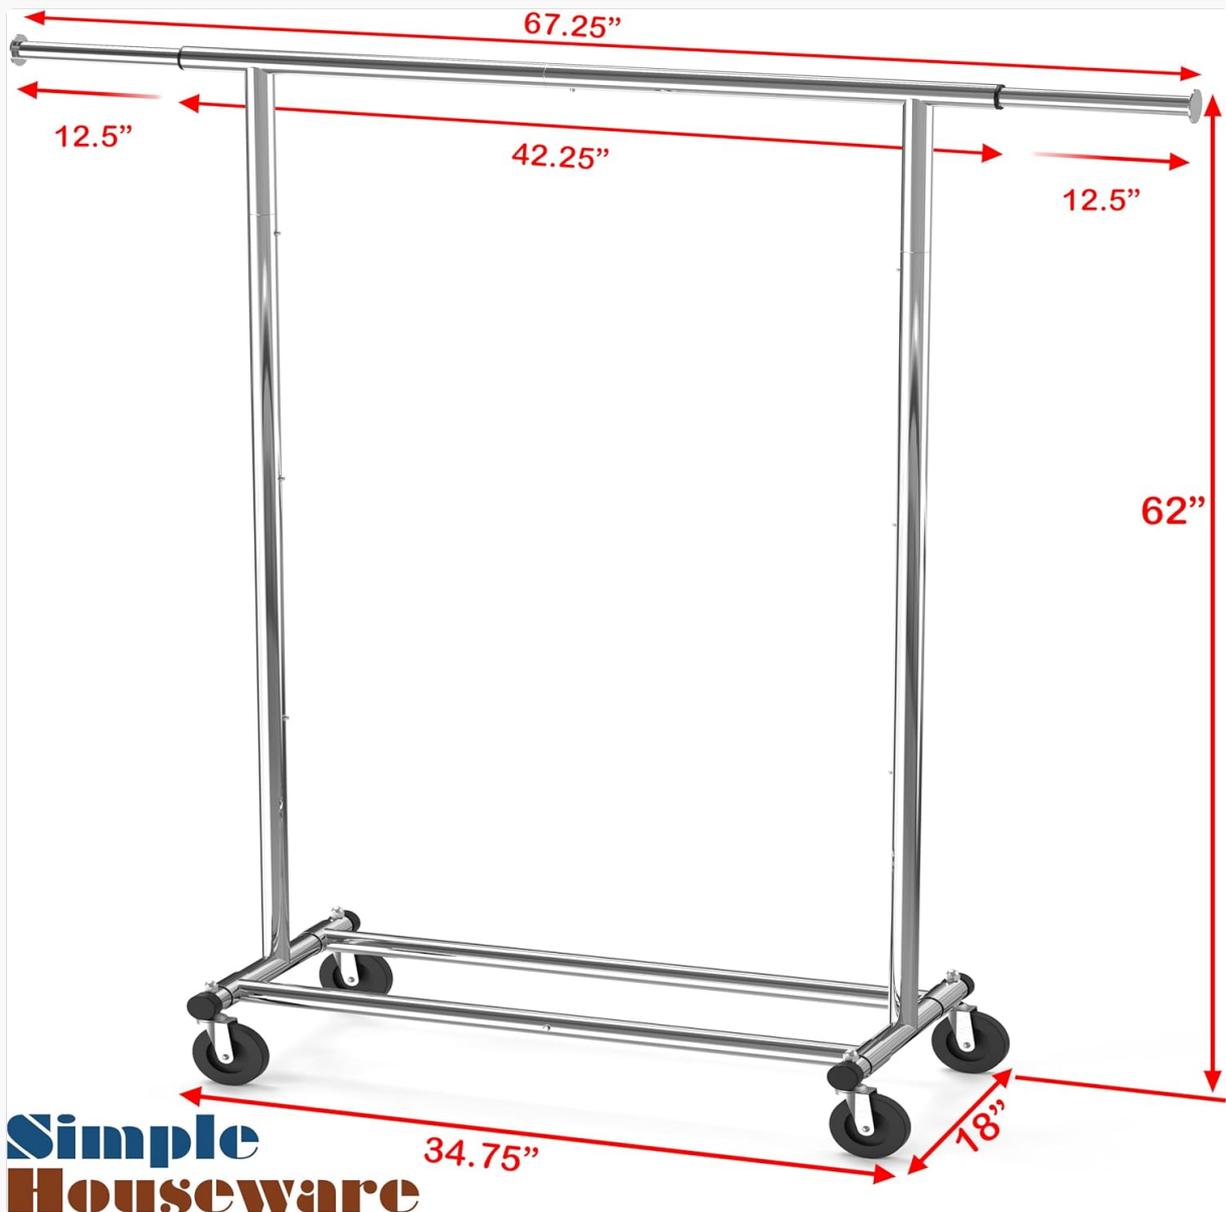

An illustration detailing the full dimensions of the assembled garment rack, including height, width, and depth.

Warranty and Support

For warranty information or customer support, please refer to the product packaging or contact Simple Houseware directly through their official channels.

