



[Manuals.plus](#) /

> [BISSELL](#) /

> BISSELL SpotClean Pro 1558E Portable Carpet Cleaner Instruction Manual

BISSELL 1558E

BISSELL SpotClean Pro 1558E Portable Carpet Cleaner Instruction Manual

Model: 1558E | Brand: BISSELL

INTRODUCTION

The BISSELL SpotClean Pro 1558E is a powerful, portable carpet and upholstery cleaner designed to effectively remove spills, tough stains, and pet messes from various soft surfaces. Its compact design and strong suction make it ideal for cleaning carpets, rugs, upholstery, stairs, and car interiors. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The BISSELL SpotClean Pro 1558E, a compact and powerful portable carpet cleaner.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

- Read all instructions before using your SpotClean Pro.
- Always connect to a properly grounded outlet.
- Unplug from outlet when not in use and before servicing.
- Do not immerse in water or liquid.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.

- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Use only BISSELL cleaning products intended for use with this appliance to prevent internal component damage.

WHAT'S IN THE BOX

Your BISSELL SpotClean Pro 1558E package should include the following components:

- BISSELL SpotClean Pro 1558E Main Unit
- Large Stain Tool
- Tough Stain Tool
- Sample Size Bottle of BISSELL Wash & Protect Professional Formula



Image: The SpotClean Pro unit shown with two bottles of cleaning solution, indicating included accessories or compatible products.



Specialized Cleaning Tools

Brushes for small and larger surfaces

Image: Two specialized cleaning tools for the SpotClean Pro, designed for different surface types and stain sizes.

SETUP

1. Filling the Clean Water Tank

1. Remove the clean water tank from the back of the unit by lifting it straight up.
2. Unscrew the black cap at the bottom of the clean water tank.
3. Fill the tank with warm tap water up to the "Water" fill line. Do not use boiling water.
4. Add BISSELL cleaning formula to the "Formula" fill line. For best results, use BISSELL Wash & Protect Professional formula.
5. Replace the black cap and tighten securely. Place the tank back onto the unit, ensuring it clicks into place.



Portable & Easy to Use

Compact design with large removable water tanks

Image: A person filling the clean water tank of the SpotClean Pro with water and cleaning solution, demonstrating its portable and easy-to-use design.



Image: A close-up of a person pouring cleaning solution into the clean water tank of the SpotClean Pro.

2. Attaching the Cleaning Tool

Select the appropriate cleaning tool (Large Stain Tool or Tough Stain Tool) for your cleaning task. Attach the tool firmly to the end of the hose until it clicks into place.

OPERATING INSTRUCTIONS

1. Pre-Treatment (Optional)

For heavily soiled areas or tough, set-in stains, pre-treating the area can improve cleaning results. Apply a small amount of BISSELL pre-treatment spray directly to the stain, allowing it to penetrate for a few minutes before cleaning.

2. Cleaning Process

1. Plug the machine into a grounded electrical outlet.
2. Turn on the power switch located on the front of the unit.
3. Place the cleaning tool directly onto the stained area.
4. Press the spray trigger to dispense cleaning solution onto the stain while slowly pulling the tool over the area.
5. Release the spray trigger and slowly pull the tool over the same area to suction up the dirty solution. Repeat this step until no more dirt can be removed.
6. For best results, make several passes over the area without pressing the spray trigger to ensure maximum moisture extraction.



Removes Stains Like a Pro

Portable carpet and upholstery washer

Image: A woman using the SpotClean Pro to remove a stain from a light-colored carpet, demonstrating its effectiveness in stain removal.



Cleans Anywhere, Anytime

From carpets & rugs to upholstery, car interiors & more

Image: The SpotClean Pro being used to clean a carpet, upholstery, and a car interior, highlighting its versatility for cleaning anywhere, anytime.

3. Cleaning Different Surfaces

- **Carpets and Rugs:** Use the large stain tool for broader areas and the tough stain tool for concentrated spots.
- **Upholstery:** Test a small, inconspicuous area for colorfastness before cleaning. Use the tough stain tool for precise cleaning.
- **Car Interiors:** Ideal for cleaning car mats, seats, and carpeted areas. Ensure proper ventilation.



Image: A close-up of the SpotClean Pro's tool cleaning a fabric cushion, showing its application on upholstery.



Image: A person cleaning a car mat outdoors with the SpotClean Pro, demonstrating its use for vehicle interiors.

MAINTENANCE

1. Emptying and Cleaning the Dirty Water Tank

After each use, or when the dirty water tank reaches the "FULL" line, it must be emptied and rinsed.

1. Turn off the unit and unplug it from the power outlet.
2. Remove the dirty water tank by lifting it straight up from the unit.
3. To empty, pull the tab on the tank opening and pour out the dirty water.
4. Rinse the tank thoroughly with clean water.
5. Replace the tank securely on the unit.



Image: A person emptying the dirty water tank of the SpotClean Pro into a sink, showing the ease of disposal of collected dirty water.

2. Cleaning Tools and Hose

- Rinse cleaning tools under running water to remove any debris.
- To clean the hose, fill the clean water tank with clean water (no formula). Hold the tool and hose over a sink and spray clean water through the hose until it runs clear.

3. Storage

Ensure all tanks are empty and clean before storing the unit. Wrap the power cord and hose neatly around the designated storage areas on the machine. Store the unit in a dry, protected area at room temperature.



Image: The SpotClean Pro unit stored neatly inside a cabinet, demonstrating its compact size for convenient storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced spray or no spray	Clean water tank empty or not seated correctly. Spray nozzle clogged.	Refill clean water tank and ensure it is seated firmly. Clean spray nozzle with a small brush or paperclip.
No suction	Dirty water tank full or not seated correctly. Hose or tool clogged. Tank lid not sealed properly.	Empty dirty water tank and ensure it is seated firmly. Clear any blockages from hose or tool. Ensure tank lid is securely closed.
Machine not turning on	Not plugged in. Power switch off. Blown fuse/tripped circuit breaker.	Ensure power cord is securely plugged into a working outlet. Turn power switch to ON position. Check/reset household fuse/circuit breaker.
Leaking	Clean water tank cap not tightened. Dirty water tank not seated correctly.	Ensure clean water tank cap is securely tightened. Re-seat dirty water tank firmly.

SPECIFICATIONS

Feature	Detail
Brand	BISSELL

Feature	Detail
Model Number	1558E
Color	Titanium Black
Dimensions (L x W x H)	25 x 36 x 35.6 cm (9.8 x 14.2 x 14 inches)
Capacity (Clean Water Tank)	2.8 Liters
Power	750 Watts
Voltage	240V
Material	Plastic
Sound Level	84 dB
Item Weight	6.01 Kilograms (13.25 lbs)
Power Source	Corded Electric

WARRANTY AND SUPPORT

BISSELL products are manufactured to the highest quality standards. For information regarding your product's warranty, please refer to the warranty card included in your product packaging or visit the official BISSELL website. For technical support, replacement parts, or to purchase additional cleaning formulas, please contact BISSELL customer service or visit their online support portal.

You can find more information and support at www.bissell.com.