

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Owlee](#) /
- › [Owlee Scroll Premium Portable Bluetooth Wireless Speaker User Manual](#)

Owlee 4330365423

Owlee Scroll Premium Portable Bluetooth Wireless Speaker

USER MANUAL

Introduction

The Owlee Scroll Premium Portable Bluetooth Wireless Speaker delivers a rich, immersive audio experience with its 20 Watts of power and 3D Sound Technology, providing 360-degree sound coverage. Designed with a luxurious vintage leather finish, this speaker offers up to 9 hours of playtime, making it ideal for portable use. It supports both NFC and standard Bluetooth pairing, includes voice prompts, and allows for easy call handling and access to voice assistants like Siri or Google Assistant.



Image: The Owlee Scroll speaker, wrapped in its distinctive brown leather, positioned next to its cylindrical packaging. The packaging features the "SCROLL" branding and a cutout showing a detail of the speaker.

What's in the Box

Upon unboxing your Owlee Scroll speaker, please ensure all the following components are present:

- Owlee Scroll Vintage Bluetooth Wireless Speaker
- Wall Charger / Power Supply
- USB Charging Cable
- 3.5" Auxiliary Cable
- User Manual (this document)
- One Year Limited Warranty information



Image: The Owlee Scroll speaker unwrapped, positioned next to its cylindrical packaging and the packaging lid, showcasing the product and its primary container.

Setup

Charging the Speaker

Before initial use, fully charge your Owlee Scroll speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to the wall charger/power supply. Plug the wall charger into a standard electrical outlet. The charging indicator light will illuminate during charging and turn off when fully charged.



Image: A close-up view of the Owlee Scroll speaker's side, showing the discreetly covered charging port, which is revealed by lifting a small leather flap.

Powering On/Off

- To power on: Press and hold the Power button () located on the control panel until you hear an audible prompt.
- To power off: Press and hold the Power button () again until the speaker powers down.

Bluetooth Pairing

The Owlee Scroll speaker supports both standard Bluetooth pairing and NFC (Near Field Communication) for quick connection.

• Standard Bluetooth Pairing:

1. Ensure the speaker is powered on and in pairing mode (indicated by a flashing Bluetooth indicator light).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Owlee Scroll" from the list of found devices.
4. Once connected, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.

- **NFC Pairing:**

1. Ensure NFC is enabled on your compatible device and the speaker is powered on.
2. Tap your NFC-enabled device gently against the NFC logo on the speaker.
3. Confirm the pairing request on your device. The speaker will provide an audible confirmation upon successful connection.



Image: The Owlee Scroll speaker positioned next to a smartphone, demonstrating its compatibility with mobile devices for wireless audio streaming.

Auxiliary Connection

For devices without Bluetooth, use the provided 3.5mm auxiliary cable. Connect one end to the AUX port on the speaker and the other end to the headphone jack or audio output of your device. The speaker will automatically switch to AUX mode when a cable is detected.

Operating the Speaker

Control Buttons Overview

The control buttons are located on the top surface of the speaker, integrated into the leather design. Familiarize yourself with their functions:



Image: A detailed close-up of the Owlee Scroll speaker's top surface, highlighting the embossed control buttons for power, call, volume, Bluetooth, and auxiliary input.

- **Power Button ():** Press and hold to power on/off.
- **Call Button (☎):** Press to answer/end calls. Press and hold to reject calls.
- **Volume Down (-):** Press to decrease volume.
- **Volume Up (+):** Press to increase volume.
- **Bluetooth Button (📶):** Press to enter Bluetooth pairing mode.
- **AUX Button (AUX):** Press to switch to auxiliary input mode.
- **NFC Logo (N):** Tap NFC-enabled devices here for quick pairing.

Audio Playback

Once connected via Bluetooth or AUX, audio from your device will play through the Owlee Scroll speaker. Use the volume buttons on the speaker or your connected device to adjust the sound level.

Hands-Free Calling

When connected via Bluetooth, the speaker can be used for hands-free calls. Incoming calls will pause audio playback. Press the Call button to answer, and press again to end the call. Press and hold to reject an incoming call.

Voice Assistant Access

The speaker supports access to your device's voice assistant (Siri or Google Assistant). Consult your device's manual for specific instructions on activating its voice assistant, which can then be controlled through the speaker's microphone.

Maintenance

Proper care will ensure the longevity and optimal performance of your Owlee Scroll speaker.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surfaces. For the leather, use a leather-safe cleaner if necessary, following the cleaner's instructions. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use for extended periods.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or high humidity.

Troubleshooting

If you encounter issues with your Owlee Scroll speaker, refer to the following common problems and solutions:

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to the power supply and try again.
No sound from the speaker.	Check the volume levels on both the speaker and your connected device. Ensure the speaker is correctly paired via Bluetooth or the AUX cable is fully inserted.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing Bluetooth light). Turn off and on Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device and try pairing again.
Poor audio quality.	Ensure there are no obstructions between the speaker and your Bluetooth device. Move away from sources of interference (e.g., Wi-Fi routers, other Bluetooth devices). Try a different audio source or file.
Speaker not responding.	Perform a soft reset by powering the speaker off and then on again. If the issue persists, allow the battery to fully drain and then recharge it.

Specifications

Detailed technical specifications for the Owlee Scroll Premium Portable Bluetooth Wireless Speaker:

Model Name	Scroll Premium
Model Number	4330365423
Dimensions (L x W x H)	20.57 x 7.87 x 8.89 cm (8.1 x 3.1 x 3.5 inches)
Item Weight	771 g (1.7 lbs)
Output Wattage	20 Watts
Speaker Type	3D Sound

Surround Sound Channel Configuration	3.1
Connectivity Technology	Bluetooth, USB, NFC
Wireless Type	Bluetooth
Battery Life	Up to 9 Hours
Battery Cell Composition	Lithium Ion
Power Source Type	Battery Powered
Compatible Devices	Laptop, Tablet, Smartphone
Controller Type	Google Assistant (via connected device)
Material Type	Composite, Leather
Color	Brown
Is Waterproof	No

Warranty Information

The Owlee Scroll Premium Portable Bluetooth Wireless Speaker comes with a **One Year Limited Warranty**. This warranty covers manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty information included in your product packaging.

Customer Support

If you require further assistance or have questions not covered in this manual, please contact Owlee customer support. Visit the official Owlee website for contact details and additional resources.