



Manuals.plus /

› SYLVANIA /

› Sylvania 15.6-Inch Swivel Screen Portable DVD Player User Manual

SYLVANIA SDVD1566

Sylvania 15.6-Inch Swivel Screen Portable DVD Player

Model: SDVD1566

Brand: SYLVANIA

PRODUCT OVERVIEW

The Sylvania 15.6-Inch Swivel Screen Portable DVD Player is designed for on-the-go entertainment. Featuring a large, rotatable screen and versatile media playback options, it allows you to enjoy your favorite movies and media files anywhere.

Key Features:

- TFT/LED digital screen
- 1366 x 768 resolution
- 270° screen rotation for flexible viewing angles
- Supports DVD, CD, EVD, VCD, CD-RW, and DVD-R disc playback
- Integrated USB and SD Card inputs for expanded media options

WHAT'S IN THE BOX

Upon unboxing your Sylvania Portable DVD Player, you should find the following items:

- Sylvania 15.6-Inch Portable DVD Player
- AC Power Adapter
- Remote Control
- User Manual (this document)
- Earbuds
- Carrying Case

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the portable DVD player. Connect the provided AC power adapter to the DC IN port on the side of the player and plug the other end into a standard wall outlet. The charging indicator

light will illuminate.



Image: The Sylvania portable DVD player shown with its power adapter connected and plugged into a wall outlet, indicating the charging setup.

2. Inserting a Disc

Gently open the disc compartment by pressing the EJECT button or sliding the latch. Place a DVD or CD disc onto the spindle with the label side facing up. Gently press down on the center of the disc until it clicks into place. Close the disc compartment firmly.



Image: The portable DVD player with its disc tray open, revealing the disc spindle, ready for a DVD or CD to be inserted.

3. Connecting External Devices (Optional)

The player features USB and SD card slots for playing media files directly. Insert your USB flash drive into the USB port or your SD card into the SD card slot. Ensure the media files are in a compatible format (e.g., AVI, MP3).

For private listening, connect the included earbuds or your own headphones to the headphone jack.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the device, slide the POWER switch to the ON position. To power off, slide the switch to the OFF position.

2. Screen Adjustment

The 15.6-inch screen can swivel 270 degrees and fold flat. Adjust the screen to your preferred viewing angle for optimal comfort.



Image: The Sylvania portable DVD player with its screen swiveled to an upright position, displaying a vibrant nature scene, highlighting its adjustable screen.

3. Basic Playback Controls

Use the control buttons located on the player's base or the remote control to manage playback:

- **PLAY/PAUSE:** Press to start or pause playback.
- **STOP:** Press to stop playback.
- **PREV/NEXT:** Press to skip to the previous or next chapter/track.
- **VOL+/VOL-:** Adjust the volume level.
- **MENU:** Access the disc menu.
- **SETUP:** Enter the system setup menu.
- **MODE:** Switch between DVD, USB, and SD card input modes.



Image: A detailed view of the control panel on the Sylvania portable DVD player, showing buttons for playback, volume, menu, and mode selection.

4. Using the Remote Control

The included remote control provides full functionality from a distance. Ensure there are no obstructions between the remote and the player's infrared sensor.

MAINTENANCE AND CARE

- Keep the player clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Handle discs by their edges to prevent fingerprints and scratches.
- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, fully charge the battery and then store it. Recharge periodically to maintain battery health.

TROUBLESHOOTING

No Power / Player Not Turning On

- Ensure the AC power adapter is securely connected to both the player and a working power outlet.
- Check if the battery is fully charged. If not, charge the unit for several hours.
- Verify the POWER switch is in the ON position.

No Picture / Black Screen

- Check if a disc is properly inserted and the disc compartment is closed.
- Ensure the correct input mode (DVD, USB, SD) is selected using the MODE button.

- Clean the disc if it appears dirty or scratched.

No Sound

- Increase the volume using the VOL+ button on the player or remote.
- Check if headphones are plugged in and if their volume is adjusted.
- Ensure the MUTE function is not activated.

Disc Not Reading / Skipping

- Ensure the disc is clean and free of scratches or smudges.
- Try a different disc to confirm if the issue is with the player or the disc.
- Verify the disc format is supported (DVD, CD, EVD, VCD, CD-RW, DVD-R).

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	SYLVANIA
Model Number	SDVD1566
Screen Size	15.6 Inches
Display Type	TFT/LED Digital Screen
Resolution	1366 x 768
Screen Rotation	270° Swivel
Supported Media Types	DVD, CD, EVD, VCD, CD-RW, DVD-R
Inputs	USB, SD Card Slot
Battery Type	Lithium Polymer (included)
Item Weight	2.5 pounds
Product Dimensions	15.16 x 9.76 x 1.89 inches
Color	Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official SYLVANIA website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Important Note: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.