

Keurig K-Mini K15

Keurig K-Mini K15 Single Serve Coffee Maker Instruction Manual

Model: K-Mini K15

INTRODUCTION

Welcome to the Keurig K-Mini K15 Single Serve Coffee Maker. This compact brewer is designed for convenience, allowing you to enjoy a fresh cup of coffee, tea, hot cocoa, or iced beverage in minutes. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your brewer.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or injury to persons. Read all instructions before using your K-Mini K15 brewer.

- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Keurig Customer Service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only water in this appliance. Do not use any other liquids.

- Do not open the brewer handle during the brewing process.

SETUP

1. Unpacking

Carefully remove your brewer from its box. Remove all packaging materials, including the tape and cardboard insert from the K-Cup pod holder. Place the brewer upright on a flat, stable surface.



Image: The Keurig K-Mini K15 Single Serve Coffee Maker in black, showcasing its compact design and a brewed cup of coffee.

2. Initial Rinse

Before brewing your first cup, perform an initial rinse brew. This cleans the brewer and prepares it for use.

1. Plug the brewer into a grounded outlet.
2. Lift the water reservoir lid and pour fresh water into the reservoir. Do not exceed the MAX fill line.

3. Place a large mug (at least 10 oz) on the drip tray plate.
4. Lift and lower the brewer handle to close the K-Cup pod holder. Do not insert a K-Cup pod.
5. Press the BREW button. The button will illuminate, and the brewer will begin the rinse cycle.
6. Once the brew is complete, discard the hot water. Your brewer is now ready for use.

K·Mini™

SINGLE SERVE COFFEE MAKER



**ONE CUP
RESERVOIR**
add water
each time



Image: A side view of the Keurig K-Mini K15, showing water being poured into its single-cup reservoir, emphasizing the 'add water each time' feature.

OPERATING INSTRUCTIONS

1. Add Water

Lift the water reservoir lid and pour fresh water into the reservoir. The K-Mini K15 is a single-serve brewer, meaning you add fresh water for each brew. Fill between the MIN and MAX fill lines, corresponding to your desired brew size (6-10 oz).

2. Insert K-Cup Pod

Lift the brewer handle. Place a K-Cup pod into the K-Cup pod holder. Lower the handle completely to close the lid. Do not remove the foil lid from the K-Cup pod.

3. Place Mug & Brew

Place a mug on the drip tray. Press the BREW button. The button will illuminate, and the brewer will begin heating and then dispensing your beverage. The brew process typically takes less than 2 minutes.

K·Mini™

SINGLE SERVE COFFEE MAKER

HOW THE K-CUP® POD WORKS

Hot water saturates the freshly ground beans and **flows through the paper filter**

Freshly ground coffee **from the leading coffee brands** fills our K-Cup® pods

Gentle pressure extracts every ounce of **rich, full-flavored coffee**



Image: An illustration demonstrating how a K-Cup pod works, showing hot water saturating ground coffee and flowing through a filter into a mug.

4. Enjoy

Once brewing is complete, the BREW button light will turn off. Carefully remove your mug and enjoy your beverage. Lift the handle, remove and discard the used K-Cup pod.

Removable Drip Tray

The drip tray can be removed to accommodate taller travel mugs, up to 5.2 inches in height.

K·Mini™

SINGLE SERVE COFFEE MAKER



REMOVABLE DRIP TRAY

Fits a 5.2" travel mug



Image: The Keurig K-Mini K15 with its removable drip tray detached, illustrating how it fits a 5.2-inch travel mug.

MAINTENANCE

Cleaning the Exterior

Regularly wipe the exterior of your brewer with a damp, non-abrasive cloth. Do not immerse the brewer in water or other liquids.

Cleaning the Drip Tray

The drip tray can accumulate drips and spills. Remove the drip tray and its cover, empty any liquid, and clean with warm, soapy water. Rinse thoroughly and replace.

Descaling Your Brewer

Mineral deposits can build up in your coffee maker over time, affecting performance. Descale your brewer every 3-6 months, or more frequently if you have hard water. Use a Keurig descaling solution or a vinegar solution (50% white vinegar, 50% water).

1. Turn off and unplug the brewer.
2. Empty the water reservoir.
3. Pour the descaling solution into the reservoir.

4. Place a large mug on the drip tray.
5. Plug in and turn on the brewer. Perform a rinse brew without a K-Cup pod.
6. Repeat the rinse brew process until the reservoir is empty.
7. Rinse the reservoir thoroughly and fill with fresh water. Perform several fresh water rinse brews to remove any residual descaling solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Brewer not turning on	Not plugged in; power outage; circuit breaker tripped.	Ensure brewer is securely plugged into a grounded outlet. Check power supply.
No water dispensing	Water reservoir empty; air in lines; brewer needs descaling.	Fill reservoir with water. Perform a rinse brew. Descale the brewer.
Weak coffee	K-Cup pod not suitable for desired strength; brewer needs descaling.	Use a stronger K-Cup pod. Descale the brewer.
Coffee grounds in cup	K-Cup pod punctured incorrectly; exit needle clogged.	Ensure K-Cup pod is seated correctly. Clean the exit needle (refer to Keurig support for instructions).

For further assistance, please visit the official Keurig support website or contact customer service.

SPECIFICATIONS

- **Brand:** Keurig
- **Model Name:** K-Mini
- **Model Number:** K10
- **Capacity:** 1 cup (single serve)
- **Color:** Black
- **Wattage:** 1425 watts
- **Coffee Input Type:** Pod
- **Compatible Coffee Pods:** K-Cup
- **Filter Type:** Reusable (with compatible accessory, not included)
- **Material:** Plastic, Stainless Steel
- **Item Weight:** Approximately 0.01 Ounces (shipping weight may vary)
- **Dimensions:** 11.1" High (12.8" High when open), 7.5" Wide, 10.5" Deep

K·Mini™

SINGLE SERVE COFFEE MAKER



PRODUCT DIMENSIONS

11.1" High
(12.8" High when open)

7.5" Wide

10.5" Deep

Weighs 6.6lbs



Image: A front view of the Keurig K-Mini K15 with dimensions labeled: 11.1" High (12.8" when open), 7.5" Wide, 10.5" Deep, and weighing 6.6 lbs.

WARRANTY AND SUPPORT

Keurig brewers are manufactured to the highest standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Keurig website. If you experience any issues with your brewer, please contact Keurig Customer Service for support. Have your brewer's serial number ready when contacting support.

Online Support: www.keurig.com/support