

AUNA RM1-Epoque1908DAB WH

auna Belle Epoque 1908 All-in-One Retro Stereo System User Manual

Model: RM1-Epoque1908DAB WH

INTRODUCTION

The auna Belle Epoque 1908 is a versatile retro stereo system designed to bring your music collection to life. This all-in-one device combines a turntable, CD player, cassette player, DAB+/FM radio, USB playback, and Bluetooth connectivity, all housed in a stylish vintage design. This manual provides detailed instructions for setting up, operating, and maintaining your system to ensure optimal performance and longevity.

WHAT'S IN THE BOX

- Main Unit (auna Belle Epoque 1908 Stereo System)
- Instruction Manual (in English, French, German)
- Cable Antenna
- Remote Control (with battery)
- 45 RPM Adapter (for turntable)

SETUP

1. **Unpacking:** Carefully remove the stereo system and all accessories from the packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the unit on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the power cable to the AC IN port on the back of the unit and then plug it into a standard wall outlet (AC 100-240 V, 50/60 Hz).
4. **Antenna Connection:** Connect the cable antenna to the FM antenna input on the back of the unit for optimal radio reception. Extend the antenna fully for best results.
5. **Remote Control:** Insert the provided CR2025 battery into the remote control, ensuring correct polarity.



Figure 1: Front view of the auna Belle Epoque 1908 retro stereo system, showcasing its white finish and central control panel.

OPERATING INSTRUCTIONS

Use the **POWER** button to turn the unit on or off. The **FUNCTION** button or the remote control allows you to switch between different playback modes (Turntable, CD, Cassette, Radio, USB, Bluetooth).

1. Turntable Operation

1. Lift the turntable lid.
2. Place a vinyl record on the platter. If playing a 45 RPM single, use the included 45 RPM adapter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch.
4. Gently release the tone arm from its rest and position the stylus over the desired track on the record.
5. Lower the tone arm slowly onto the record. Playback will begin automatically.
6. The automatic stop function will halt the platter rotation when the record finishes playing, protecting the stylus and record. To stop playback manually, lift the tone arm and return it to its rest.



Figure 2: The turntable section with the lid open, showing a vinyl record on the platter and the tone arm in position.

2. CD Player Operation

1. Press the **FUNCTION** button to select CD mode.
2. Press the **EJECT** button to open the CD tray.
3. Place a CD (CD, CD-R, CD-RW, MP3-CD) with the label side facing up into the tray.
4. Press the **EJECT** button again to close the tray. The system will read the disc and begin playback.
5. Use the **SKIP** buttons (◀◀ / ▶▶) to navigate between tracks. Use the **PLAY/PAUSE** button (▶ / ■ ■) to pause or resume playback.



Figure 3: The CD player with the disc tray extended, ready for disc insertion or removal.

3. Cassette Player Operation

1. Press the **FUNCTION** button to select TAPE mode.
2. Insert a C60 or C90 cassette into the cassette deck.
3. Use the control buttons (Play, Stop, Fast Forward, Rewind) on the unit to operate the cassette player.

4. Radio Operation (DAB+/FM)

1. Press the **FUNCTION** button to select DAB or FM radio mode.
2. In DAB mode, the system will automatically scan for available stations. In FM mode, use the **SCAN** button to auto-scan or manually tune using the control knob.
3. Use the **PRESET** button to save your favorite stations. The unit supports up to 20 presets.
4. The RDS (Radio Data System) function provides additional information like station name and program type on the display.

5. USB Playback and Recording

1. Insert a USB flash drive into the USB port on the front of the unit.

2. Press the **FUNCTION** button to select USB mode. The system will automatically detect and play compatible audio files (MP3).
3. **Recording Vinyl to USB:** While playing a vinyl record, press the **RECORD** button on the unit or remote control. The system will convert the audio to MP3 and save it to the connected USB drive. Press **RECORD** again to stop recording.



Figure 4: The USB port located on the front panel, shown with a USB flash drive connected for playback or recording.

6. Bluetooth Connectivity

1. Press the **FUNCTION** button to select Bluetooth (BT) mode. The display will show "BT" or a similar indicator, and the unit will enter pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "auna Belle Epoque 1908" from the list of devices to pair.
4. Once paired, you can stream audio wirelessly from your device to the stereo system.

7. Remote Control

The included remote control provides convenient access to all functions. Ensure the battery is correctly inserted. Point the remote control directly at the unit's sensor.



Figure 5: The remote control for the stereo system, featuring buttons for volume, track skip, mode selection, record, and equalizer.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Stylus Care:** Handle the turntable stylus with care. Clean it periodically with a soft brush designed for stylus cleaning. Replace the stylus when signs of wear appear to prevent damage to your records.

- **Dust Cover:** Keep the turntable lid closed when not in use to protect the platter and stylus from dust.
- **Disc/Cassette Care:** Keep CDs and cassettes clean and free of scratches or dust. Store them in their cases when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected; Check power outlet with another device
No sound	Volume too low; Incorrect function selected; Mute activated	Increase volume; Select correct function (CD, Phono, Radio, etc.); Deactivate mute function
Turntable not spinning or playing	Speed setting incorrect; Tone arm not lowered; Auto-stop engaged prematurely	Check speed selector (33/45/78 RPM); Ensure tone arm is properly lowered onto the record; Check auto-stop switch if applicable
CD not playing	Disc dirty or scratched; Disc inserted incorrectly; Incompatible disc format	Clean disc; Insert disc with label side up; Ensure disc is CD, CD-R, CD-RW, or MP3-CD
Poor radio reception	Antenna not extended or positioned correctly; Weak signal	Extend and adjust the cable antenna; Try repositioning the unit; Perform a new station scan
Bluetooth pairing issues	Unit not in pairing mode; Device too far; Bluetooth disabled on source device	Ensure unit is in BT mode and searching; Move device closer; Enable Bluetooth on your source device

SPECIFICATIONS

Brand	AUNA
Model Number	RM1-Epoque1908DAB WH
Dimensions (W x H x D)	50 x 22 x 33 cm
Weight	8 kg
Power Supply	AC 100-240 V, 50/60 Hz
Power Consumption	80 Watts
Turntable Speeds	33 1/3, 45, 78 RPM
Supported Disc Types	CD, CD-R, CD-RW, MP3-CD
Supported Cassette Types	C60, C90
Supported Audio Formats (USB)	MP3
Radio Tuner	DAB+, FM (with RDS)

Bluetooth	Yes
Interfaces	USB port, Bluetooth
Special Features	Easy to use, Stereo speakers, Volume control, Menu control, LCD display, Multi-language menu, Preset equalizer, Repeat function, Random playback, Programmable playback, Auto start/pause, Telescopic antenna

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official AUNA website. Keep your proof of purchase for any warranty claims.