

manuals.plus /

› [Toshiba](#) /

› [Toshiba 32-inch HD LED TV Model 32L2600 User Manual](#)

Toshiba 32L2600

Toshiba 32-inch HD LED TV Model 32L2600 User Manual

Model: 32L2600

1. INTRODUCTION

Thank you for purchasing the Toshiba 32-inch HD LED TV, Model 32L2600. This manual provides essential information for the safe and efficient operation of your television. Please read it thoroughly before using the product and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the TV on a stable, level surface to prevent it from falling.
- Unplug the TV during lightning storms or when unused for long periods.
- Keep small parts and batteries out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are included in the package:

- Toshiba 32-inch HD LED TV (Model 32L2600)
- Remote Control
- TV Stand (Tabletop type)
- Power Cord
- User Manual (this document)



Image: The Toshiba 32-inch HD LED TV, Model 32L2600, shown with its included remote control and tabletop stand. The TV is black with a slim bezel.

4. SETUP

4.1 Unpacking

Carefully remove the TV and all accessories from the packaging. Retain the packaging materials for future transport or if servicing is required.

4.2 Attaching the Stand

Place the TV screen-down on a soft, flat surface. Align the stand with the mounting holes on the bottom of the TV. Secure the stand using the provided screws. Ensure the stand is firmly attached before placing the TV upright.

4.3 Connecting Power

Connect the power cord to the TV's power input, then plug the other end into a wall outlet. The TV will enter standby mode.

4.4 Initial Setup

Upon first power-on, the TV will guide you through the initial setup process, including language selection, country, and channel scanning. Follow the on-screen instructions using the remote control.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the **POWER** button on the remote control or on the TV to turn the TV on or off (standby mode).

5.2 Using the Remote Control

The remote control allows you to access all TV functions. Insert two AAA batteries (not included) into the remote control, ensuring correct polarity.

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input source (HDMI, USB, TV).
- **MENU:** Opens the main menu.
- **ARROW BUTTONS:** Navigate through menus and options.
- **OK:** Confirms selections.
- **VOL +/-:** Adjusts volume.
- **CH +/-:** Changes channels.

5.3 Basic Menu Navigation

Press the **MENU** button to access settings. Use the arrow buttons to navigate and **OK** to select. Common settings include Picture, Sound, Channel, and System settings.

6. CONNECTIVITY

Your Toshiba TV offers various ports for connecting external devices.

- **HDMI Ports (x2):** Connect high-definition devices such as Blu-ray players, gaming consoles, or set-top boxes. Use an HDMI cable for both video and audio transmission.
- **USB Port (x1):** Connect USB storage devices to play multimedia files (photos, music, videos).
- **Antenna/Cable Input:** Connect an antenna or cable TV signal for broadcast channels.
- **Digital Audio Output:** For connecting to external sound systems.

To switch between input sources, press the **SOURCE** button on your remote control and select the desired input.

7. MAINTENANCE

7.1 Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray cleaner directly onto the screen.

7.2 Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

7.3 Ventilation

Ensure that the ventilation openings on the back of the TV are not blocked to prevent overheating.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not working.	Check power cord connection; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; loose video cable.	Press SOURCE to select correct input; check video cable connections.
No sound, but picture is present	Volume muted or too low; incorrect audio output settings.	Increase volume; check mute status; verify audio settings in menu.
Remote control not working	Batteries depleted or incorrectly inserted; obstruction.	Replace batteries; ensure correct polarity; remove obstructions between remote and TV.

If the problem persists after trying these solutions, please contact Toshiba customer support.

9. SPECIFICATIONS

Brand	Toshiba
Model Number	32L2600
Screen Size	32 inches
Display Technology	LED
Resolution	1366 x 768 (HD)
Audio Power	10W x 2
HDMI Ports	2
USB Ports	1
Power Consumption	65W
Color	Black
Mounting Type	Tabletop Stand
Product Dimensions (W x H x D)	73.66 x 53.34 x 43.18 cm (with stand)
Weight	2.62 kg
Included Components	Television, Stand
Connectivity Technology	HDMI, USB
Audio Output Mode	Digital
Audio Input	HDMI

10. WARRANTY AND SUPPORT

Specific warranty information for the Toshiba 32-inch HD LED TV Model 32L2600 is not provided in this document. For

detailed warranty terms, conditions, and customer support, please refer to the warranty card included with your product or visit the official Toshiba website for your region.

You may also contact Toshiba customer service for assistance with product registration, technical support, or service inquiries.

