

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Barbie](#) /
- › [Barbie Dream Horse & Doll FDB39 Instruction Manual](#)

Barbie FDB39

Barbie Dream Horse & Doll FDB39 Instruction Manual

Model: FDB39 | Brand: Barbie

INTRODUCTION

The Barbie Dream Horse offers an interactive play experience with over 30 realistic reactions to touch and sound. This manual provides detailed instructions for assembly, operation, and care to ensure optimal enjoyment of your Barbie Dream Horse and Doll set.



Image: Barbie Dream Horse and Doll set shown in its retail packaging.

PACKAGE CONTENTS

Your Barbie Dream Horse & Doll set includes the following items:

- Barbie Doll (wearing riding tunic, molded pants, removable boots, and helmet)
- Interactive Dream Horse (with pink saddle and reins)
- Bunch of Carrots (for feeding)
- Hair Brush (for grooming)

SETUP

1. Battery Installation

The Dream Horse requires 3 AA batteries for operation. Locate the battery compartment on the underside of the horse, open it, insert the batteries with correct polarity, and close the compartment securely.

2. Doll Placement

To place Barbie doll on the horse, use the included waist clip on the saddle. Secure Barbie doll firmly to ensure she stays in place during play.



Image: Barbie doll positioned on the Dream Horse, secured by the waist clip.

3. Power On

Locate the power switch on the horse's belly and slide it to the "ON" position to activate the interactive features.

OPERATING INSTRUCTIONS

Interactive Reactions

The Dream Horse responds to both touch and sound with over 30 unique reactions:

- **Walking and Turning:** Tap the horse's side or back to make it walk forward or turn 360 degrees.
- **Neighing:** The horse will neigh in response to certain sounds or touches.

- **Feeding and Nuzzling:** Bring the bunch of carrots to the horse's mouth, and it will react as if eating and nuzzling in response to your touch.
- **Answering Questions:** Ask the Dream Horse a question, and it may nod "yes" or "no" in response.



Image: A child feeding the interactive Dream Horse with carrots.



Image: A child interacting with the Dream Horse, demonstrating sound activation.



Image: A child touching the side of the Dream Horse to activate movement.

Music and Dance Modes

Press the button located on the saddle to activate music and dance features. The Dream Horse can play three different songs and perform three unique dances.

Official Product Video

Your browser does not support the video tag.

Video: An overview of the Barbie Dream Horse and Doll, demonstrating its interactive features including walking, turning, neighing, feeding, and dancing.

MAINTENANCE

Grooming

Use the included brush to groom the Dream Horse's super-long, curly mane and tail. Regular brushing helps maintain the horse's appearance.



Image: A child brushing the mane of the Barbie Dream Horse.

Cleaning

Wipe the horse and doll with a damp cloth to clean. Do not immerse in water.

TROUBLESHOOTING

Horse Not Responding / Stuck in Demo Mode

If the Dream Horse is not responding to commands or appears stuck in a demo mode, check the battery compartment. Sometimes, a small plastic tab or piece of packaging material may be present, preventing full functionality. Remove any such obstructions and ensure batteries are correctly installed.

SPECIFICATIONS

Feature	Detail
Product Dimensions	6.5 x 20 x 12.75 inches
Item Weight	3 pounds
Model Number	FDB39
Manufacturer	Mattel
Recommended Age	36 months - 7 years
Batteries Required	3 AA batteries (not included)
Release Date	July 1, 2017

WARRANTY AND SUPPORT

For any questions regarding your Barbie Dream Horse & Doll, please refer to the manufacturer's official website or contact their customer support. Specific warranty details may be provided with your product packaging.

Visit the [Barbie Store](#) for more information.