

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Tupperware](#) /
- › [Tupperware Microwave Rice Cooker Model 67zu Instruction Manual](#)

Tupperware 67zu

Tupperware Microwave Rice Cooker Model 67zu Instruction Manual

INTRODUCTION

Welcome to your new Tupperware Microwave Rice Cooker. This manual provides essential information for the safe and effective use of your appliance. Please read these instructions carefully before first use and retain for future reference.

PRODUCT OVERVIEW

Components

- Outer Bowl (Base)
- Insert (for steam circulation)
- Cover (Lid with steam vents and handles)

Product Image



Image: The Tupperware Microwave Rice Cooker, featuring its purple base, insert, and vented lid with integrated handles.

SETUP

1. Before first use, wash all components (outer bowl, insert, and cover) with warm soapy water. Rinse thoroughly and dry.
2. Ensure the microwave oven is clean and free from obstructions.

OPERATING INSTRUCTIONS

Cooking Rice

The Tupperware Microwave Rice Cooker is designed to cook up to four cups of rice.

1. Measure the desired amount of rice and rinse thoroughly under cold water until the water runs clear.
2. Place the rinsed rice into the outer bowl.
3. Add the appropriate amount of water according to the rice type and desired consistency. A general guideline is 1 part rice to 2 parts water, but refer to specific rice packaging for best results.
4. Place the insert into the outer bowl, ensuring it sits correctly above the rice and water.
5. Secure the cover onto the outer bowl by aligning the handles and pressing down firmly until it clicks into place. The cover's vents should be clear.
6. Place the assembled rice cooker into the microwave oven.
7. Microwave on high power. Cooking times vary based on microwave wattage and rice type. For example, 1 cup of white rice typically cooks in 10-15 minutes. Consult the insert for general cooking guidelines for various grains.
8. After cooking, let the rice cooker stand in the microwave for 5-10 minutes to allow the rice to absorb remaining moisture and steam.
9. Carefully remove the rice cooker from the microwave using oven mitts, as it will be hot.
10. Remove the cover, fluff the rice with a fork, and serve.

Cooking Other Grains

The insert includes cooking guidelines for nine types of grains. Follow the specific instructions provided on the insert for best results when cooking grains other than rice.

CARE AND MAINTENANCE

Cleaning

The Tupperware Microwave Rice Cooker is dishwasher safe. For manual cleaning:

- Wash all components immediately after use to prevent food from drying on the surfaces.
- Use warm water and a mild dish soap.
- Use a soft sponge or cloth. Avoid abrasive cleaners or scouring pads, which can scratch the plastic.
- Rinse thoroughly and allow to air dry, or dry with a clean cloth.

Storage

- Store the rice cooker in a clean, dry place.
- Ensure all components are completely dry before storing to prevent odors or mildew.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Not enough water; insufficient cooking time; microwave power too low.	Add more water next time; increase cooking time; ensure microwave is on high power.

Problem	Possible Cause	Solution
Rice is too soft/mushy	Too much water; excessive cooking time.	Reduce water amount next time; decrease cooking time.
Water boils over	Too much water; microwave power too high; cooker overfilled.	Reduce water amount; lower microwave power slightly; do not exceed maximum fill line (if present).
Lid does not seal properly	Components not aligned; food debris preventing seal.	Ensure insert and lid are correctly aligned and pressed down; clean all sealing surfaces.

SPECIFICATIONS

- **Brand:** Tupperware
- **Model Number:** 67zu
- **Capacity:** Up to 4 cups of cooked rice (2.2 Liters)
- **Material:** Plastic
- **Color:** Purple (Rhubarb/Royal Amethyst)
- **Special Feature:** Steam Vent
- **Product Dimensions:** 8 x 8 x 16 inches (Length x Width x Height)
- **Item Weight:** 1.1 pounds
- **Care:** Dishwasher Safe

WARRANTY AND SUPPORT

Limited Lifetime Warranty


This Tupperware product is covered by a Limited Lifetime Warranty against defects in material and workmanship under normal household use. For specific details regarding warranty claims, please refer to the official Tupperware website or contact Tupperware customer service.







Customer Support

For further assistance, product inquiries, or to report any issues, please visit the official Tupperware website or contact their customer support department.

[Visit Tupperware Official Website](#)

Related Documents - 67zu

	<p>Tupperware Smart Multi-Cooker: User Manual and Cooking Guide</p> <p>Explore the Tupperware Smart Multi-Cooker, a versatile microwave appliance for steaming, cooking rice, grains, and pasta. This guide offers detailed instructions, cooking charts, and safety tips for healthy, efficient meal preparation.</p>
---	--

<p>Micro Delight</p>  <p>Tupperware® © 2017 Tupperware. All Rights Reserved.</p>	<p>Tupperware Micro Delight: Easy Microwave Omelet Maker</p> <p>Learn how to prepare perfect omelets, frittatas, and more with the Tupperware Micro Delight microwave cooker. Includes usage instructions, safety tips, and warranty information.</p>
<p>Micro Healthy Delight</p>  <p>Tupperware®</p> <p>Micro Healthy Delight</p>  <p>Tupperware® © 2017 Tupperware. All Rights Reserved.</p>	<p>Tupperware Micro Healthy Delight: Microwave Cookware Guide</p> <p>Discover how to prepare healthy and delicious meals with the Tupperware Micro Healthy Delight. This guide provides essential cooking instructions, safety precautions, and warranty information for optimal use in your microwave.</p>
<p>Micro Pressure Cooker</p>  <p>Tupperware® © 2017 Tupperware. All Rights Reserved.</p>	<p>Tupperware Micro Pressure Cooker User Manual and Guide</p> <p>Comprehensive user manual and guide for the Tupperware Micro Pressure Cooker (Model 63FLFL11980), detailing safety instructions, usage, cleaning, troubleshooting, and cooking times. Available in multiple languages.</p>
 <p>Breakfast Maker Instructions</p> <p>Cooking Instructions & Timing</p> <ul style="list-style-type: none">• Remove cover from Microwave Breakfast Maker.• For scrambled, Canadian style egg meals, crack the 2 microwave breakfast maker, ensuring the eggshells are facing upward. Fill the water ring with water (1/2 cup). Crack eggs into the egg ring(s).• If hard-boiled eggs are desired, use 2 eggs. Crack eggs into the egg ring(s). Crack eggs into the egg ring(s).• If poached eggs are desired, crack one egg into the egg ring(s). Crack eggs into the egg ring(s). <p>Tupperware</p>	<p>Tupperware Microwave Breakfast Maker Recipes and Instructions</p> <p>Discover a collection of easy and delicious recipes for the Tupperware Microwave Breakfast Maker. This guide includes instructions for various breakfast dishes, snacks, and desserts, perfect for quick microwave cooking.</p>
<p>MicroPro Series Grill</p>  <p>Tupperware</p>	<p>Tupperware MicroPro Series Grill and Pro Ring User Manual</p> <p>Comprehensive guide to using the Tupperware MicroPro Series Grill and Pro Ring for quick and easy cooking in microwaves and conventional ovens. Includes features, benefits, cooking guidelines, care instructions, and warranty information.</p>