

Akai Professional AKTV3214T

AKAI AKTV3214T 32-inch HD Ready LED TV User Manual

Model: AKTV3214T

1. INTRODUCTION

Thank you for choosing the AKAI AKTV3214T 32-inch HD Ready LED TV. This manual provides essential information for the safe and efficient use of your television. Please read it thoroughly before operating the device and retain it for future reference.

The AKAI AKTV3214T is a 32-inch HD Ready LED television featuring a DVB-T2 tuner for digital terrestrial broadcasting. It offers a resolution of 1366 x 768 pixels, a 16:9 aspect ratio, and multiple connectivity options including 3 HDMI ports, 1 USB port, 1 SCART port, 1 VGA port, and a headphone jack. The audio output is 2 x 5W.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or damage to the television.

- **Power Supply:** Ensure the power voltage matches the rating label on the TV. Do not overload power outlets.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat Sources:** Keep the TV away from heat sources like radiators, heat registers, stoves, or other appliances that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near strong magnetic fields.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service

personnel.

3. PACKAGE CONTENTS

Please check that all items are present in the box:

- AKAI AKTV3214T 32-inch LED TV
- Remote Control
- Power Cable
- TV Stand (Base and Screws)
- User Manual (this document)

4. SETUP

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or storage.



Image 1: Front view of the AKAI AKTV3214T 32-inch HD Ready LED TV.

4.2 Stand Installation

To attach the TV stand:

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align the stand with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Do not overtighten.
4. Carefully lift the TV and place it on a stable surface.

4.3 Connecting Peripherals

Connect your external devices to the TV using the appropriate ports:

- **Antenna (RF):** Connect your terrestrial antenna cable to the 'TV (RF)' input for DVB-T2 channels.
- **HDMI Devices:** Use HDMI cables to connect devices like Blu-ray players, game consoles, or set-top boxes to the 'HDMI 1', 'HDMI 2', or 'HDMI 3' ports.
- **USB Devices:** Insert a USB flash drive or external hard drive into the 'USB' port for media playback.

- **SCART Device:** Connect older devices using a SCART cable to the 'Péritel' port.
- **VGA Device:** Connect a computer to the 'VGA' port for use as a monitor.
- **Headphones:** Plug headphones into the 'Headphone' jack for private listening.
- **CI+ Module:** Insert a CI+ module (if required by your service provider) into the 'CI+' slot.

4.4 First Time Setup / Channel Scan

After connecting the power cable and antenna:

1. Plug the TV into a power outlet.
2. Press the Power button on the remote control or TV.
3. Follow the on-screen prompts to select your preferred language and country.
4. The TV will then initiate an automatic channel scan to find available DVB-T2 channels. This may take several minutes.
5. Once the scan is complete, your TV is ready for use.

5. OPERATING THE TV

5.1 Remote Control Overview

The remote control allows you to access all TV functions. Familiarize yourself with the main buttons:

- **Power ():** Turns the TV on or off.
- **Source:** Selects the input source (HDMI, TV, USB, VGA, SCART).
- **Volume (+/-):** Adjusts the volume level.
- **Channel (CH +/-):** Changes TV channels.
- **Menu:** Opens the main menu for settings.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **OK/Enter:** Confirms selections.
- **Exit/Back:** Exits menus or returns to the previous screen.
- **Info:** Displays current channel information.
- **USB:** Directly accesses the USB media player.

5.2 Basic TV Functions

- **Power On/Off:** Press the Power button on the remote or TV.
- **Volume Adjustment:** Use the Volume +/- buttons.
- **Channel Selection:** Use the Channel +/- buttons or numeric buttons.

5.3 Input Source Selection

To switch between different input sources (e.g., TV, HDMI, USB):

1. Press the **Source** button on the remote control.
2. Use the Navigation buttons (▲ ▼) to highlight the desired input source.
3. Press **OK** to confirm your selection.

5.4 Menu Navigation

To access and adjust TV settings:

1. Press the **Menu** button on the remote control.

2. Use the Navigation buttons (▲ ▼ ◀ ▶) to move through menu categories (e.g., Picture, Sound, Channel, Time, System, USB).
3. Press **OK** to enter a sub-menu or confirm a setting.
4. Press **Exit** or **Back** to return to the previous menu or exit the menu system.

5.5 Media Playback (USB)

To play media files from a USB device:

1. Insert your USB device into the 'USB' port on the TV.
2. Press the **Source** button and select 'USB', or press the dedicated **USB** button if available.
3. Navigate through the folders and files on your USB device using the Navigation buttons.
4. Press **OK** to select and play a file (e.g., video, music, photo).

6. MAINTENANCE

6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Always unplug the TV before cleaning.

6.2 Storage

If you need to store the TV for an extended period:

- Unplug the power cable and disconnect all connected devices.
- Remove the stand if necessary and pack the TV in its original packaging.
- Store the TV in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues:

Problem	Possible Solution
No power	Check if the power cable is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Check audio cable connections for external devices.
Poor picture quality	Check antenna connection. Adjust picture settings in the menu. For external devices, check cable quality.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.

Problem	Possible Solution
USB media not playing	Ensure the USB device is properly inserted. Check if the file format is supported by the TV.

8. SPECIFICATIONS

Feature	Specification
Model Number	AKTV3214T
Screen Size	32 Inches
Display Technology	LED
Resolution	720p (1366 x 768)
Aspect Ratio	16:9 (1.66:1)
Refresh Rate	200.
Tuner Type	DVB-T2
HDMI Ports	3
USB Ports	1
SCART (Péritel) Ports	1
VGA Ports	1
Headphone Jack	1
CI+ Slot	1
Audio Output	2 x 5W
Power Supply	100-240 V AC, 50-60 Hz
Dimensions with Base (W x D x H)	731 x 153 x 470 mm
Dimensions without Base (W x D x H)	731 x 87 x 437 mm

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Akai Professional website. You may also contact Akai Professional customer service directly for assistance with product registration, troubleshooting, or service inquiries.

Please have your model number (AKTV3214T) and purchase date available when contacting support.

