

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dyson](#) /

› [Dyson V7 Motorhead Cordless Stick Vacuum Cleaner User Manual](#)

Dyson V7 Motorhead

Dyson V7 Motorhead Cordless Stick Vacuum Cleaner User Manual

Model: 227591-01

Brand: Dyson

INTRODUCTION

The Dyson V7 Motorhead Cordless Stick Vacuum Cleaner is designed for powerful and versatile cleaning across all floor types. Its direct-drive cleaner head effectively removes ground-in dirt from carpets, while its lightweight design allows for easy transformation into a handheld unit for quick clean-ups and hard-to-reach areas. This manual will guide you through the proper use and care of your Dyson V7 Motorhead to ensure its optimal performance and longevity.

SETUP

Unpacking and Assembly

Carefully remove all components from the packaging. Assembly is required. Connect the wand to the main body and the cleaner head. Ensure all connections click securely into place.



The Dyson V7 Motorhead Cordless Stick Vacuum Cleaner fully assembled, ready for use.

Charging the Battery

Before first use, fully charge the vacuum for a minimum of 3.5 hours. The convenient docking station stores and charges the machine, ensuring it's always ready for use. Simply place the vacuum onto the docking station to begin charging.



The docking station and charger for the Dyson V7 Motorhead, providing a convenient storage and charging solution.

Attaching Accessories

Your Dyson V7 Motorhead comes with various attachments for different cleaning scenarios. To attach an accessory, align it with the end of the wand or the main body and push until it clicks into place. To remove, press the red release button and pull the accessory off.



A selection of attachments included with the Dyson V7 Motorhead, designed for various cleaning tasks.

OPERATING INSTRUCTIONS

Powering On and Off

The Dyson V7 Motorhead features an instant-release trigger. To operate, simply pull and hold the trigger. Release

the trigger to turn the vacuum off. This design ensures battery power is only used while cleaning.



A close-up view of the Dyson V7 Motorhead's handle, showing the power trigger and mode switch.

Cleaning Modes

Your vacuum has two cleaning modes: Standard and Max. The Standard mode provides up to 30 minutes of powerful fade-free suction for everyday cleaning. For more difficult tasks or ground-in dirt, switch to Max mode,

which provides up to 6 minutes of higher suction. Be aware that Max mode will drain the battery more quickly.

Versatile Cleaning

The Dyson V7 Motorhead quickly transforms into a handheld vacuum for cleaning stairs, upholstery, and car interiors. Simply detach the wand and cleaner head to use it as a compact handheld unit.





The Dyson V7 Motorhead being used in its handheld configuration, demonstrating its versatility for various cleaning tasks.

MAINTENANCE

Hygienic Bin Emptying

To empty the bin, hold the vacuum over a trash can and pull the red lever. The hygienic dirt ejector will push the dust and debris out in a single action, meaning there's no need to touch the dirt. The bin volume is 0.14 gallons.

Filter Maintenance

The vacuum uses a cartridge filter. Regularly check and clean the filter according to the instructions provided in the full user guide (link below) to maintain optimal suction performance. Ensure the filter is completely dry before reinserting.

General Cleaning

Wipe the exterior of the vacuum with a damp cloth. Do not use any detergents or polishes. Ensure the cleaner head is free from hair and debris build-up for effective cleaning.

TROUBLESHOOTING

No Power / Low Suction

- Ensure the battery is fully charged.
- Check for blockages in the cleaner head, wand, or bin inlet.
- Verify the filter is clean and properly installed.

Cleaner Head Not Spinning

- Check for obstructions in the brush bar.
- Ensure the cleaner head is securely attached.

For more detailed troubleshooting, please refer to the official user guide.

SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Name	V7 Motorhead
Item Model Number	227591-01
Color	Fuchsia
Special Feature	Cordless
Form Factor	Handheld, Stick
Capacity	0.5 Liters (0.14 Gallons)
Wattage	100 watts
Runtime	Up to 30 minutes
Charging Time	3.5 Hours
Battery Type	Lithium-Ion
Filter Type	Cartridge
Noise Level	78 dB
Item Weight	5.3 pounds
Product Dimensions	8.2" L x 9.8" W x 49" H

WARRANTY AND SUPPORT

Warranty Information

The Dyson V7 Motorhead Cordless Stick Vacuum Cleaner comes with a 5-year limited warranty. Please retain your proof of purchase for warranty claims.

Additional Resources

For a complete user guide and further support, please visit:

- [Official User Guide \(PDF\)](#)
- [Visit the Dyson Store on Amazon](#)

