

Manuals.plus /

› Bright Starts /

› Bright Starts Playful Parade Baby to Big Kid Rocker Instruction Manual Model 10886-3-W11

## Bright Starts 10886-3-W11

# Bright Starts Playful Parade Baby to Big Kid Rocker

Model: 10886-3-W11

## IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the Bright Starts Playful Parade Baby to Big Kid Rocker. Keep this manual for future reference. Failure to follow these instructions could result in serious injury or death.

- **WARNING:** Never leave child unattended.
- **WARNING:** This product is intended for infants and toddlers. Maximum weight capacity is 18 kg (40 lbs).
- **WARNING:** Always use the restraint system. Ensure the 5-point harness is securely fastened and properly adjusted to fit your child.
- **WARNING:** Do not use this product if it is damaged or broken.
- **WARNING:** Do not use this product on elevated surfaces. Always place on the floor.
- **WARNING:** Do not move or lift the product with the child in it.
- **WARNING:** Adult assembly required. Keep small parts away from children during assembly.

## SETUP AND ASSEMBLY

Before assembly, ensure all parts are present. You will need a Phillips head screwdriver and one C battery (not included) for the vibration unit.

1. **Assemble the Frame:** Connect the metal frame components as per the diagrams provided in the packaging. Ensure all connections are secure and click into place.
2. **Attach the Seat Pad:** Slide the fabric seat pad onto the assembled frame. Secure it using the straps

and buckles provided, ensuring a snug fit. The seat pad is made of 100% resin treated polyester fiber batting.

3. **Install Battery:** Locate the battery compartment for the vibration unit, typically underneath the seat. Insert one C battery, ensuring correct polarity. Close the compartment securely.
4. **Attach Toy Bar:** Insert the toy bar into the designated slots on the side of the rocker frame until it clicks into place. Ensure it is firmly attached.



Figure 1: Fully assembled rocker, ready for use.

## OPERATING INSTRUCTIONS

### Infant Rocker Mode (Up to 9 kg / 20 lbs)

In this mode, the seat can gently rock back and forth to soothe your baby. It features a full-body recline with two adjustable positions and a removable toy bar for entertainment.

- **Securing Your Child:** Always place your baby in the seat and fasten the 5-point harness securely. Adjust the straps for a snug fit.
- **Recline Adjustment:** Use the recline adjustment mechanism (typically levers on the side or back) to select one of the two available recline positions for your baby's comfort.

- **Soothing Vibrations:** Press the button on the vibration unit (located at the front base of the seat) to activate gentle vibrations. Press again to turn off. Requires one C battery.
- **Toy Bar:** The toy bar with two interactive toys can be easily removed for convenient access to your baby or when not needed. To remove, gently pull up on the toy bar from its attachment points.



Figure 2: Infant in rocker mode with toy bar.



Figure 3: Activating the soothing vibration feature.



Figure 4: Removing the toy bar for easy access.

### **Toddler Seat Mode (Up to 18 kg / 40 lbs)**

To convert the rocker into a stationary toddler seat, engage the rear kickstand. This stabilizes the seat and prevents rocking, making it suitable for older toddlers.

- **Engage Kickstand:** Locate the kickstand at the rear of the rocker base. Pull it out and down until it locks into a fixed position. This will prevent the seat from rocking.
- **Disengage Kickstand:** To return to rocker mode, disengage the kickstand by pushing it back into its stored position.



Figure 5: Toddler using the product in stationary seat mode.


# bright starts™



rocker locks into stationary position  
la silla mecedora se trava en posición fija  
le transat se verrouille en position fixe



great for babies & toddlers  
excelente para bebés y niños pequeños  
idéal pour les bébés et les tout-petits

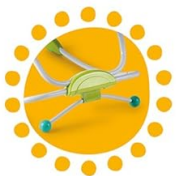

## playful parade baby to big kid rocker™

6-40lbs | 3-18kg EN 12790:2009

CAUTION: Contents small parts - adult assembly required. Tools required - Phillips head screwdriver (not included).  
PRECAUCIÓN: Contenido piezas pequeñas - requiere el montaje por parte de un adulto. Herramienta requerida: destornillador Phillips (no incluido).  
ATTENTION : Contenu de pièces de petites tailles. L'assemblage doit être effectué par un adulte. Outils nécessaires : tournevis cruciforme (non inclus).



Figure 6: Visual guide for converting between rocker and stationary seat modes.

## MAINTENANCE

- **Cleaning the Seat Pad:** The fabric seat pad is machine washable. Refer to the care label attached to the pad for specific washing and drying instructions. Typically, machine wash with cold water on a gentle cycle and tumble dry on low heat.
- **Cleaning the Frame:** Wipe the metal frame and plastic components with a damp cloth and mild soap. Rinse thoroughly and air dry. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the C battery in the vibration unit when vibrations weaken or stop. Always use a fresh, high-quality C battery.
- **Regular Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight and secure. Inspect the fabric for tears or damage and the frame for any signs of wear or breakage.

## TROUBLESHOOTING

- **Vibration Unit Not Working:**

*Solution:* Check if the C battery is installed correctly with the correct polarity. Replace the battery with a fresh one if necessary. Ensure the battery compartment cover is securely closed.

- **Rocker Feels Unstable:**

*Solution:* Ensure all frame connections are securely fastened. If in toddler seat mode, verify that the rear kickstand is fully engaged and locked into position. If in rocker mode, ensure the kickstand is fully disengaged.

- **Harness Not Securing Child:**

*Solution:* Ensure the 5-point harness straps are correctly threaded through the seat pad and the buckle. Adjust the straps to fit snugly around your child without being too tight.

- **Toy Bar Not Staying Attached:**

*Solution:* Ensure the toy bar is inserted fully into the designated slots until it clicks into place on both sides.

## SPECIFICATIONS

<b>Model Number</b>	10886-3-W11
<b>Target Gender</b>	Unisex
<b>Maximum Weight Recommendation</b>	18 Kilograms (40 lbs)
<b>Material</b>	Foam, Metal, 100% Resin Treated Polyester Fiber Batting
<b>Batteries Required</b>	Yes (1 C battery)
<b>Product Dimensions (LxWxH)</b>	86.36 x 71.12 x 60.96 cm
<b>Item Weight</b>	2.31 kg
<b>Assembly Required</b>	Yes
<b>Portable</b>	Yes (Note: Does not fold flat for compact storage)
<b>UPC</b>	074451108868

## WARRANTY AND SUPPORT

Specific warranty information is typically provided with the product packaging or can be found on the manufacturer's official website. For customer support, please refer to the contact information provided by Bright Starts or your retailer.