

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY BN59-00865A Replacement Remote Control User Manual for Samsung TVs

ECONTROLLY BN59-00865A

ECONTROLLY BN59-00865A Replacement Remote Control User Manual

For Samsung TV Models: LA32B450, PS42B430P2DXXY, LA22B450C4M, LA22B650T6D, LA26B450C4MXRD, LS23CFVKFX, LS23EMDKUVXY, and more.

INTRODUCTION

This manual provides instructions for the ECONTROLLY BN59-00865A replacement remote control, designed for various Samsung television models. This remote control offers a direct replacement for your original remote without requiring any complex programming or setup. Simply insert batteries, and it is ready for use.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two new AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Back of the remote control with the battery compartment open. This image illustrates where to insert the two AAA batteries, showing the correct positive and negative terminal orientation.

2. Initial Use

No programming is required for this replacement remote control. Once batteries are installed, point the remote towards your Samsung TV and begin using it immediately.

OPERATING INSTRUCTIONS

The ECONTROLLY BN59-00865A remote control provides full functionality for compatible Samsung TV models. Below is a general overview of the main buttons and their functions.





Image: Front view of the remote control. This image displays the layout of all buttons, including power, number keys, channel, volume, menu, and source controls.

- **POWER (Red Button):** Turns the TV on or off.
- **TV:** Switches the TV to TV mode.
- **Number Buttons (0-9):** Selects channels directly.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Channel Up/Down):** Changes channels sequentially.
- **MUTE:** Mutes or unmutes the TV sound.
- **SOURCE:** Selects input sources (HDMI, AV, Component, etc.).
- **MENU:** Accesses the TV's main menu.
- **TOOLS:** Opens the TV's tools menu for quick settings.
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits the current menu or function.
- **RETURN:** Returns to the previous menu or screen.
- **Directional Pad (Up/Down/Left/Right) and ENTER:** Navigates through menus and confirms selections.
- **CH LIST:** Displays the channel list.
- **FAV.CH:** Accesses favorite channels.
- **PRE-CH:** Returns to the previously viewed channel.
- **TTX/MIX:** Teletext/Mix function.
- **GUIDE:** Opens the electronic program guide.
- **SUBT.:** Activates or deactivates subtitles.

Note: Specific button functions may vary slightly depending on your Samsung TV model.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote control range is poor.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure there are no objects blocking the line of sight between the remote and the TV's infrared sensor.
Certain buttons do not respond.	Dirty contacts or remote not compatible with a specific TV function.	Clean the remote control. Verify your TV model is listed as compatible. Some advanced TV functions may require the original remote.
TV does not respond to any remote commands.	TV's IR sensor is blocked or TV is off.	Ensure the TV's IR sensor is clear. Check if the TV is powered on. Try using the TV's physical buttons.

SPECIFICATIONS

- **Model:** BN59-00865A
- **Brand:** ECONTROLLY
- **Compatible Devices:** Samsung Televisions (various models including LA32B450, PS42B430P2DXXY, LA22B450C4M, LA22B650T6D, LA26B450C4MXRD, LS23CFVKFXY, LS23EMDKUVXY)
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounce
- **Special Feature:** Ergonomic design

SUPPORT

For further assistance or inquiries regarding your ECONTROLLY BN59-00865A replacement remote control, please contact the manufacturer or your retailer. Refer to your purchase documentation for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01MT12LOV>

More documents and user manuals: <https://manuals.plus/>