

Crivit 43142

Crivit Silvercrest FM Scan Radio Model 43142 User Manual

Comprehensive instructions for your portable FM radio

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Crivit Silvercrest FM Scan Radio, Model 43142. Please read this manual thoroughly before operating the device and retain it for future reference. This portable radio features automatic station search, 10 station memory presets, a digital display for frequency and time, and alarm, snooze, and sleep functions.

2. PACKAGE CONTENTS

Ensure all items are present upon unpacking:

- Crivit Silvercrest FM Scan Radio (Model 43142)
- Earphones
- Wrist Strap
- Batteries (if included in your specific package)

3. PRODUCT OVERVIEW

Familiarize yourself with the radio's components and controls.



Figure 1: Front view of the Crivit Silvercrest FM Scan Radio, showing the digital display, control buttons, and included accessories (earphones and wrist strap).



Figure 2: Close-up view of the radio's control panel, highlighting the MODE, PRESET, and volume buttons, along with the Silvercrest branding.

Controls and Display:

- **Digital LC-Display:** Shows frequency, time, and alarm status.
- **MODE Button:** Switches between functions (e.g., radio, time setting).
- **+/- Buttons:** Adjusts volume, tunes frequency, or navigates menu options.
- **PRESET Button:** Accesses and saves radio station presets.
- **Power Button:** Turns the radio on/off.
- **Headphone Jack:** 3.5 mm audio output for earphones.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the radio.
2. Slide or lift the cover to open.
3. Insert the required batteries (e.g., AAA, as specified in the battery compartment) ensuring correct

polarity (+/-).

4. Close the battery compartment cover securely.

4.2 Connecting Headphones

The included earphones serve as the radio's antenna. For optimal reception, ensure they are fully plugged in.

1. Insert the 3.5 mm jack of the earphones into the headphone port on the radio.
2. Adjust the earphone cable for best reception.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn on the radio, press and hold the **Power** button.
- To turn off the radio, press and hold the **Power** button again.

5.2 Automatic Station Search

The radio features an automatic station search function to find available FM stations.

1. With the radio powered on, press the **MODE** button until the radio function is active.
2. Press and hold the **PRESET** button (or a specific scan button if available) to initiate an automatic scan. The radio will scan and store available stations into memory presets.

5.3 Saving and Recalling Presets

The radio can store up to 10 FM stations.

- **To Save a Station:** Tune to the desired station. Press and hold the **PRESET** button until a preset number flashes on the display. Use the +/- buttons to select a preset number (P1-P10), then press **PRESET** again to confirm.
- **To Recall a Station:** Briefly press the **PRESET** button to cycle through the stored stations.

5.4 Volume Adjustment

Use the +/- buttons to increase or decrease the volume level during playback.

5.5 Alarm, Snooze, and Sleep Functions

The radio includes an alarm clock with snooze and sleep timer features.

- **Setting the Alarm:** In time display mode, press and hold the **MODE** button until the alarm time flashes. Use the +/- buttons to set the hour and minute, pressing **MODE** to confirm each.
- **Snooze Function:** When the alarm sounds, press any button (except power off) to activate snooze. The alarm will sound again after a short interval.
- **Sleep Function:** To set a sleep timer, press the **MODE** button repeatedly until the sleep timer option appears. Use the +/- buttons to select the desired sleep duration (e.g., 15, 30, 60 minutes). The radio will automatically turn off after the set time.

6. MAINTENANCE

6.1 Cleaning

To clean the radio, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the surface.

6.2 Storage

When not in use for extended periods, remove the batteries to prevent leakage and store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Radio does not turn on	Batteries are depleted or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
Poor radio reception	Earphones not fully plugged in or poor signal area.	Ensure earphones are fully inserted. Adjust earphone cable position. Move to an area with better signal.
No sound from earphones	Volume too low or earphones faulty.	Increase volume. Test with another pair of earphones.
Display is blank or flickering	Low battery power.	Replace batteries.

8. SPECIFICATIONS

Feature	Detail
Brand	Crivit
Model Number	43142
Tuner Technology	FM
Radio Bands Supported	FM (87.5 - 108 MHz)
Hardware Interface	3.5 mm Audio
Compatible Devices	Headphones
Special Features	Portable, Automatic Station Search, 10 Presets, Alarm, Snooze, Sleep Function
Included Components	Earphones, Wrist Strap, Batteries (if applicable)
Power Source	Battery-Powered
Product Dimensions	10 x 5 x 2 cm
Color	Red
Connectivity Technology	Bluetooth (Note: This may refer to internal components or a miscategorization, primary audio output is 3.5mm jack)






Feature	Detail
Recommended Uses	Personal use, Music, Travel




9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

© 2023 Crivit. All rights reserved.

Related Documents - 43142

	<p>CRIVIT Pocket Knife User Manual and Safety Instructions</p> <p>Comprehensive user manual for the CRIVIT pocket knife, detailing parts, safety guidelines, usage, care, disposal, and warranty information. Includes instructions in multiple languages.</p>
	<p>CRIVIT Golf Laser Rangefinder Bedienungsanleitung</p> <p>Diese Bedienungsanleitung bietet detaillierte Informationen zum CRIVIT Golf Laser Rangefinder (IAN: 369598, Art. Nr.: 9625821). Sie deckt wichtige Sicherheitshinweise, technische Daten, Bedienung und Wartung ab.</p>
	<p>CRIVIT Fitness- und Yogamatte HG10708A/B/C Bedienungsanleitung</p> <p>Umfassende Bedienungs- und Sicherheitshinweise für die CRIVIT Fitness- und Yogamatte (Modelle HG10708A, HG10708B, HG10708C). Erfahren Sie mehr über bestimmungsgemäße Verwendung, technische Daten, Übungen und Pflege.</p>
	<p>Crivit CEK 29 B5 Electric Cool Box User Manual</p> <p>Comprehensive user manual for the Crivit CEK 29 B5 electric cool box, covering operation, safety instructions, technical specifications, and maintenance. Includes information in multiple languages.</p>
	<p>CRIVIT Kettlebell: User Manual and Exercise Guide</p> <p>Comprehensive instructions for using the CRIVIT Kettlebell, including safety guidelines, exercise demonstrations, and maintenance tips. Learn how to perform various exercises for strength and conditioning.</p>

<div><div></div><div><div>RESISTANCE BANDS</div><div><div><div>RESISTANCE BANDS</div><div>Instructions for use</div></div><div><div>EXPANSEUR</div><div>Verbreiter der Bänder</div></div><div><div>EXPANDER</div><div>Erweiterungsbänder</div></div></div><div><div>EXPANDER</div><div>Erweiterungsbänder</div></div><div><div>EXPANDER</div><div>Erweiterungsbänder</div></div></div><div><div>IAN 463299_2407</div><div>*****</div><div>*****</div></div></div>	<div><div>CRIVIT Resistance Bands Instruction Manual (IAN 463299_2407)</div><div>Comprehensive user manual for CRIVIT Resistance Bands (IAN 463299_2407), detailing safety instructions, intended use, exercise routines, storage, and care. Includes multi-language support.</div></div>
---	---