

[Manuals.plus](#) /

› [Nintendo](#) /

› Nintendo Switch AC Power Adapter User Manual

Nintendo HAC-A-ADHGA

Nintendo Switch AC Power Adapter User Manual

Model: HAC-A-ADHGA / 2510646

INTRODUCTION

This user manual provides essential information for the safe and effective use of your Nintendo Switch AC Power Adapter. Please read this manual thoroughly before use and retain it for future reference.

The Nintendo Switch AC Power Adapter is designed to provide power to your Nintendo Switch console, enabling charging and continued play while connected to a power outlet.

PRODUCT OVERVIEW



Image: The Nintendo Switch AC Power Adapter, shown in its retail packaging. The adapter is black with a UK-style plug, and a USB-C cable extends from it. The packaging features Nintendo Switch branding.

The Nintendo Switch AC Power Adapter is a compact, black power supply unit featuring a USB Type-C connector. It is specifically designed as a replacement or additional adapter for the Nintendo Switch console, ensuring compatibility and optimal charging performance.

- **USB C Connection:** Features a standard USB Type-C connector for direct compatibility with the Nintendo Switch console.
- **Replacement Adapter:** Serves as an official replacement or secondary power source.
- **Portable Design:** Allows for charging the Nintendo Switch console while away from home.

SETUP

1. **Unpack the Adapter:** Carefully remove the AC Power Adapter from its packaging.
2. **Connect to Power Outlet:** Plug the AC Power Adapter into a standard wall power outlet. Ensure the outlet provides 240 Volts as specified.
3. **Connect to Nintendo Switch:** Insert the USB Type-C connector of the adapter into the USB Type-C port on your Nintendo Switch console. The port is typically located at the bottom of the console when in handheld mode, or on the back of the dock.
4. **Verify Connection:** Confirm that the adapter is securely plugged into both the power outlet and the console. The Nintendo Switch console should indicate that it is charging.

Note: Always use the adapter in a well-ventilated area and avoid covering it during operation.

OPERATING INSTRUCTIONS

The Nintendo Switch AC Power Adapter is designed for straightforward operation:

- **Charging the Console:** When connected, the adapter will automatically begin charging the Nintendo Switch console. The console's battery indicator will show charging status.
- **Playing While Charging:** You can continue to play games on your Nintendo Switch console while it is connected to the AC Power Adapter and charging.
- **Docked Mode:** The adapter is also used to power the Nintendo Switch Dock, allowing the console to display on a TV and charge simultaneously. Connect the adapter to the "AC ADAPTER" port on the dock.

Important Safety Information:

- Do not expose the adapter to water or excessive moisture.
- Do not disassemble or attempt to repair the adapter.
- Use only with compatible devices (Nintendo Switch console).
- Ensure the power outlet is easily accessible for quick disconnection if needed.

MAINTENANCE

To ensure the longevity and proper functioning of your Nintendo Switch AC Power Adapter, follow these maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and the console before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly winding the cable to prevent damage.
- **Cable Care:** Regularly inspect the cable for any signs of fraying, cuts, or damage. If damage is observed, discontinue use immediately and replace the adapter.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Console not charging.	Adapter not properly connected; Power outlet issue; Damaged adapter/cable.	Ensure adapter is fully plugged into both console and wall. Try a different power outlet. Inspect cable for damage; if damaged, replace adapter.
Slow charging.	Using a non-standard USB-C cable; Console running power-intensive applications.	Ensure you are using the official Nintendo AC Power Adapter. Close unnecessary applications on the console.
Adapter feels warm.	Normal operation; Poor ventilation.	It is normal for the adapter to feel slightly warm during use. Ensure it is in a well-ventilated area and not covered. If it becomes excessively hot, disconnect immediately.

If you continue to experience issues, please contact Nintendo customer support.

SPECIFICATIONS

Feature	Detail
Brand Name	Nintendo
Model Number	HAC-A-ADHGA / 2510646
ASIN	B01MT8EQFF
Connectivity Technology	USB
Connector Type	USB Type-C
Compatible Devices	Nintendo Switch Game Consoles
Input Voltage	240 Volts
Wattage	5 watts
Total USB Ports	1
Mounting Type	Wall Mount
Product Dimensions	5.4 x 12.2 x 13.7 cm
Weight	200 g
Certifications	CE, FCC, RoHS
Power Source	Corded Electric

WARRANTY AND SUPPORT

For information regarding warranty coverage and technical support for your Nintendo Switch AC Power Adapter, please refer to the official Nintendo website or contact Nintendo customer service directly.

Keep your purchase receipt as proof of purchase for warranty claims.

Nintendo Support Website: www.nintendo.com/support/

© 2025 Nintendo. All rights reserved.

This manual is for informational purposes only. Nintendo reserves the right to make changes to product specifications at any time without notice.