

Mr. Christmas 37264

Mr. Christmas Super Climber Elf Musical Animated Decoration Instruction Manual

Model: 37264

1. INTRODUCTION

Thank you for choosing the Mr. Christmas Super Climber Elf. This animated decoration is designed to bring festive cheer to your indoor holiday display. Please read this manual carefully before setup and operation to ensure proper use and longevity of your product.

General Safety Information

- This product is intended for indoor use only.
- Keep away from water and moisture to prevent electric shock.
- Ensure the power cord is not pinched or damaged.
- Do not attempt to repair or modify the product. Refer to qualified personnel for service.
- Keep out of reach of small children and pets to prevent entanglement or ingestion of small parts.

2. PRODUCT FEATURES

- **Animated Climbing Action:** The elf figure climbs up and down a 42-inch red ladder.
- **Musical Function:** Plays 15 classic Christmas carols.
- **LED Lights:** The elf carries a string of 6 multi-colored LED C9 bulb lights.
- **Volume Control:** Adjust music volume or turn off music while retaining climbing action.
- **Versatile Display:** Can be attached to a Christmas tree or leaned against a wall.
- **Power Source:** Includes an AC adapter with a 6-foot power cord and on/off switch.

3. PACKAGE CONTENTS

- Super Climber Elf Figure
- 42-inch Red Ladder (may require minor assembly)

- AC Adapter Power Cord with On/Off Switch
- Tree Arm and Clamp for attachment
- Instruction Manual

4. SETUP INSTRUCTIONS

1. **Assemble the Ladder (if necessary):** If your ladder comes in multiple pieces, carefully connect them according to the markings until securely locked.
2. **Attach Elf to Ladder:** Ensure the elf figure is securely attached to the ladder's climbing mechanism. The elf's hands should grip the ladder rungs, and its feet should rest on the steps.
3. **Choose Display Location:**
 - **For Christmas Tree:** Use the included arm and clamp to securely attach the top of the ladder to a sturdy branch of your Christmas tree. Position the ladder so the elf has a clear path to climb.
 - **Against a Wall:** Lean the ladder securely against a flat wall surface. Ensure the base is stable and the ladder will not tip over during operation.
4. **Connect Power:** Plug the AC adapter into a standard indoor electrical outlet. Connect the other end to the power input on the decoration.



Figure 4.1: Super Climber Elf positioned on a Christmas tree.



Figure 4.2: Super Climber Elf displayed next to a Christmas tree and fireplace.

Your browser does not support the video tag.

Video 4.1: Demonstration of the Mr. Christmas Super Climber Elf in action, showing its climbing motion and lights.

5. OPERATING INSTRUCTIONS

1. **Power On:** Locate the on/off switch on the power cord. Flip the switch to the 'ON' position. The elf will begin to climb the ladder, and the lights will illuminate.
2. **Music Control:** The decoration will automatically play a sequence of 15 Christmas carols.
3. **Volume Adjustment:** Use the volume control knob (if present, typically on the elf's toy bag or base) to adjust the music volume to your preference. You can also turn the volume completely off if you prefer the visual animation without music.
4. **Continuous Operation:** The Super Climber Elf is designed for continuous operation, providing ongoing animation and music throughout your holiday season.
5. **Power Off:** To turn off the decoration, flip the on/off switch on the power cord to the 'OFF' position.

6. MAINTENANCE

- **Cleaning:** To clean the decoration, gently wipe surfaces with a soft, dry cloth. Do not use abrasive cleaners or

solvents.

- **Storage:** When not in use, store the Super Climber Elf in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Elf does not climb or lights do not illuminate.	No power or loose connection.	Ensure the AC adapter is securely plugged into both the outlet and the decoration. Check that the on/off switch is in the 'ON' position. Test the outlet with another device.
Music is not playing.	Volume is too low or off.	Adjust the volume control knob to increase the sound.
Climbing action is erratic or stops.	Obstruction or improper setup.	Ensure the ladder is stable and there are no obstructions in the elf's path. Check that the elf is correctly seated on the climbing mechanism.

8. SPECIFICATIONS

- **Product Dimensions:** 8 x 9 x 43 inches
- **Item Weight:** 5 pounds
- **Model Number:** 37264
- **Power Source:** AC Adapter (included)
- **Assembly Required:** Yes
- **Usage:** Indoor

9. WARRANTY AND SUPPORT

This Mr. Christmas product comes with a 90-day limited manufacturer's warranty. For warranty claims, technical support, or any questions regarding your Super Climber Elf, please contact the manufacturer directly using the contact information provided with your purchase or on the official Mr. Christmas website.