



[Manuals.plus](#) /

› [Philips](#) /

› Philips PowerPro Compact Bagless Vacuum Cleaner User Manual

Philips FC9332/09

Philips PowerPro Compact Bagless Vacuum Cleaner User Manual

Model: FC9332/09

1. INTRODUCTION

Thank you for choosing the Philips PowerPro Compact Bagless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Figure 1.1: The Philips PowerPro Compact Bagless Vacuum Cleaner, showcasing its main unit, hose, telescopic tube, TriActive nozzle, and included accessories like the crevice tool and integrated brush.

2. SAFETY INFORMATION

Before using the appliance, carefully read this user manual and save it for future reference. Always follow basic safety precautions, including the following:

- Do not use the appliance if the mains cord, plug, or the appliance itself is damaged.
- Do not immerse the appliance in water or any other liquid.
- Always unplug the appliance after use and before cleaning.

- This appliance is intended for household use only.
- Do not vacuum water, wet substances, hot ashes, or sharp objects.
- Keep the appliance out of reach of children.

For more detailed safety instructions, refer to the full safety information provided with your product packaging.

3. SETUP AND ASSEMBLY

Follow these steps to set up your Philips PowerPro Compact vacuum cleaner for first use:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the 'What's in the Box' section are present.



Figure 3.1: The vacuum cleaner as it appears when unpacked, ready for assembly. The blue box icon indicates the unboxing process.

2. **Attaching the Hose:** Insert the flexible hose into the air inlet opening on the main unit until it clicks into place.
3. **Connecting the Telescopic Tube:** Attach the telescopic tube to the hose handle. Adjust the length of the telescopic tube by pressing the release button and sliding it to your desired height.

4. **Attaching the Nozzle:** Connect the TriActive nozzle (or other desired nozzle) to the end of the telescopic tube until it clicks securely.
5. **Power Connection:** Extend the power cord from the back of the unit and plug it into a suitable wall socket.

4. OPERATING INSTRUCTIONS

Your Philips PowerPro Compact is designed for efficient cleaning across various surfaces.

4.1 Powering On and Off

- To turn on the vacuum cleaner, press the On/Off foot pedal on the main unit.
- To turn off the vacuum cleaner, press the On/Off foot pedal again.

4.2 Using the TriActive Nozzle

The TriActive nozzle is designed for comprehensive cleaning with three actions:

- It gently opens carpet piles for deeper cleaning.
- It sucks up large crumbs through its larger front opening.
- It sweeps dust and dirt close to furniture and walls with its side brushes.



Figure 4.1: The TriActive nozzle demonstrating its three-action cleaning capability, effectively capturing dust and debris from multiple directions.

4.3 Integrated Brush and Crevice Tool

The vacuum cleaner comes with an integrated soft brush conveniently located on the handle, suitable for quick cleaning of furniture and delicate surfaces. A crevice tool is also included for reaching narrow spaces and corners.



Spazzola integrata

L'attacco a spazzola è integrato nel manico ed è sempre a portata di mano



Figure 4.2: The integrated brush attachment, conveniently located on the handle for easy access during cleaning tasks.

4.4 PowerCyclone 5 Technology

The PowerCyclone 5 technology separates dust and air in one go, maintaining high performance and strong suction power for longer. This ensures efficient dust collection throughout your cleaning session.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Container

Empty the dust container when the dust level reaches the MAX indication. For hygienic emptying, follow these steps:

1. Press the dust container release button and remove the container from the appliance.
2. Hold the dust container over a dustbin.
3. Press the release button on the bottom of the container to open the lid and empty the contents.
4. Close the lid firmly until it clicks.



Figure 5.1: Demonstrating the hygienic emptying process of the dust container, designed to minimize dust clouds.

5.2 Cleaning the Filters

Your vacuum cleaner is equipped with an H13 Allergy Filter and a washable motor filter. Regular cleaning of these filters is crucial for maintaining suction power and air quality.

- **Motor Filter:** Remove the dust container and locate the motor filter. Tap it gently to remove loose dust. If heavily soiled, rinse it under running water and allow it to air dry completely for 24 hours before reinserting.
- **H13 Allergy Filter:** This filter is located at the back of the appliance. It is recommended to replace this filter annually or when visibly dirty. Do not wash the H13 filter.

Ensure all filters are completely dry before reassembling the vacuum cleaner to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Low suction power	Dust container is full	Empty the dust container.
Low suction power	Filters are clogged	Clean or replace the filters as per maintenance instructions.
Low suction power	Hose, tube, or nozzle is blocked	Remove the blockage.
Appliance does not start	Power plug not inserted correctly	Insert the power plug into the wall socket firmly.
Appliance does not start	No power from the wall socket	Check the fuse or circuit breaker in your home.

If the problem persists after trying these solutions, please contact Philips Customer Support.

7. SPECIFICATIONS

Detailed technical specifications for the Philips PowerPro Compact Bagless Vacuum Cleaner (Model FC9332/09):

- **Brand:** Philips
- **Model:** FC9332/09
- **Color:** Blue
- **Capacity:** 1.5 Liters (Dust Container)
- **Wattage:** 650 watts (Note: Product title mentions 900W, but specifications list 650W. Please refer to product packaging for exact power rating.)
- **Material:** 18/10 Steel (Tube)
- **Operating Radius:** 9 Meters
- **Noise Level:** 79 dB
- **Special Features:** Washable Filter, PowerCyclone 5 Technology
- **Filter Type:** Cartridge (H13 Allergy Filter)
- **Included Components:** Bagless vacuum cleaner, TriActive suction brush, Crevice tool, Integrated brush, H13 HEPA allergy filter, Washable filter
- **Item Weight:** 6.1 Kilograms

8. WARRANTY AND SUPPORT

Philips offers a standard manufacturer's warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, spare parts, or service, please visit the official Philips website or contact their customer service line. You can find contact information on the Philips website or in your product documentation.

Online Support: www.philips.com/support

