

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Finlux](#) /
- › [Finlux FL4022 40-inch Full HD TV User Manual](#)

Finlux FL4022

Finlux FL4022 40-inch Full HD TV User Manual

1. INTRODUCTION

Thank you for choosing the Finlux FL4022 40-inch Full HD TV. This manual provides essential information for the safe and efficient use of your television. Please read these instructions thoroughly before operating the device and retain them for future reference.



Figure 1.1: Front view of the Finlux FL4022 40-inch Full HD TV.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or damage to the television:

- Do not expose the TV to rain or moisture.
- Do not open the TV cabinet. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Place the TV on a stable, level surface or mount it securely to a wall.
- Unplug the power cord during lightning storms or when unused for long periods.

3. SETUP

3.1 Unpacking and Stand Installation

Carefully remove the TV from its packaging. Place the TV face down on a soft, clean surface to avoid scratching the

screen. Attach the stand to the TV using the provided screws, ensuring it is securely fastened.

3.2 Wall Mounting

If wall mounting, ensure you use a VESA-compatible wall mount kit (not included) that supports the TV's weight and size. Follow the instructions provided with your wall mount kit. The VESA mounting pattern for this model is typically 200x200mm.

3.3 Connecting Peripherals

The Finlux FL4022 TV offers various connection ports on its rear panel. Refer to the image below for port identification.

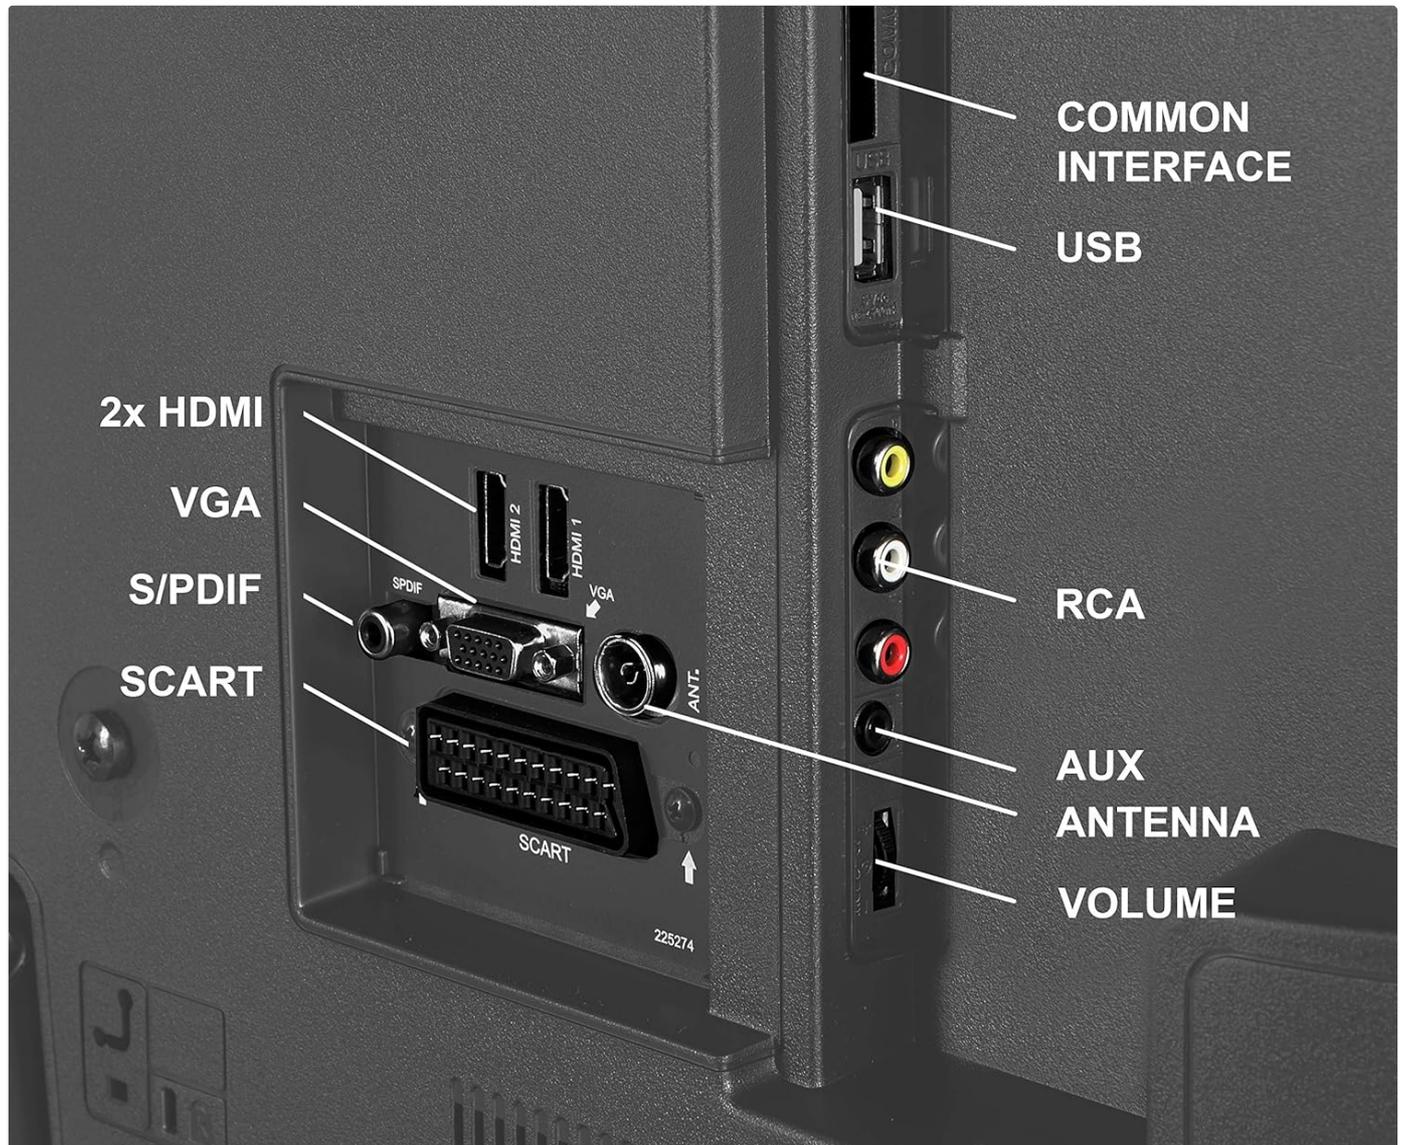


Figure 3.1: Rear connection panel overview.

- **HDMI:** Connect devices such as Blu-ray players, game consoles, or set-top boxes. This model features 2 HDMI ports.
- **USB:** For connecting USB storage devices to play media files.
- **SCART:** For older devices like VCRs or DVD players.
- **VGA:** Connect a computer.
- **RCA (Composite):** For analog video and audio connections.
- **Antenna (ANT.):** Connect your terrestrial or cable antenna for DVB-T/DVB-T2 reception.
- **Satellite (DVB-S2):** Connect your satellite dish for DVB-S2 reception.
- **Common Interface (CI+):** Insert a CI+ module and smart card from your service provider for encrypted digital channels.

3.4 Power Connection

After all connections are made, plug the power cord into the TV and then into a wall outlet.

3.5 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes language selection, country, time zone, and channel scanning for DVB-T/T2 and DVB-S2 signals. Follow the on-screen prompts.

4. OPERATING THE TV

4.1 Remote Control

The TV is operated using the supplied remote control. Insert two AAA batteries (not included) into the remote control, observing the correct polarity.



Figure 4.1: Finlux FL4022 TV and remote control.

4.2 Basic Functions

- **Power ():** Press to turn the TV on or off (standby mode).
- **Channel Up/Down (CH+/CH-):** Changes the channel.
- **Volume Up/Down (VOL+/VOL-):** Adjusts the sound level.
- **Mute ():** Mutes or restores the sound.
- **Source (Input):** Selects the input source (HDMI, AV, USB, DTV, ATV).
- **Menu:** Opens the main menu for settings adjustments.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigate through menus and options.
- **OK:** Confirms selections.
- **Exit/Back:** Exits the current menu or returns to the previous screen.

4.3 Media Playback via USB

Insert a USB storage device into the USB port. Use the 'Source' button on your remote to select 'USB'. The TV's media player interface will appear, allowing you to browse and play supported media files such as WMA, MP4, JPG, MKV, WMV, VOB, FLV, MPG, BMP, and AVI.

4.4 CI+ Module Usage

If you have a CI+ module and smart card from your digital TV service provider, insert the module into the Common Interface slot on the side or rear of the TV. Ensure the smart card is correctly inserted into the CI+ module. The TV will automatically detect the module and allow access to encrypted channels.

5. MAINTENANCE

5.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaning solution specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the cabinet and stand with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

Always unplug the TV from the power outlet before cleaning.

5.2 Software Updates

Periodically check the manufacturer's website or the TV's menu for available software updates. Updates can improve performance and add new features. Follow the on-screen instructions carefully during an update process.

6. TROUBLESHOOTING

If you encounter issues with your TV, consult the following troubleshooting guide before contacting support.

Problem	Possible Cause	Solution
No power	Power cord disconnected; no power from outlet.	Check power cord connection; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; faulty cable connection.	Press 'Source' button to select correct input; check HDMI/AV cable connections.
No sound, but picture is present	Volume muted or too low; external audio system issue.	Press 'Mute' or 'VOL+' button; check external audio connections if applicable.

Problem	Possible Cause	Solution
Remote control not working	Batteries depleted or incorrectly inserted; obstruction between remote and TV.	Replace batteries; ensure correct polarity; remove obstructions; point remote directly at TV's IR sensor.
Poor channel reception	Antenna/satellite dish not properly connected or aligned; weak signal.	Check antenna/satellite connections; rescan channels; adjust antenna/dish position.

If the problem persists after trying these solutions, contact customer support.

7. SPECIFICATIONS

The following table outlines the technical specifications for the Finlux FL4022 TV:

Feature	Specification
Model	FL4022
Screen Size	40 Inch (102 cm)
Display Technology	LED
Resolution	1920 x 1080 pixels (Full HD)
Refresh Rate	100 Hz CMP
Tuner Technology	DVB-T, DVB-T2 (H.265/HEVC), DVB-S2
Connectivity	2x HDMI, 1x USB, 1x SCART, 1x VGA, 1x RCA, CI+ Slot, Antenna (RF), Satellite (F-type)
Supported Media Formats (USB)	WMA, MP4, JPG, MKV, WMV, VOB, FLV, MPG, BMP, AVI
Voltage	230 Volt
Color	Black
Product Dimensions (W x D x H)	92.3 x 22 x 58.8 cm (with stand)
Weight	10.54 kg
Model Year	2018

8. WARRANTY AND SUPPORT

This Finlux television comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Finlux customer support. Contact information can typically be found on the manufacturer's official website or on the warranty documentation.

