



Manuals.plus /

› Aquasonic /

› AquaSonic Water Flosser User Manual

Aquasonic One Size

AquaSonic Water Flosser User Manual

Brand: Aquasonic | Model: One Size

INTRODUCTION

The AquaSonic Water Flosser is a cordless, rechargeable oral irrigator designed for effective teeth cleaning and gum health. It provides a powerful yet gentle water jet to dislodge food particles and plaque, offering a superior alternative to traditional string flossing. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your AquaSonic Water Flosser to ensure optimal performance and longevity.



Image: The AquaSonic Water Flosser unit, its packaging, and the included jet tips and travel bag.

KEY FEATURES

- **Dentist Recommended:** More effective and gentler than traditional flossing.
- **Powerful & Rechargeable:** Lithium-ion battery produces directed water jets for thorough cleaning.
- **Multiple Usage Modes:** Includes 3 convenient modes for varied cleaning needs.
- **Variety of Jet Tips:** Comes with 5 jet tips, including standard, periodontal, orthodontic, and tongue scraper tips.
- **Portable Design:** Lightweight, fully waterproof, and includes a hygienic travel bag.
- **Dual Voltage:** Rated at 110V & 220V for international travel.
- **Ideal for Braces & Deep Pockets:** 360-degree rotary tips reach difficult areas.

Flossing Made Easy

Portable
Waterproof
Lightweight
Easy to Use

AquaSonic

Image: A woman demonstrating the ease of use of the portable AquaSonic Water Flosser.

Modern, Smart Technology

3 Flossing Modes:
Normal, Soft & Pulse

Removeable Water Tank
for Easy Filling and Cleaning

Powerful,
Rechargeable
Battery

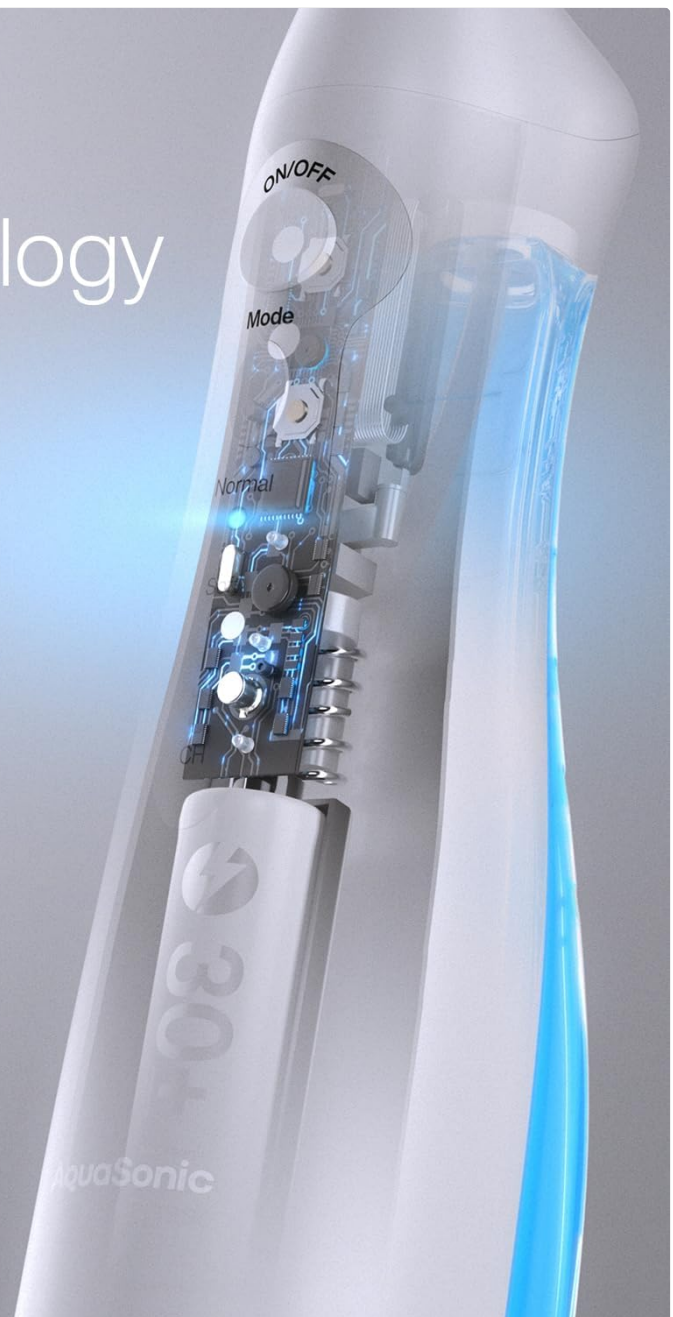


Image: An X-ray view of the AquaSonic Water Flosser showing its internal components, including the water tank and rechargeable battery.

Exceptional Value

Soft-Touch Travel Bag

- 2 Standard Tips
- 1 Periodontal Tip
- 1 Orthodontic Tip
- 1 Tongue Scraper Tip



Image: The AquaSonic Water Flosser's included accessories: a soft-touch travel bag and five different jet tips.

SETUP

Initial Setup and Charging

Before first use, ensure the AquaSonic Water Flosser is fully charged. Connect the charging cable to the device and a suitable power source. The device fully charges overnight and provides weeks of continuous use. Ensure the charge port is securely covered during use to maintain waterproofing.

Filling the Reservoir and Attaching Tips

1. Fill the 0.59 quart (approximately 0.56 liters) reservoir with water. For best results and comfort, use lukewarm water.
2. Attach the desired jet tip firmly to the top of the flosser unit until it clicks into place. The tips are designed for 360-degree rotation.

Selecting a Mode

The AquaSonic Water Flosser features three distinct usage modes to cater to different oral care needs:

- **Normal Mode:** Provides a strong, steady stream for standard daily cleaning and plaque removal.
- **Soft Mode:** Offers a gentle water pressure, ideal for sensitive gums, new users, or those with dental work.
- **Pulse Mode:** Delivers a pulsating stream that massages the gums, promoting circulation and gum health.

To select a mode, press the 'Mode' button repeatedly until the indicator light for your desired mode illuminates.



Image: A detailed view of the AquaSonic Water Flosser's control panel, showing the On/Off button and the Mode button with indicators for Normal, Soft, and Pulse settings.

Flossing Technique

For effective flossing, follow these steps:

1. Lean over a sink to avoid splashing.
2. Place the tip in your mouth, pointing it towards your gumline at a 90-degree angle.
3. Turn on the device by pressing the 'On/Off' button.
4. Guide the water stream along your gumline, pausing briefly between teeth. Allow the water to flow into the sink.
5. Work your way around all teeth, both on the front and back surfaces. Utilize the 360-degree rotary tip to reach all areas.
6. Turn off the device when finished or when the reservoir is empty.

Cleans Faster & Better than String Floss While Also Being Gentler on Teeth & Gums



Image: An illustration demonstrating how the water jet from the AquaSonic Water Flosser cleans effectively between teeth and along the gumline.

MAINTENANCE

Cleaning the Device

Regular cleaning ensures hygiene and extends the life of your water flosser:

- After each use, empty any remaining water from the reservoir.
- Detach the reservoir and rinse it thoroughly with clean water. Allow it to air dry.
- Rinse the jet tip under running water. For deeper cleaning, tips can be soaked in a solution of 2 parts water to 1 part white vinegar for 5-10 minutes periodically.
- Wipe the exterior of the main unit with a soft, damp cloth. Do not submerge the main unit in water.

Storage

Store the AquaSonic Water Flosser in a cool, dry place. Use the provided hygienic travel bag for convenient and protected storage, especially when traveling.

TROUBLESHOOTING

If you encounter issues with your AquaSonic Water Flosser, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Ensure the device is fully charged.
Weak water pressure.	Low battery, clogged tip, or insufficient water in reservoir.	Recharge the device. Clean the jet tip. Refill the reservoir.
Water leaks from the device.	Reservoir not properly attached or charge port cover is open.	Ensure the reservoir is securely clicked into place. Close the charge port cover tightly.
Device stops working suddenly.	Battery depleted or internal malfunction.	Recharge the device. If problem persists, contact customer support.
Excessive splashing during use.	Incorrect flossing angle or mouth not closed enough around tip.	Lean over the sink and keep lips partially closed around the tip while flossing. Adjust angle.

SPECIFICATIONS

Feature	Detail
Model Number	One Size
Product Dimensions	2.6 x 8.07 x 3.98 inches
Item Weight	15 ounces
Power Source	Battery Powered (1 Lithium Metal battery required)
Special Features	Rotatable tip, rechargeable, multiple tips, portable, lightweight
Water Reservoir Capacity	0.59 quart (approx. 0.56 liters)
Voltage Rating	110V & 220V (Dual Voltage)

WARRANTY AND SUPPORT

The AquaSonic Water Flosser is designed for durability and performance. For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Aquasonic brand store.

- **Return Policy:** This product typically has a 30-day return/replacement policy. Please check your purchase details for specific terms.
- **Protection Plans:** Extended protection plans (e.g., 2-Year or 3-Year Protection Plans) may be available for purchase separately.
- **Manufacturer:** Pure Daily Care
- **Online Support:** For additional support, FAQs, or to explore other Aquasonic products, visit the [Aquasonic Store on Amazon](#).