

Singer 3337

Singer 3337 Simple Sew Machine User Manual

Model: 3337

INTRODUCTION

Welcome to the user manual for your new Singer 3337 Simple Sew Machine. This machine is designed for ease of use, making it ideal for sewing beginners and experienced users alike. This manual provides essential information to help you set up, operate, maintain, and troubleshoot your sewing machine, ensuring a smooth and enjoyable sewing experience.

For additional guidance and learning resources, you can access the FREE Online SINGER Owner's Class and the SINGER Sewing Assistant App, available for both iOS and Android devices. These resources are provided by Singer to enhance your sewing journey.

PRODUCT OVERVIEW

The Singer 3337 Simple Sew Machine is a versatile and user-friendly sewing machine. It features a robust design and intuitive controls, making it suitable for a variety of sewing projects.



Figure 1: Front view of the Singer 3337 Simple Sew Machine, showcasing its compact design and main controls.



SETUP

1. Unpacking and Placement

Carefully remove the machine from its packaging. Place the machine on a stable, flat surface with adequate lighting. Ensure there is enough space around the machine for comfortable operation.

2. Power Connection

Connect the power cord to the machine and then plug it into a standard electrical outlet. Ensure the foot pedal is also connected to the machine.

3. Needle Installation

If the needle is not pre-installed or needs replacement, ensure the flat side of the needle faces the back of the machine. Insert the needle fully into the needle clamp and tighten the screw securely.

4. Bobbin Winding

1. Place a spool of thread on the spool pin.
2. Guide the thread through the upper thread guide and around the bobbin winding tension disc.
3. Place an empty bobbin onto the bobbin winder spindle.
4. Wind the thread a few times manually around the bobbin.
5. Push the bobbin winder spindle to the right.
6. Press the foot pedal to start winding. The machine will stop automatically when the bobbin is full.
7. Cut the thread and remove the bobbin.

5. Inserting the Bobbin



Figure 3: Close-up view of the bobbin area, showing the clear cover and drop-in bobbin system.

1. Open the bobbin cover plate.
2. Insert the wound bobbin into the bobbin case, ensuring the thread unwinds counter-clockwise.
3. Guide the thread through the tension spring and into the thread guide slot.
4. Replace the bobbin cover plate.

6. Threading the Machine

1. Raise the presser foot and needle to their highest positions.
2. Place a spool of thread on the spool pin.
3. Guide the thread through the upper thread guide.
4. Follow the numbered threading path down to the needle.
5. Thread the needle from front to back.
6. Pull the bobbin thread up through the needle plate by turning the handwheel towards you to lower and raise the needle once.
7. Pull both threads under the presser foot and towards the back of the machine.

OPERATING

1. Stitch Selection

The Singer 3337 offers 29 stitch patterns. Turn the stitch selector dial to choose your desired stitch. Refer to the stitch chart on the machine for visual guidance.

2. Stitch Length and Width Adjustment

Adjust the stitch length using the dedicated dial to control the spacing of stitches. For certain stitches, the stitch width can also be adjusted to modify the zigzag or decorative stitch appearance.

3. Sewing

1. Place the fabric under the presser foot.
2. Lower the presser foot lever.
3. Gently press the foot pedal to start sewing. The harder you press, the faster the machine will sew.
4. Guide the fabric gently with your hands, but do not push or pull it.

4. Reverse Sewing

To reinforce stitches at the beginning and end of a seam, press and hold the reverse lever/button. The machine will sew backward. Release the lever/button to resume forward sewing.

5. Free Arm Sewing

Remove the accessory storage compartment to reveal the free arm. This feature is useful for sewing cylindrical items like sleeves, pant hems, and cuffs.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your sewing machine.

1. Cleaning the Bobbin Area

Lint and thread residue can accumulate in the bobbin area, affecting stitch quality. Regularly remove the needle plate and bobbin case to clean out any debris using the small brush provided or a soft brush.

2. Needle Replacement

Replace your needle regularly, especially after 8-10 hours of sewing or if it becomes bent or dull. A dull needle can cause skipped stitches or damage fabric.

3. General Cleaning

Wipe down the exterior of the machine with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading.	Use the correct needle for your fabric, replace bent needle, re-thread the machine correctly.
Thread Breaking	Incorrect tension, poor quality thread, improperly threaded.	Adjust tension, use good quality thread, re-thread both upper and bobbin threads.
Fabric Not Feeding	Presser foot not lowered, feed dogs clogged.	Lower the presser foot, clean lint from feed dogs.

Problem	Possible Cause	Solution
Machine Jammed	Thread tangled in bobbin area.	Turn off power, remove needle plate and bobbin, clear all tangled threads.

SPECIFICATIONS

- **Model Number:** 230132112
- **Product Dimensions:** 18.8 x 14 x 10.9 inches
- **Item Weight:** 16.7 pounds
- **Brand:** Singer
- **Color:** White
- **Stitch Patterns:** 29 (as indicated on packaging)
- **Power Source:** Corded Electric
- **ASIN:** B01MTOCPD9
- **UPC:** 037431885913



SINGER

3337

COLOQUE ETIQUETA AQUI
PLACÉR KLISTERMÆRKE HER
KIINNITÄ TARRA TÄHÄN
POSIZIONA QUI L'ADESIVO
SETT KLISTREMERKE HER
SÄTT KLISTERMÄRKET HÄR

ITALY

MODEL Fashion Mate 3337



PRODUCT NO.: 230132-139



7 393033 095710

C/No.: 0046

ORDER No.: 7433252

N.W. 5.7 KGS

G.W. 7.2 KGS



SERIAL NO.: ZHV2309603046

MADE IN VIETNAM

SINGER is sewing made easy.®

Made in Vietnam
Hecho en Vietnam
Fabriqué au Vietnam



7 393033 095710

230132

Figure 4: Product packaging displaying the model number and other product details.



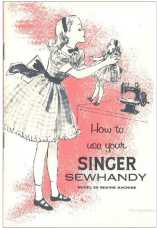
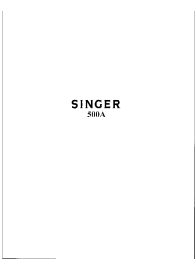
WARRANTY AND SUPPORT

Your Singer 3337 Simple Sew Machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or to register your product, please visit the official Singer website or contact their customer service.

Additional support and learning resources are available through the [Singer Brand Store on Amazon](#), the FREE Online SINGER Owner's Class, and the SINGER Sewing Assistant App.

© 2024 Singer. All rights reserved.

Related Documents - 3337

	<p>Singer Simple 3116 Sewing Machine Instruction Manual</p> <p>This comprehensive instruction manual provides essential guidance for operating and maintaining the Singer Simple 3116 sewing machine. Designed for home use, it covers everything from initial setup and basic operations to advanced features and troubleshooting.</p>
	<p>Singer 3221/3232 Sewing Machine Parts List</p> <p>Detailed parts list for Singer Simple sewing machine models 3221 and 3232, including part numbers and descriptions for easy identification and replacement.</p>
	<p>How to Use Your Singer Sewhandy Model 20 Sewing Machine: A Comprehensive Guide</p> <p>Learn how to use your Singer Sewhandy Model 20 sewing machine with this comprehensive guide. Covers threading, sewing, stitch adjustments, maintenance, and various sewing techniques like shirring, quilting, tucking, and pleating.</p>
	<p>Singer 500A Sewing Machine Parts List and Diagrams</p> <p>Explore the official parts list and detailed diagrams for the Singer 500A sewing machine, including electrical components for related models. Find part numbers for maintenance and repair.</p>



6199/6180/6160

KULLANIM KILAVUZU

Singer 6199/6180/6160 Dikiş Makinesi Kullanım Kılavuzu

Singer 6199, 6180 ve 6160 ev tipi dikiş makineleri için kapsamlı kullanım kılavuzu. Bu belge, makinenin güvenli kurulumu, tüm dikiş fonksiyonlarının kullanımı, düzenli bakım ve sorun giderme adımları hakkında detaylı bilgiler sunar.



Denim Mini Tote Project

Let's get sewing! It's the nifty little box of sewing something with your own hands – and this mini-dress box is the perfect place to start. Whether you're new to a stitch or you're just getting back into it, this beginner-friendly project will walk you through the basics and leave you with a simple, everyday item you can actually use and reminds you that you made it yourself.

Supplies

- Cotton fabric for inside lining of bag
 - Durability for outside of bag (Comprehensive Search-the World to find your perfect apparel)
 - Cotton/Canvas strap
- Q4
- Cut your own kit
 - 1" x 8" x 30" 1/2" strain braided cotton fabric
 - 1" x 8" x 30" 1/2" strain braided cotton fabric
 - 2" x 8" x 27" 1/2" cotton webbing straps
 - SHRED, HUS/DAWA/ VAGET, or PFAFF sewing machine
 - Coordinating sewing thread
 - Scissors
 - Sewing ripper
 - Point turner
 - Bobbin cutter and mist or scissors
 - Iron and ironing board

DIY Denim Mini Tote Bag Sewing Project Instructions

Learn how to sew a beginner-friendly denim mini tote bag with these step-by-step instructions. Includes supplies list and detailed guidance for SINGER, HUSQVARNA VIKING, and PFAFF sewing machines.