

## Sinbo SBM4715

# Sinbo SBM4715 Automatic Bread Maker User Manual

Model: SBM4715

[Overview](#)   [Setup](#)   [Operation](#)   [Introduction](#)   [Maintenance](#)   [Safety Instructions](#)   [Troubleshooting](#)   [Product](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Sinbo SBM4715 Automatic Bread Maker. This appliance is designed to simplify the bread-making process, allowing you to enjoy fresh, homemade bread with ease. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### **3. PRODUCT OVERVIEW**

---

The Sinbo SBM4715 Bread Maker features a user-friendly design with essential components for efficient bread making.



Image 1: Sinbo SBM4715 Automatic Bread Maker. This image displays the front view of the bread maker, highlighting its control panel, LCD screen, and viewing window on the lid. The main body is white.

### Key Components:

- **Non-stick Aluminum Alloy 3004 Pan:** The removable bread pan designed for easy release and cleaning.

- **Stainless Steel Mixing Paddle:** Detachable paddle for thorough ingredient mixing.
- **LCD Display and Viewing Window:** The LCD screen shows program status, time, and settings. The viewing window allows monitoring of the baking process without opening the lid.
- **Control Panel:** Features 6 buttons and 12 digital controls for selecting programs and settings.
- **Heating Element:** Integrated thermal resistance for consistent baking temperatures.

## 4. SETUP

---

1. **Unpacking:** Carefully remove the bread maker and all accessories from the packaging.
2. **Initial Cleaning:** Before first use, wash the bread pan and mixing paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The LCD display will illuminate, indicating the appliance is ready for use.

## 5. OPERATING INSTRUCTIONS

---

The Sinbo SBM4715 offers automated bread making with various program options and crust control settings.

### 5.1 Basic Operation Steps:

1. **Insert Mixing Paddle:** Place the mixing paddle onto the shaft inside the bread pan.
2. **Add Ingredients:** Add ingredients to the bread pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last). Ensure ingredients are at room temperature.
3. **Place Bread Pan:** Insert the bread pan into the bread maker and turn it clockwise until it locks into place. Close the lid.
4. **Select Program:** Use the control buttons to select the desired bread program (e.g., Basic, French, Whole Wheat). The LCD will display the program number and duration.
5. **Select Crust Color:** Press the "Crust" button to choose your preferred crust color: **Light**, **Medium**, or **Dark**.
6. **Start Baking:** Press the "Start/Stop" button to begin the selected program. The machine will automatically mix, knead, rise, and bake the bread.
7. **Remove Bread:** Once the program is complete, the machine will beep. Unplug the appliance. Using oven mitts, carefully remove the bread pan from the bread maker. Invert the pan to release the bread onto a wire rack to cool. If the mixing paddle remains in the bread, carefully remove it.

### 5.2 Program Selection:

The SBM4715 features 12 digital controls, each corresponding to a specific bread-making program. Refer to your recipe book for detailed instructions on which program to use for different types of bread. Common programs include:

- **Basic:** For white and mixed breads.
- **French:** For light breads made from fine flour.

- **Whole Wheat:** For breads with a high percentage of whole wheat flour.
- **Sweet:** For breads with high sugar, fats, and proteins.
- **Dough:** For preparing dough for pizzas, rolls, or pastries without baking.
- **Bake:** For baking pre-made dough or adding extra baking time.

*Note: While the included recipe book may have some inconsistencies, the machine's programs are designed to function as described. Experimentation with trusted recipes is encouraged.*

## 6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your bread maker.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Bread Pan and Mixing Paddle:** Remove the bread pan and mixing paddle. Wash them with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry completely.
3. **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water or any other liquid.
4. **Interior:** Use a soft, damp cloth to wipe the inside of the baking chamber. Remove any crumbs or residue.
5. **Storage:** Ensure all parts are clean and dry before storing the bread maker in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter issues with your bread maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise.	Expired yeast, incorrect water temperature, too much salt, or incorrect program.	Check yeast expiration date. Use lukewarm water (around 40°C/105°F). Reduce salt if too much was added. Ensure correct program is selected for the recipe.
Bread is too dense.	Too much flour, too little liquid, or insufficient kneading.	Measure ingredients precisely. Ensure the dough forms a soft, pliable ball during kneading. Add a teaspoon of water if dough is too stiff.
Bread collapses during baking.	Too much liquid, too much yeast, or high humidity.	Reduce liquid slightly. Reduce yeast amount. Adjust recipe for high humidity environments.
Mixing paddle stuck in bread.	Common occurrence.	Allow bread to cool slightly, then carefully remove the paddle using a non-metallic utensil.
Machine does not start.	Not plugged in, power outage, or lid not closed properly.	Check power connection. Ensure lid is securely closed. Try another outlet.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

---

- **Model:** SBM4715
- **Brand:** Sinbo
- **Color:** White
- **Material:** Aluminum alloy 3004 (pan), Stainless steel (mixing paddle, thermal resistance)
- **Dimensions:** 35 x 18 x 25 cm (approximately 13.8 x 7.1 x 9.8 inches)
- **Weight:** 540 g (approximately 1.2 lbs) - *Note: This weight seems unusually low for a bread maker and might refer to a specific component. The actual appliance weight may be higher.*
- **Controls:** 6 buttons with 12 digital programs
- **Display:** LCD screen
- **Crust Control:** Light, Medium, Dark

## 9. WARRANTY AND CUSTOMER SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Sinbo customer service directly. Keep your proof of purchase for any warranty claims. For further assistance, visit the official Sinbo website or contact their authorized service centers.