

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Simple Houseware](#) /
- › [Simple Houseware Dual Bar Adjustable Garment Rack, Chrome, Model BO-021-1 Instruction Manual](#)

## Simple Houseware BO-021-1

# Simple Houseware Dual Bar Adjustable Garment Rack

Model: BO-021-1 (Chrome)

## 1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your Simple Houseware Dual Bar Adjustable Garment Rack. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.

## 2. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Main vertical support poles
- Horizontal base bars
- Adjustable upper and lower hanging bars
- Caster wheels (with brakes)
- Connectors and fasteners (screws, nuts, wrench)

## 3. ASSEMBLY INSTRUCTIONS

Assembly typically requires a Phillips head screwdriver (not included) and the provided wrench.

- 1. Attach Caster Wheels:** Securely attach the four caster wheels to the base frame using the provided fasteners. Ensure two of the wheels have locking mechanisms for stability.
- 2. Assemble Base Frame:** Connect the horizontal base bars to the vertical support poles. Ensure all connections are tight and stable.
- 3. Install Vertical Poles:** Insert the main vertical support poles into the assembled base.
- 4. Attach Upper Hanging Bar:** Secure the fixed upper hanging bar between the top sections of the vertical poles.
- 5. Install Adjustable Lower Hanging Bar:** Attach the adjustable lower hanging bar to the vertical poles at your desired height. This bar can be adjusted later.
- 6. Install Extendable Middle Bar:** Insert the extendable middle bar into the designated slot on the upper hanging bar. This allows for customizable length.

7. **Final Check:** Verify all connections are secure and the rack is stable before placing items on it.



Image 1: Fully assembled Simple Houseware Dual Bar Adjustable Garment Rack, showcasing its dual hanging bars and mobility.



Image 2: Diagram illustrating the dimensions and adjustable features of the garment rack, including height and extendable bar length.

## 4. OPERATING INSTRUCTIONS

### 4.1. Adjusting Height

The middle bar's height can be adjusted in 2.08-inch increments, offering a total of 6.25 inches of vertical adjustment. To adjust, loosen the fasteners on both sides of the middle bar, slide it to the desired height, and re-tighten the fasteners securely. This feature allows accommodation for various garment lengths.

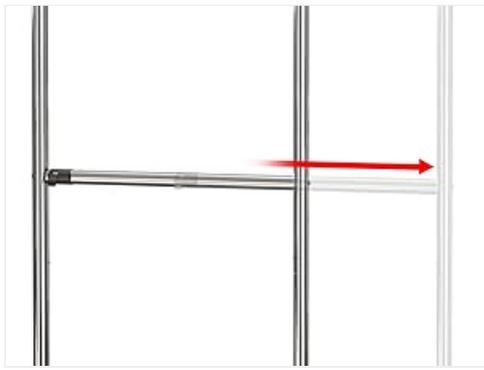


Image 3: Close-up view demonstrating the height adjustment mechanism of the middle hanging bar.

## 4.2. Extending Middle Bar

The middle bar is extendable from 23 inches to 42.5 inches. To extend or retract, locate the locking mechanism on the bar, release it, slide the bar to the desired length, and then re-engage the lock to secure it. This provides flexible hanging space.



Image 4: Illustration showing the extendable feature of the middle hanging bar.

## 4.3. Mobility and Locking Wheels

The garment rack is equipped with 2.5-inch heavy-duty caster wheels for easy movement. To move the rack, ensure the wheel brakes are disengaged. To secure the rack in place, press down on the locking mechanism on the two braked wheels until they click into position.



Image 5: Detail of a caster wheel with its locking mechanism for securing the rack.

## 5. MAINTENANCE

- **Cleaning:** Wipe the chrome finish with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Fastener Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten as necessary to maintain stability.

- **Wheel Care:** Keep the caster wheels free of debris (hair, lint) to ensure smooth movement.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Loose fasteners; uneven load distribution.	Ensure all screws and connections are tightened. Distribute clothing weight evenly across both bars.
Wheels do not roll smoothly.	Debris caught in wheels; wheel brakes engaged.	Clear any debris from the wheels. Disengage wheel brakes.
Adjustable bar slides down.	Fasteners not tight enough; excessive weight.	Re-tighten the adjustment fasteners. Ensure the load does not exceed the maximum weight capacity.

## 7. SPECIFICATIONS

---

**Brand:** Simple Houseware

**Model:** BO-021-1

**Color:** Chrome

**Material:** Metal (Durable Steel)

**Product Dimensions:** 18"D x 46"W x 72"H

**Extendable Middle Bar:** Adjustable from 23" to 42.5"

**Height Adjustment:** 6.25" total adjustment in 2.08" increments

**Load Capacity:** 100 Pounds (Maximum Weight Recommendation)

**Caster Wheels:** 2.5" heavy-duty, with brakes

**Assembly Required:** Yes

**Item Weight:** 11.22 pounds (5.1 Kilograms)

**UPC:** 811244030131

## 8. WARRANTY INFORMATION

---

Simple Houseware products are designed for durability and performance. For specific warranty details regarding your Dual Bar Adjustable Garment Rack, please refer to the warranty card included with your purchase or visit the official Simple Houseware website. Warranty coverage typically addresses manufacturing defects under normal use conditions.

## 9. CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Simple Houseware customer support:

**Website:** [www.simplehouseware.com](http://www.simplehouseware.com) (Please note: This is a placeholder URL as the actual support URL was not provided in the input. Refer to your product packaging for the correct website.)

**Email:** Refer to product packaging or website for contact email.

**Phone:** Refer to product packaging or website for contact phone number.

When contacting support, please have your product model number (BO-021-1) and purchase information ready.

