

## Pilot 842 Hi Tecpoint V7 Cartridge System Pen

# Pilot 842 Hi Tecpoint V7 Cartridge System Pen User Manual

Model: 842 Hi Tecpoint V7

## INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, maintenance, and troubleshooting of your Pilot 842 Hi Tecpoint V7 Cartridge System Pen. Please read this manual thoroughly before using your pen to ensure optimal performance and longevity.

## SETUP

Your Pilot 842 Hi Tecpoint V7 pen uses a cartridge system for ink. Follow these steps to install an ink cartridge:

1. **Unscrew the barrel:** Gently twist the pen barrel counter-clockwise to separate it from the grip section and nib.
2. **Insert the ink cartridge:** Take a new Pilot ink cartridge. The cartridge has a narrow end and a wider end. Insert the narrow end of the cartridge firmly into the back of the nib section until you feel a click. This action punctures the cartridge, allowing ink to flow.
3. **Reassemble the pen:** Screw the barrel back onto the grip section clockwise until it is secure.
4. **Prime the nib (if necessary):** If the ink does not flow immediately, hold the pen nib-down for a few minutes or gently shake it to encourage ink flow to the nib. You may also lightly press the cartridge to help push ink forward.



Image: Two blue ink cartridges, ready for installation into the pen. These cartridges provide the ink supply for the writing

## OPERATING

---

Using your Pilot 842 Hi Tecpoint V7 pen is straightforward:

- **Remove the cap:** Pull the cap straight off the pen. Avoid twisting, as this can loosen the barrel.
- **Writing:** Hold the pen comfortably and apply light pressure to write. The V7 Hi Tecpoint nib is designed for smooth, consistent ink flow.
- **Recap after use:** Always replace the cap firmly after each use to prevent the ink from drying out and to protect the nib.

## MAINTENANCE

---

Proper maintenance ensures the longevity and performance of your pen:

- **Cleaning the nib:** If ink flow becomes inconsistent, gently wipe the nib with a soft, damp, lint-free cloth. For more stubborn clogs, you can flush the nib section with cool water after removing the ink cartridge. Allow it to dry completely before reinserting a cartridge.
- **Cartridge replacement:** When the ink runs out, follow the steps in the 'Setup' section to replace the empty cartridge with a new one.
- **Storage:** Store your pen horizontally or nib-down when not in use to keep the nib moist. Avoid extreme temperatures and direct sunlight.

## TROUBLESHOOTING

---

Here are solutions to common issues you might encounter:

- **No ink flow or skipping:**
  - Ensure the ink cartridge is fully inserted and punctured.
  - Check if the cartridge is empty and replace if necessary.
  - Clean the nib as described in the 'Maintenance' section.
  - Ensure the pen cap was securely replaced after previous use.
- **Leaking ink:**
  - Ensure the barrel is screwed on tightly.
  - Check for any cracks or damage to the pen body or nib section.
  - Avoid shaking the pen vigorously.

## SPECIFICATIONS

---

<b>Manufacturer</b>	Pilot
<b>Model</b>	842 Hi Tecpoint V7 Cartridge System Pen
<b>Ink Colour</b>	Blue

<b>Closure Type</b>	Retractable
<b>Item Weight</b>	180 g
<b>Item Dimensions (LxWxH)</b>	45.7 x 10 x 2 Centimeters

## **WARRANTY AND SUPPORT**

---

For warranty information or technical support, please refer to the official Pilot website or contact your local retailer. Keep your purchase receipt as proof of purchase.