

## Philips FC9330/09

# Philips PowerPro Compact FC9330/09 Bagless Vacuum Cleaner User Manual

Model: FC9330/09

## 1. INTRODUCTION AND SAFETY INFORMATION

---

This manual provides essential instructions for the safe and efficient use of your Philips PowerPro Compact FC9330/09 bagless vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

### Important Safety Instructions:

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the appliance if the mains cord, plug, or other parts are damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not vacuum water, wet substances, hot ashes, or sharp objects.
- Unplug the appliance before cleaning or performing maintenance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

## 2. PRODUCT OVERVIEW

---

The Philips PowerPro Compact FC9330/09 is a bagless vacuum cleaner designed for effective cleaning. It features PowerCyclone technology for high suction power and a TriActive nozzle for comprehensive dirt removal.



Image 2.1: Full view of the Philips PowerPro Compact FC9330/09 vacuum cleaner with hose and TriActive nozzle.

## Main Components:

- Main Unit (Motor and Dust Container)
- Flexible Hose
- Telescopic Tube
- TriActive Nozzle
- Crevice Tool (integrated)
- Power Cord with Plug
- Dust Container Release Button
- Power On/Off Button
- Cord Rewind Button

## 3. SETUP

---

Follow these steps to assemble your vacuum cleaner before first use.

1. **Attach the Flexible Hose:** Insert the flexible hose into the air inlet opening on the main unit until it clicks into place.
2. **Connect the Telescopic Tube:** Attach the telescopic tube to the handle of the flexible hose. Adjust the length of the telescopic tube by pressing the release button and sliding it to your desired height.

3. **Attach the Nozzle:** Connect the TriActive nozzle to the end of the telescopic tube. Ensure it is securely fitted.
4. **Power Connection:** Extend the power cord from the main unit and plug it into a suitable wall socket.



*Image 3.1: Assembled Philips PowerPro Compact vacuum cleaner, ready for use.*

## 4. OPERATING INSTRUCTIONS

---

Learn how to effectively use your vacuum cleaner for various cleaning tasks.

1. **Starting the Vacuum:** Press the On/Off button located on the main unit to start the appliance.
2. **Using the TriActive Nozzle:** The TriActive nozzle is designed for both hard floors and carpets. It performs three cleaning actions simultaneously: it gently opens carpet piles to remove dust, sucks up large crumbs through its front opening, and sweeps dust and dirt close to furniture and walls with its side brushes.
3. **Using the Crevice Tool:** The integrated crevice tool can be used for cleaning narrow spaces, corners, and edges. Detach the TriActive nozzle and attach the crevice tool directly to the telescopic tube or hose handle.
4. **Stopping the Vacuum:** Press the On/Off button again to switch off the appliance.
5. **Cord Rewind:** After use, unplug the appliance from the wall socket. Press the cord rewind button to automatically retract the power cord.



*Image 4.1: The Philips PowerPro Compact vacuum cleaner in operation on a carpeted surface.*

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### Emptying the Dust Container:

Empty the dust container when the maximum fill indicator is reached or after each use for best results.

1. Switch off and unplug the vacuum cleaner.
2. Press the dust container release button and lift the dust container from the main unit.
3. Hold the dust container over a waste bin and press the release button on the bottom of the container to open the lid and empty the contents.
4. Close the lid securely and reinsert the dust container into the main unit until it clicks into place.



Image 5.1: The dust container detached from the main unit, ready for emptying.

## Cleaning the Filters:

The vacuum cleaner has a motor protection filter and an allergy filter. Clean them regularly to maintain suction power.

- **Motor Protection Filter:** This filter is located inside the dust container. Remove it and tap off loose dirt. Rinse it under running water if heavily soiled and let it air dry completely before reinserting.
- **Allergy Filter:** This filter is located at the back of the appliance. Remove the filter cover, take out the filter, and tap off loose dirt. Do not wash the allergy filter. Replace it if it becomes too dirty or damaged.

## 6. TROUBLESHOOTING

---

If you encounter issues with your vacuum cleaner, refer to the table below for common problems and solutions.

| Problem                  | Possible Cause   | Solution  |
|--------------------------|--|---|
| Low suction power        | Dust container is full; Filters are clogged; Nozzle, tube, or hose is blocked. | Empty the dust container; Clean or replace filters; Remove any blockages. |
| Appliance does not start | Plug is not properly inserted; No power from the wall socket.                  | Check the plug connection; Test the wall socket with another appliance.   |
| Unusual noise            | Blockage in the nozzle, tube, or hose; Filter is incorrectly placed.           | Check for and remove blockages; Ensure filters are correctly installed.   |

## 7. SPECIFICATIONS

---

Technical details for the Philips PowerPro Compact FC9330/09 vacuum cleaner.

**Model Number:** FC9330/09

**Brand:** Philips (Manufactured by Versuni)

**Power:** 900 Watts

**Voltage:** 220 Volts

**Dust Capacity:** 1.5 Liters

**Noise Level:** 79 dB

**Filter Type:** Cartridge (Motor protection filter, Allergy filter)

**Dimensions (L x W x H):** 35 x 35 x 31.4 cm

**Weight:** 4.5 kg

**Special Feature:** Bagless, PowerCyclone Technology, TriActive Nozzle

**Power Source:** Corded Electric

## 8. WARRANTY AND SUPPORT

---

This Philips appliance comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Philips Domestic Appliances (Versuni) website. For technical support, spare parts, or service, please contact your local Philips customer service center. Contact information can typically be found in the warranty documentation or on the official brand website.