



[Manuals.plus](#) /

› [Stanley](#) /

› Stanley SXPW22E 2200W Pressure Washer User Manual

Stanley SXPW22E

Stanley SXPW22E 2200W Pressure Washer User Manual

Model: SXPW22E

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Maintenance](#) [Safety Information](#) [Troubleshooting](#) [Package](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Stanley SXPW22E 2200W Pressure Washer. This cold water high-pressure cleaner is designed for thorough and effortless cleaning of domestic outdoor surfaces such as courtyards, balconies, terraces, stairs, and pathways. Its robust design makes it ideal for cleaning cars, motorcycles, bicycles, outdoor furniture, and gardening tools. Please read this manual carefully before use to ensure safe and efficient operation.



Figure 1: Stanley SXPW22E 2200W Pressure Washer

2. SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear appropriate safety gear:** Always wear safety glasses, hearing protection, and protective clothing.
- **Keep children and pets away:** Do not allow children or untrained persons to operate the pressure washer.
- **Electrical safety:** Ensure the power outlet is properly grounded. Do not operate the pressure washer with damaged cords or plugs.
- **Water connection:** Connect the pressure washer to a cold water supply only. Do not use hot water.
- **Avoid spraying people or animals:** The high-pressure jet can be dangerous if misused.

- **Secure the gun:** Always engage the trigger lock when the pressure washer is not in use.
- **Use only approved accessories:** Using unapproved accessories may result in injury or damage to the unit.

3. PACKAGE CONTENTS

Upon unpacking, ensure all items listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Stanley SXPW22E Pressure Washer Unit
- High-pressure gun with safety lock
- Lance extension
- High-pressure hose (8 meters)
- Adjustable jet nozzle
- Rotary nozzle (rotabuse) for stubborn dirt
- Foam cannon kit (0.4 L) for attachment to the gun



Figure 2: Pressure Washer and included accessories

4. SETUP

Follow these steps to prepare your Stanley SXPW22E pressure washer for use.

1. **Unpack the unit:** Remove all components from the packaging.
2. **Attach the high-pressure hose:** Connect the 8-meter high-pressure hose to the pressure washer's outlet and to the high-pressure gun. Ensure connections are secure.

Your browser does not support the video tag.

Video 1: Demonstrates the quick connection of the high-pressure hose to the unit and gun, and the integrated hose reel.

3. **Connect to water supply:** Attach a standard garden hose (not supplied) to the water inlet of the pressure washer. The water inlet features a controllable filter to retain impurities. Ensure the water supply is turned on.



Figure 3: Water inlet connection with filter.

Self-priming function: If a direct connection to the water mains is not possible, this pressure washer has a self-priming function to draw water from an external reservoir.

4. **Connect to power:** Plug the power cable into a suitable electrical outlet.
5. **Attach desired nozzle:** Select either the adjustable jet nozzle or the rotary nozzle and attach it to the lance extension.



Figure 4: Various nozzles and accessories for the pressure washer.

5. OPERATING INSTRUCTIONS

Before starting, ensure all connections are secure and the water supply is open.

1. **Turn on the unit:** Switch the pressure washer to the "ON" position.
2. **Purge air from the system:** Squeeze the trigger on the gun until a steady stream of water emerges, indicating that all air has been purged from the pump and hose.
3. **Begin cleaning:** Direct the spray at the surface to be cleaned, maintaining a safe distance. Adjust the nozzle for the desired spray pattern and intensity.
 - **Adjustable Jet Nozzle:** Allows you to vary the power of the water jet according to your needs.
 - **Rotary Nozzle:** Ideal for eliminating the most stubborn dirt.
 - **Foam Cannon Kit:** Fill with appropriate detergent and attach to the gun for applying foam.



Figure 5: Using the pressure washer to clean a vehicle and a bicycle.



Figure 6: Effective cleaning of outdoor surfaces like patios.

4. **To stop operation:** Release the trigger, then switch the pressure washer to the "OFF" position.
5. **Relieve pressure:** After turning off the unit, squeeze the trigger to release any remaining pressure in the system before disconnecting hoses.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Clean the water inlet filter:** Regularly check and clean the filter on the water inlet to prevent impurities from entering the pump.
- **Drain water before storage:** Before storing, especially in freezing temperatures, ensure all water is drained from the pump, hose, and gun to prevent damage.
- **Store accessories:** After use, store all accessories on the integrated accessory holder at the back of the unit. The static hose reel allows for easy winding and storage of the high-pressure hose.



Figure 7: Integrated accessory holder for convenient storage.

- **Clean nozzles:** If nozzles become clogged, use the provided nozzle cleaning tool to clear any debris.
- **General cleaning:** Wipe down the exterior of the unit with a damp cloth. Do not use harsh chemicals.

7. TROUBLESHOOTING

This section provides solutions to common problems you might encounter.

Problem	Possible Cause	Solution
Unit does not start	No power supply; Power switch off; Circuit breaker tripped.	Check power connection; Turn power switch ON; Reset circuit breaker.
Low pressure	Insufficient water supply; Clogged water inlet filter; Air in the pump; Worn nozzle.	Ensure full water supply; Clean water inlet filter; Purge air from system (see Operation); Replace nozzle.
Pulsating spray	Air in the pump; Water supply restriction; Clogged nozzle.	Purge air from system; Check water hose for kinks; Clean nozzle.
Water leaks	Loose connections; Damaged O-rings.	Tighten all connections; Replace damaged O-rings.

If you encounter problems not listed here or if solutions do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	SXPW22E
Brand	Stanley
Power Absorbed	2200 W
Maximum Pressure	150 bar
Maximum Flow Rate	440 Liters per hour (L/h)
Maximum Water Inlet Temperature	50 °C
Hose Length	8 Meters
Product Dimensions (L x W x H)	36 x 32.4 x 81.5 cm
Item Weight	8.43 Kilograms
Power Source	Corded Electric
Color	Yellow/Black

9. WARRANTY AND SUPPORT

This Stanley SXPW22E Pressure Washer comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use.

For warranty claims, technical assistance, or to locate authorized service centers, please refer to the contact information provided in your purchase documentation or visit the official Stanley website. Keep your proof of purchase for warranty validation.

