

## ZdalaMit CT-90325

# ZdalaMit CT-90325 Replacement Remote Control User Manual

For Toshiba LCD LED Televisions

## INTRODUCTION

---

This manual provides comprehensive instructions for the ZdalaMit CT-90325 replacement remote control. This remote is designed to function directly with various Toshiba LCD LED television models without requiring any programming or pairing. Simply install the batteries, and the remote will be ready for immediate use.

## SETUP

---

### Battery Installation

The ZdalaMit CT-90325 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.*

Once batteries are installed, the remote control is ready for use with your compatible Toshiba TV.

## **OPERATING INSTRUCTIONS**

This remote control is designed for intuitive use, mirroring the functionality of your original Toshiba TV remote. No programming is required.

## Basic Functions

- **Power Button:** Turns the television on or off.
- **Channel Up/Down:** Changes the television channel.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Silences the television audio.
- **Number Buttons (0-9):** Directly selects television channels.
- **Input/Source Button:** Cycles through available input sources (e.g., HDMI, AV).
- **Menu Button:** Accesses the television's main menu.
- **Navigation Buttons (Arrow Keys):** Navigates through on-screen menus.
- **Enter/OK Button:** Confirms selections in menus.

For specific advanced functions, refer to your Toshiba television's original user manual.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA batteries.

### Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote's surface or internal components.

### Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure the batteries are installed correctly with the proper polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote control and the television's infrared sensor.
  - Ensure the television is powered on.
- **Intermittent response:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure you are within the effective range and line of sight of the television.

If issues persist after following these steps, please refer to the support information provided.

## SPECIFICATIONS

---

- **Model Number:** CT-90325

- **Brand:** ZdalaMit
- **Compatible Devices:** Toshiba LCD LED Televisions (e.g., 50L1400U, 22AV600U, 19AV600U, 32E200U, 37E200U, 40E200UL, 32C100U, 32L1400U, 39L2300U, etc.)
- **Power Supply:** 2 x AAA Batteries (Not Included)
- **Product Dimensions:** 5.96 x 1.99 x 0.55 inches
- **Item Weight:** 1.41 ounces
- **Special Feature:** Pre-Programmed (No setup required)

## SUPPORT

---

For any questions or further assistance regarding your ZdalaMit CT-90325 replacement remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details.