



Manuals.plus /

› **BLACK+DECKER** /

› BLACK+DECKER 7-in-1 Steam Mop with SteamGlove Handheld Steamer (HSMC1361SGP) Instruction Manual

## BLACK+DECKER HSMC1361SGP

# BLACK+DECKER 7-in-1 Steam Mop with SteamGlove Handheld Steamer (HSMC1361SGP) Instruction Manual

Model: HSMC1361SGP

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your BLACK+DECKER 7-in-1 Steam Mop with SteamGlove Handheld Steamer, model HSMC1361SGP. This versatile cleaning system is designed to clean various sealed surfaces throughout your home using the power of steam.

Please read all instructions carefully before operating the appliance and retain this manual for future reference.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Do not leave the appliance unattended while plugged in.
- Do not use the appliance on unsealed wood floors or unsealed surfaces, as steam can cause damage.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Keep children and pets away from the appliance during operation.
- Always unplug the appliance before filling, emptying, or cleaning.
- Do not direct steam at people, animals, or electrical outlets.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

## Accessories Included:



**Accessory  
Hose**



**Adjustable  
Steam Nozzle**



**Small Detail/  
Nylon Brush**



**Copper Grate  
Cleaner**



**Grout Brush**



**SteamGlove**



**(2) Microfiber  
Mop Pads  
(SMP20)**



**Garment  
Steamer**




**(2) Microfiber  
SteamGlove  
Pads**

**Figure 1: Included Accessories.** This image displays the main steam mop unit along with all its attachments: accessory hose, adjustable steam nozzle, small detail/nylon brush, copper grate cleaner, grout brush, SteamGlove, two microfiber mop pads (SMP20), garment steamer attachment, and two microfiber SteamGlove pads.

- 1x 2-in-1 Steam Mop & Handheld Steamer Unit
- 1x SteamGlove Accessory
- 2x Steam Mop Pads (Microfiber)
- 2x SteamGlove Pads (Microfiber)
- 1x Accessory Hose
- 1x Adjustable Steam Nozzle
- 1x Small Plastic Brush
- 1x Grout Brush
- 1x Copper Brush
- 1x Fabric Steamer Attachment
- 1x Accessory Bag

1. **Assemble the Handle:** Insert the handle into the main body of the steam mop until it clicks securely into place.
2. **Attach Mop Pad:** Place a clean microfiber mop pad onto the bottom of the steam mop head. The pad will attach via Velcro.
3. **Fill Water Tank:**
  - Ensure the appliance is unplugged.
  - Remove the water tank from the main unit.
  - Open the water tank cap and fill with distilled or demineralized water. Do not overfill.
  - Securely close the cap and reinsert the water tank into the unit.
4. **Prepare for Handheld Use (Optional):** To use the handheld steamer, detach the main body from the mop handle. Attach the accessory hose and desired cleaning attachment (e.g., SteamGlove, adjustable steam nozzle, brushes).

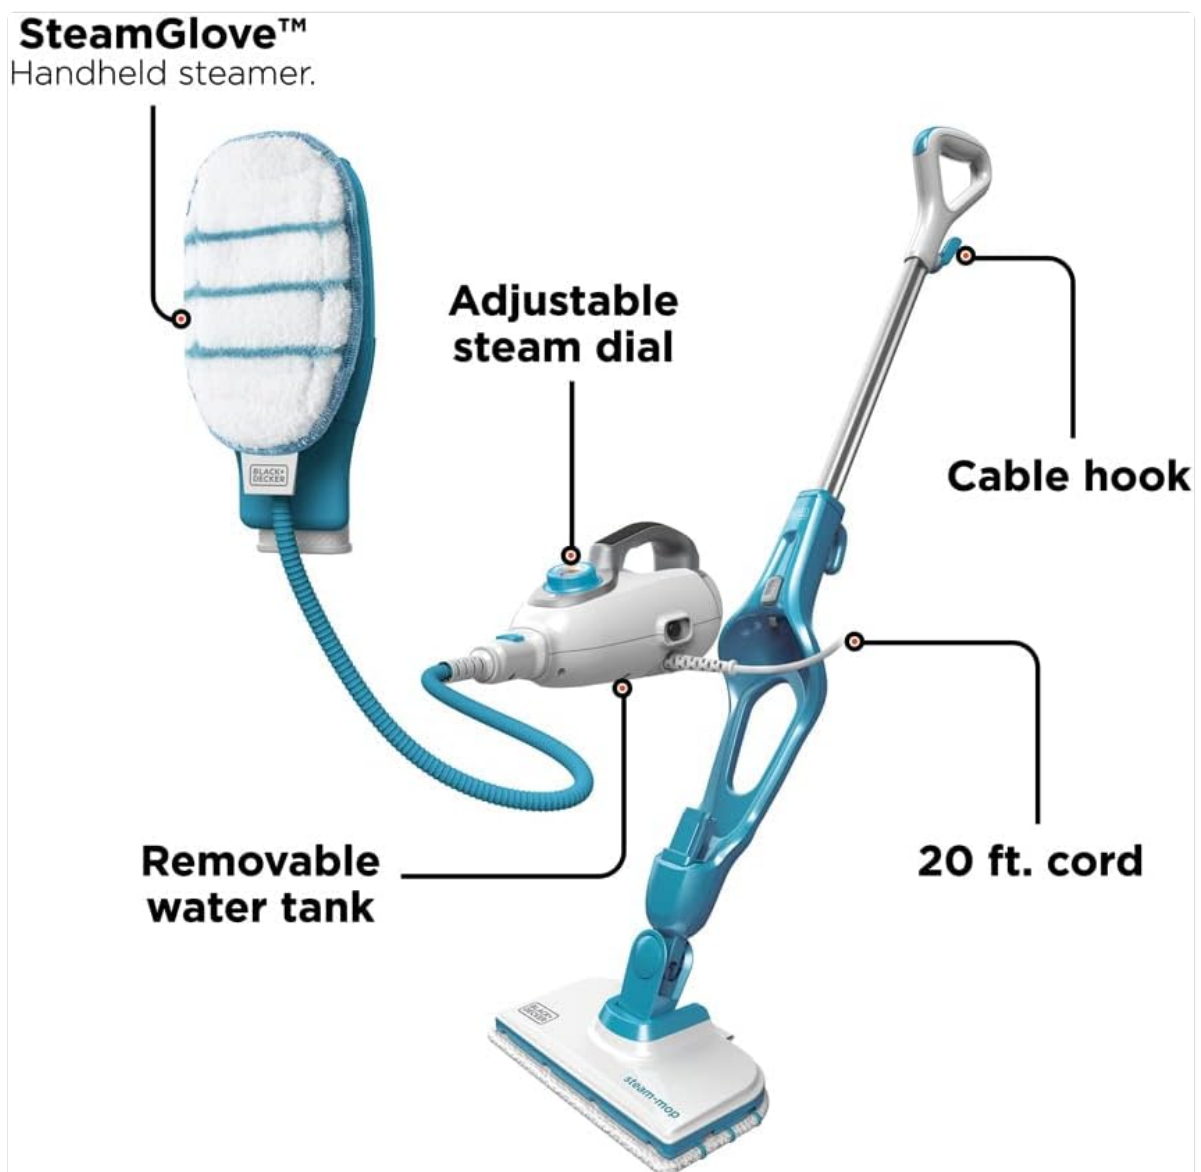

**Figure 2: Handheld Steamer Components.** This diagram illustrates the handheld steamer unit, highlighting the SteamGlove accessory, adjustable steam dial, removable water tank, cable hook, and the 20 ft. power cord.

## OPERATING INSTRUCTIONS


### General Operation

1. **Power On:** Plug the appliance into a suitable electrical outlet. The unit will begin to heat up.
2. **Fast Heat-Up:** The steam mop heats up in approximately 20 seconds.



**Figure 3: Quick Heating.** The steam mop is shown actively producing steam on a tiled floor, demonstrating its rapid heat-up capability within 20 seconds.

3. **Select Steam Level:** Use the SmartSelect variable steam control dial to choose the appropriate steam level for your cleaning task and surface type.

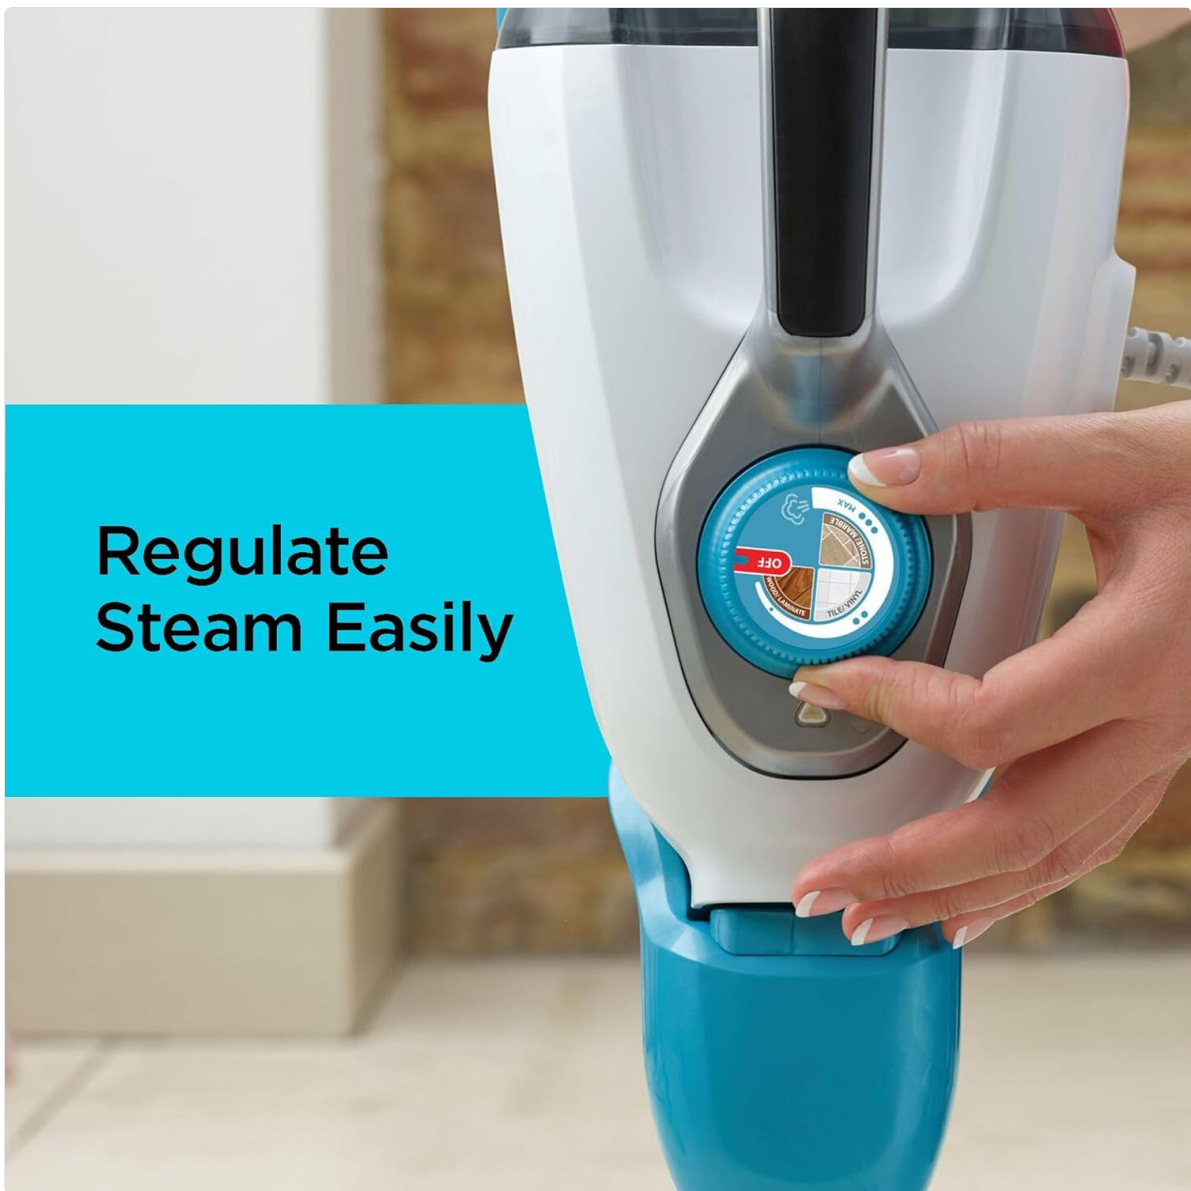

**Figure 4: Regulate Steam Easily.** A hand is shown turning the steam control dial, which features settings for different surfaces, allowing for precise steam regulation.

4. **Continuous Steam:** Steam flows continuously without the need to hold down a trigger, providing consistent cleaning power.

### Using the Steam Mop

- Ideal for sealed hardwood floors, tile, and grout.
- Move the mop slowly and steadily over the surface to allow steam to penetrate and clean effectively.
- The swiveling mop head allows for easy maneuverability around objects and into corners.
- The convertible mop-to-handle design allows for comfortable use on and above the floor.



## Convertible Mop-to-Handheld Design

**Figure 5: Convertible Mop-to-Handheld Design.** This image demonstrates the steam mop's ability to convert from a floor mop to a handheld unit, offering versatility for various cleaning tasks.

### Using the SteamGlove Handheld Steamer

- Attach the SteamGlove accessory to the handheld unit via the accessory hose.
- Wear the SteamGlove pad over your hand for direct and comfortable cleaning of various surfaces.
- Effective for sealed wood cabinets and furniture, sealed countertops, stainless steel appliances, plastic high chairs, showers, tubs, and more.



**Figure 6: SteamGlove in Use.** A person is using the SteamGlove to clean a surface, demonstrating the direct application of steam for effective cleaning.

### Using Other Attachments

The 7-in-1 system includes multiple attachments for specialized cleaning tasks:

- **Adjustable Steam Nozzle:** For focused steam application in tight spaces or for stubborn grime.
- **Small Plastic Brush:** For general scrubbing with steam.
- **Grout Brush:** Specifically designed for cleaning grout lines.
- **Copper Brush:** For heavy-duty scrubbing on durable surfaces like grills (use with caution to avoid scratching).
- **Fabric Steamer:** For refreshing and de-wrinkling fabrics.



**Figure 7: Versatile Cleaning Applications.** This collage demonstrates the 7-in-1 functionality, showing the steam mop cleaning floors, the handheld steamer cleaning a toilet, a grill, a window, a kitchen counter, and steaming garments.

## MAINTENANCE

### Cleaning Mop Pads and SteamGlove Pads

- The microfiber mop pads and SteamGlove pads are washable and reusable.
- Machine wash the pads with similar colors in warm water. Do not use bleach or fabric softeners.
- Air dry or tumble dry on low heat.



**Figure 8: Washable and Reusable Pads.** A microfiber mop pad is being inserted into a washing machine, illustrating that the pads are designed for easy cleaning and reuse.

## General Care

- After each use, unplug the appliance and allow it to cool completely before storing.
- Empty any remaining water from the tank.
- Wipe the exterior of the appliance with a damp cloth.
- Store the appliance in a dry, safe place.

## TROUBLESHOOTING

If you encounter issues with your steam mop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Appliance not heated. Steam dial set to OFF or low.	Refill water tank. Allow 20 seconds for heating. Adjust steam dial to desired setting.
Water leaking from unit.	Water tank cap not securely closed. Overfilled water tank.	Ensure water tank cap is tight. Do not overfill the water tank.
Mop pad not cleaning effectively.	Mop pad is dirty. Incorrect steam setting for surface.	Replace or clean mop pad. Adjust steam setting.

If the problem persists, please contact customer support.

## SPECIFICATIONS

---

- **Model:** HSMC1361SGP
- **Brand:** BLACK+DECKER
- **Power Source:** Corded Electric
- **Wattage:** 1300 watts
- **Voltage:** 230 Volts (Note: This product is designed for specific voltage regions. Verify compatibility with your local power supply.)
- **Heat Time:** Approximately 20 seconds
- **Item Weight:** 6 pounds (2.72 kg)
- **Product Dimensions:** 12"D x 7"W x 25"H (30.48 cm x 17.78 cm x 63.5 cm)
- **Special Feature:** Carry Handle
- **Surface Recommendation:** Tubs, Tile, Sealed Hardwood, Sealed Granite/Stone, Stainless Steel

## WARRANTY AND SUPPORT

---

This BLACK+DECKER product is covered by a **2-year limited warranty**. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official BLACK+DECKER website.

For additional assistance, you may also refer to the BLACK+DECKER Store on Amazon.