

Snow Peak SSD-704

Snow Peak Fal Pro.air 4 SSD-704 Tent User Manual

Model: SSD-704 | Brand: Snow Peak

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Snow Peak Fal Pro.air 4 SSD-704 tent. The Fal Pro.air series is designed for lightweight comfort, making it suitable for various outdoor conditions. Please read this manual thoroughly before using your tent to ensure safety and optimal performance.

2. INCLUDED COMPONENTS

The Snow Peak Fal Pro.air 4 SSD-704 tent package includes the following items:

- Main tent body
- Body frame (x2)
- Freely attached rope (8.9 ft x 4)
- Duralumin V-shaped pegs (x11)
- Repair pipe
- Main case
- Frame case
- Peg case
- Instruction manual (this document)

3. SETUP INSTRUCTIONS

Follow these steps for proper assembly of your Fal Pro.air 4 tent. It is recommended to practice setting up the tent in a familiar environment before your first outdoor use.

1. **Unpack Components:** Lay out all included components on a clean, flat surface. Ensure all parts listed in

Section 2 are present.

2. **Position Tent Body:** Unfold the main tent body and lay it flat at your desired campsite location. Ensure the ground is clear of sharp objects.
3. **Assemble Frame:** Connect the sections of the two duralumin body frames. Carefully insert the assembled frames into the designated sleeves on the tent body.
4. **Raise Tent:** Secure the ends of the frames to the tent's grommets or attachment points. This will raise the tent structure.
5. **Stake Down:** Use the duralumin V-shaped pegs to secure the tent corners and guylines to the ground. Ensure the tent is taut to withstand wind.
6. **Attach Ropes:** Attach the freely attached ropes to the designated points on the tent and stake them out to provide additional stability, especially in windy conditions.



Figure 3.1: Tent Setup Example. This image illustrates a possible configuration or packed state of the Snow Peak Fal Pro.air 4 tent, showing its compact design and components. Refer to the detailed steps above for assembly.

4. OPERATING INSTRUCTIONS

4.1 Ventilation

The Fal Pro.air 4 tent is designed with ventilation features to minimize condensation. Ensure all vents are open when conditions allow to promote airflow. In rainy or cold weather, balance ventilation with heat retention.

4.2 Entry and Exit

Use the tent's zippered doors for entry and exit. Always zip doors completely closed when not in use to prevent

insects, drafts, and moisture from entering.

4.3 Securing the Tent

Always ensure the tent is properly staked and guylined, especially in windy conditions. Adjust guylines as needed to maintain tension and stability. In severe weather, consider adding additional anchors or seeking more sheltered locations.

5. MAINTENANCE

5.1 Cleaning

After each use, clean your tent. The tent material should be hand washed. Use a mild soap and lukewarm water to gently clean dirty areas. Avoid harsh detergents or abrasive scrubbers, which can damage the fabric's waterproof coating.

5.2 Drying

Always ensure the tent is completely dry before packing it away. Storing a damp tent can lead to mildew growth, fabric degradation, and unpleasant odors. Air dry the tent in a shaded, well-ventilated area.

5.3 Storage

Store the tent in its main case in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid compressing the tent for extended periods, as this can affect the fabric's loft and waterproof properties.

5.4 Repairs

Minor punctures or tears in the fabric can be repaired using the included repair pipe or a suitable tent repair kit. For significant damage, contact Snow Peak customer support.

6. TROUBLESHOOTING

- Condensation Inside Tent:**
Ensure all available vents are open to promote airflow. If conditions are very humid or cold, some condensation is normal. Avoid cooking inside the tent without adequate ventilation.
- Tent Not Standing Firmly:**
Check that all poles are fully inserted into their sleeves and secured. Ensure all pegs are firmly driven into the ground and guylines are taut and properly adjusted.
- Water Leaking:**
Verify that all zippers are fully closed. Inspect the tent fabric for any tears or punctures. Ensure the tent is pitched on level ground to prevent water pooling. The tent features a PU coating for water resistance.
- Damaged Poles:**
Use the included repair pipe to temporarily fix a broken pole section. For permanent repair or replacement, contact Snow Peak customer support.

7. SPECIFICATIONS

Detailed specifications for the Snow Peak Fal Pro.air 4 SSD-704 tent:

Model Number	SSD-704
--------------	---------

Brand	Snow Peak
Occupancy	3 Person (Advertised as for 4, but specifications indicate 3 Person occupancy)
Seasons	4 Season
External Dimensions (W x D x H)	225 cm x 280 cm x 120 cm (88.9 x 110.2 x 47.2 inches)
Floor Dimensions (W x L)	210 cm x 210 cm (82.7 x 82.7 inches)
Maximum Height	113 cm (44.4 inches)
Weight (Main body and frame only)	2.23 kg (2230 g / 7.6 oz)
Storage Case Size (Main Case)	φ17 x 43 cm (6.7 x 16.9 inches)
Fly Sheet Material	20D silicone polyester mini ripstop, PU coating water pressure resistance 1,500 mm
Inner Wall Material	20D polyester mini ripstop
Bottom Material	30D nylon ripstop, PU coating water pressure resistance 1,500 mm
Frame Material	Duralumin A7001 (φ9.5 mm)
Water Resistance Technology	PU coating, Waterproof
Product Care Instructions	Hand Wash
Assembly Required	Yes, assembly instructions included

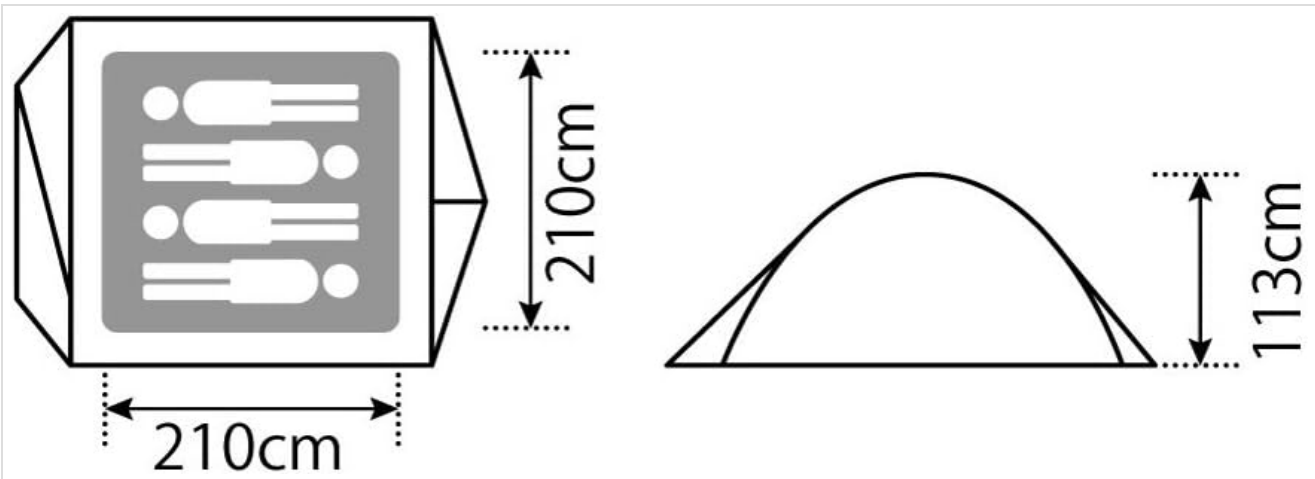


Figure 7.1: Tent Dimensions Diagram. This diagram illustrates the key dimensions of the Snow Peak Fal Pro.air 4 tent, including floor area (210cm x 210cm) and peak height (113cm). It also shows a suggested occupancy layout for four individuals.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the official Snow Peak website or the documentation provided at the time of purchase. Snow Peak products are known for their quality and durability.

For technical support, replacement parts, or any inquiries not covered in this manual, please contact Snow Peak customer service directly. Contact details can typically be found on the official Snow Peak website (www.snowpeak.com) or on your product packaging.

© 2023 Snow Peak. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question