

KLARSTEIN 4260509672283

Klarstein Bella/Lucia Food Processor Whisk Attachment Instruction Manual

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Klarstein Bella/Lucia food processor whisk attachment. Please read these instructions carefully before first use to ensure optimal performance and longevity of the product.

This whisk attachment is designed for specific Klarstein Bella and Lucia food processor models, providing efficient mixing and whipping capabilities for various culinary tasks.

2. PRODUCT OVERVIEW



The image above shows the stainless steel whisk attachment. It features multiple wire loops securely connected to a black plastic base, designed for easy attachment to compatible Klarstein food processors.

This whisk is ideal for aerating ingredients and creating light, fluffy textures.

3. COMPATIBILITY

This whisk attachment is compatible with the following Klarstein food processor models:

- **Klarstein Lucia Food Processors:**

- Model 10006254 (Rossa)
- Model 10006255 (Argentea)
- Model 10008235 (Morena)
- Model 10008236 (White)
- Model 10008237 (Orangina)

- **Klarstein Bella Food Processors:**

- Model 10005314 (Argentea)
- Model 10005315 (Nera)
- Model 10005316 (Rossa)
- Model 10008232 (Morena)
- Model 10008233 (Bianca)
- Model 10008234 (Orangina)

Ensure your food processor model number matches one of the listed compatible models before attempting to use this attachment.

4. SETUP AND INSTALLATION

1. **Safety First:** Always ensure your Klarstein food processor is unplugged from the power outlet before attaching or removing any accessories.
2. **Prepare the Food Processor:** Lift the motor head of your food processor (if applicable) or ensure the attachment hub is accessible.
3. **Attach the Whisk:** Align the top of the whisk attachment with the attachment point in the food processor's mixing head. Push upwards and twist gently until it locks securely into place. Refer to your food processor's main instruction manual for specific attachment procedures if needed.
4. **Lower the Head:** Carefully lower the motor head back into position, ensuring the whisk is correctly positioned within the mixing bowl.

5. OPERATING INSTRUCTIONS

The whisk attachment is designed for tasks requiring aeration, such as whipping cream, beating egg whites, or mixing light batters.

1. **Add Ingredients:** Place your ingredients into the mixing bowl.
2. **Select Speed:** Plug in the food processor. Start with a low speed and gradually increase to the desired setting. Avoid starting at maximum speed immediately to prevent splashing.
3. **Monitor Progress:** Observe the consistency of your mixture. Stop the food processor once the desired result is achieved.
4. **Remove Attachment:** Unplug the food processor. Lift the motor head and carefully detach the whisk by twisting and pulling downwards.

Note: Always refer to your Klarstein food processor's main instruction manual for detailed operating procedures and safety guidelines.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your whisk attachment.

- **Hand Washing Recommended:** Clean the whisk attachment immediately after each use with warm, soapy water. Rinse thoroughly and dry completely.
- **Avoid Dishwasher:** **DO NOT** clean this whisk attachment in a dishwasher. Dishwasher detergents and high temperatures can cause discoloration and damage to the stainless steel material.
- **Storage:** Store the clean and dry whisk attachment in a safe place to prevent bending or damage to the wires.

7. TROUBLESHOOTING

- **Whisk not attaching securely:** Ensure the attachment is correctly aligned with the food processor's hub and twisted until it clicks into place. Check for any obstructions.
- **Whisk appears discolored:** This is likely due to dishwasher use. Discoloration is cosmetic and generally does not affect performance, but it is irreversible. Always hand wash as instructed.
- **Whisk wires are bent:** Handle the whisk with care. Bent wires may affect performance. If severely damaged, the whisk may need replacement.

For issues not covered here, please consult your food processor's main manual or contact Klarstein customer support.

8. SPECIFICATIONS

Brand	KLARSTEIN
Model Number (Attachment)	4260509672283
Material	Stainless Steel
Dimensions (L x W x H)	12 cm x 12 cm x 12 cm (approximate)
Weight	100 g
Dishwasher Safe	No

Note: Power and voltage specifications (e.g., 1200 Watts, 110 Volts) refer to the compatible Klarstein food processor unit, not the whisk attachment itself.

9. WARRANTY AND SUPPORT

For warranty information regarding your Klarstein food processor and its accessories, please refer to the original instruction manual provided with your main appliance. This attachment is a replacement part and its warranty may be covered under the main product's terms.

Should you require further assistance, have questions about compatibility, or need to report a defect, please contact Klarstein customer service directly. Contact details can typically be found on the Klarstein official website or in your food processor's main manual.

