

Manuals.plus /

› Lodge /

› Lodge Round Tempered Glass Lid - 10.25 Inch User Manual

Lodge Lodge

Lodge Round Tempered Glass Lid - 10.25 Inch User Manual

Model: Lodge

INTRODUCTION

The Lodge 10.25-inch Tempered Glass Lid is designed to enhance your cooking experience by effectively locking in moisture and flavor during cooking. Its transparent design allows for convenient visual monitoring of your food without needing to lift the lid, thus preserving heat and steam. This lid is a versatile accessory for various Lodge cookware items.



Figure 1: The Lodge 10.25-inch Tempered Glass Lid, featuring a clear glass body, stainless steel rim, and a black silicone knob.

SAFETY INFORMATION

- **Oven Safety:** The lid is oven safe up to 400°F (204°C). Do not exceed this temperature.

- **Handling Hot Lid:** Always use oven mitts or a heat-resistant cloth when handling the lid during or immediately after cooking, as the knob and rim can become hot.
- **Tempered Glass:** This lid is made from tempered glass, which is designed to be more durable and thermal shock resistant than regular glass. However, avoid sudden extreme temperature changes (e.g., placing a hot lid directly into cold water) to prevent potential shattering.
- **Avoid Impact:** Do not drop the lid or strike it against hard surfaces, as this can compromise the integrity of the glass.
- **Inspection:** Before each use, inspect the lid for any cracks, chips, or damage. Do not use a damaged lid.

PRODUCT OVERVIEW

The Lodge Tempered Glass Lid consists of three main components:

1. **Tempered Glass Body:** The clear, heat-resistant glass allows for easy viewing of food.
2. **Stainless Steel Rim:** Provides durability and a secure fit on compatible cookware.
3. **Silicone Knob:** Designed for a comfortable grip and heat resistance during use.



Figure 2: The Lodge Tempered Glass Lid placed on a skillet, demonstrating its transparent design for food monitoring.

SETUP

Before first use, wash the Lodge Tempered Glass Lid thoroughly with warm, soapy water. Rinse completely and dry with a soft cloth. Ensure the lid is completely dry before storing or using.

OPERATING INSTRUCTIONS

The Lodge 10.25-inch Tempered Glass Lid is designed for use with Lodge cookware items that are approximately 10 to 10.25 inches in diameter. This includes, but is not limited to, models such as:

- L8SK3 (10.25 inch skillet)
- L8SKG3 (10.25 inch grill pan)
- L8CF3
- L8DSK3
- L8DSKG3
- L8DO3 (5 quart / 10.25 inch cast iron Dutch oven)
- LCS3
- LCC3
- L8DOL3

- L8DD3
- L8GP3

To use the lid:

1. Place the lid securely on top of your compatible Lodge skillet, pan, or Dutch oven.
2. The clear glass allows you to monitor the cooking process without lifting the lid, which helps to retain heat and moisture.
3. Use the silicone knob to lift and remove the lid. Always use caution as steam may escape and the lid may be hot.



Figure 3: Various Lodge cookware pieces, including skillets and Dutch ovens, demonstrating the versatility of the glass lids.

CARE AND MAINTENANCE

Proper care will ensure the longevity of your Lodge Tempered Glass Lid.

- **Cleaning:** Hand washing is recommended. Wash the lid with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could scratch the glass or stainless steel.
- **Drying:** Dry the lid immediately after washing to prevent water spots and maintain its clear appearance.

- **Storage:** Store the lid in a dry place. If stacking with other cookware, consider placing a soft cloth between the lid and other items to prevent scratches.
- **Dishwasher Use:** While some sources may suggest dishwasher safety, the manufacturer's specifications indicate that the lid is **not** dishwasher safe. Hand washing is recommended to preserve the lid's quality and appearance.

TROUBLESHOOTING

Most issues with the Lodge Tempered Glass Lid are related to proper usage and care.

Problem	Possible Cause	Solution
Lid does not fit properly.	Incorrect cookware size.	Ensure the cookware diameter is 10 to 10.25 inches. Refer to the "Operating Instructions" section for compatible models.
Excessive condensation on lid.	Normal during cooking; indicates moisture retention.	This is expected. If condensation obscures view, briefly lift the lid to release some steam, then replace.
Lid appears cloudy or has water spots.	Improper drying or mineral deposits from water.	Ensure the lid is dried immediately after washing. For stubborn spots, use a vinegar solution or a glass cleaner designed for cookware.

SPECIFICATIONS

Material	Tempered Glass, Stainless Steel, Silicone
Color	Clear with Black Knob
Product Dimensions	10.44"L x 10.44"W
Item Weight	1.6 Pounds (approx. 0.73 kg)
Shape	Round
Number of Pieces	1
Oven Safe Temperature	Up to 400°F (204°C)
Dishwasher Safe	No (Hand wash recommended)
Compatible Cookware Diameter	10 to 10.25 inches
UPC	075536064376

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please visit the official Lodge Cast Iron website or contact their customer service directly.

Visit Lodge Cast Iron Official Website

