

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Parkside](#) /

› Parkside PSS 65 A1 Sharpening Station User Manual

Parkside

Parkside PSS 65 A1 Sharpening Station

USER MANUAL

1. Introduction

This user manual provides comprehensive instructions for the safe and efficient operation, setup, and maintenance of your Parkside PSS 65 A1 Sharpening Station. This versatile tool is designed for quick and easy sharpening of various cutting tools, including blades, drill bits, and chisels, utilizing a high-quality diamond abrasive disc for precise results. Please read this manual thoroughly before first use and keep it for future reference.

2. Safety Instructions

Always observe basic safety precautions when using electrical tools to reduce the risk of fire, electric shock, and personal injury.

- **Eye Protection:** Always wear appropriate eye protection, such as safety goggles, to protect against flying debris.
- **Work Area:** Ensure your work area is clean, well-lit, and free from clutter. Do not operate the tool in damp or wet conditions.
- **Electrical Safety:** Before connecting the tool to the power supply, ensure the voltage matches the rating plate. Always unplug the tool from the power outlet before making any adjustments, changing accessories, or performing maintenance.
- **Ventilation:** Operate the sharpening station in a well-ventilated area.
- **Stability:** Place the sharpening station on a stable, level surface to prevent tipping during operation.
- **Keep Children Away:** Do not allow children or untrained persons to operate this tool. Store the tool out of reach of children.
- **Proper Use:** Use the tool only for its intended purpose as described in this manual. Do not force the tool.
- **Maintenance:** Regularly inspect the power cord and plug for damage. Do not use the tool if any part is damaged.

3. Package Contents

Carefully unpack the sharpening station and check for the following components:

- 1 x Parkside PSS 65 A1 Sharpening Station main unit
- 1 x Attachment for knives, scissors, and blades
- 1 x Attachment for twist drills (3 to 10 mm diameter)
- 1 x Attachment with magnetic fixing aid for chisels (6 to 51 mm wide) and scissors
- 1 x Replacement diamond abrasive disc
- 1 x User Manual (this document)

If any components are missing or damaged, please contact customer support.

4. Product Features and Components

The Parkside PSS 65 A1 Sharpening Station is designed for versatility and ease of use. Key features include an adjustable angled grinding mechanism, a protective spark shield, and various attachments to accommodate different tool types.



Figure 4.1: Overview of the Parkside PSS 65 A1 Sharpening Station main unit, showing its compact design and various ports for attachments.



MULTIAFILADORA ELÉCTRICA

Figure 4.2: The sharpening station in use, illustrating its capability to sharpen various tools including knives, drill bits, and chisels with dedicated attachments.

5. Setup

1. **Unpacking:** Remove all packaging materials and ensure the unit is free from damage.
2. **Placement:** Place the sharpening station on a clean, stable, and level workbench or surface. Ensure there is adequate space around the unit for safe operation and ventilation.
3. **Power Connection:** Connect the power cord to a suitable 230 Volt AC power outlet. Ensure the power switch on the unit is in the "OFF" position before plugging it in.
4. **Attachment Installation:** Select the appropriate sharpening attachment for the tool you intend to sharpen. Align the attachment with its corresponding port on the main unit and securely insert it.

6. Operating Instructions

Before operating, ensure you have read and understood all safety instructions. Always wear safety goggles.

6.1 General Operation

- Ensure the correct attachment is securely installed.
- Turn the power switch to the "ON" position. The diamond abrasive disc will begin to rotate.
- Always apply light, consistent pressure when sharpening. Excessive force can damage the tool or the sharpening disc.
- After sharpening, turn the power switch to "OFF" and wait for the disc to stop completely before removing the sharpened tool.

6.2 Sharpening Knives, Scissors, and Blades

1. Install the attachment for knives, scissors, and blades.
2. For knives, insert the blade into the appropriate slot, ensuring the cutting edge faces the abrasive disc. Pull the blade slowly and evenly through the slot, maintaining consistent pressure. Repeat for the other side of the blade if necessary.
3. For scissors, open them fully and insert one blade into the designated slot. Sharpen one side, then repeat for the other blade.
4. For other blades, follow similar procedures, ensuring the blade angle is correctly aligned with the sharpening slot.

6.3 Sharpening Twist Drills (3-10 mm)

1. Install the attachment for twist drills.
2. Select the correct diameter hole for your drill bit (3 to 10 mm).
3. Insert the drill bit into the selected hole, ensuring it is seated correctly.
4. Gently rotate the drill bit while applying light pressure against the abrasive disc. Sharpen one cutting edge, then rotate the drill bit 180 degrees to sharpen the other cutting edge.
5. Check the sharpness and repeat if necessary.

6.4 Sharpening Chisels (6-51 mm)

1. Install the attachment for chisels, which includes a magnetic fixing aid.
2. Place the chisel onto the magnetic fixing aid, ensuring the bevelled edge is facing the abrasive disc. The magnetic aid helps maintain the correct sharpening angle.
3. Adjust the angle if necessary using the adjustable angled grinding feature.
4. Gently slide the chisel back and forth across the abrasive disc, applying light, even pressure.
5. Periodically check the sharpness and the formation of a burr on the opposite side of the edge. Once a burr is formed along the entire edge, the chisel is sharp.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your sharpening station.

- **Cleaning:** Always unplug the unit before cleaning. Use a soft, dry cloth to wipe down the exterior. Do not use abrasive cleaners or solvents. Remove any sharpening dust or debris from the attachments and the main unit.
- **Diamond Disc Replacement:** The diamond abrasive disc is a wear part and will need to be replaced over time. Refer to the included replacement diamond disc for future changes. To replace, ensure the unit is unplugged. Follow the instructions in the manual for safely removing the old disc and installing the new one.
- **Storage:** Store the sharpening station and its attachments in a clean, dry place, out of reach of children.

8. Troubleshooting

If you encounter issues with your sharpening station, refer to the following table:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply. Power switch is off. Damaged power cord/plug.	Check power outlet and connection. Ensure power switch is in "ON" position. Do not use if damaged; contact qualified service personnel.
Poor sharpening results.	Worn diamond disc. Incorrect sharpening angle. Insufficient pressure.	Replace the diamond abrasive disc. Ensure tool is correctly seated in the attachment and angle is adjusted. Apply light, consistent pressure.
Excessive vibration or noise.	Unit not on a stable surface. Damaged or loose diamond disc.	Place unit on a firm, level surface. Check if the disc is securely fastened and undamaged. Replace if necessary.

If the problem persists after attempting these solutions, please contact customer support.

9. Technical Specifications

Specification	Value
Brand	Parkside
Model Number	IAN-100370602
Manufacturer	Grizzly Tools
Power Source	Corded Electric
Voltage	230 Volts
Maximum Rotation Speed	6700 rpm
Minimum Rotation Speed	6700 rpm
Item Weight	27 Grams
Package Dimensions	21.8 x 19.9 x 12.8 cm
Special Features	Adjustable angled grinding, protective spark shield, various attachments for different tools
Included Components	1 attachment for knives, scissors and blades, 1 attachment for twist drills (3-10 mm diameter), 1 attachment with magnetic fixing aid for chisels (6-51 mm wide) and scissors, 1 replacement diamond disc

10. Warranty and Support

This Parkside PSS 65 A1 Sharpening Station comes with a standard manufacturer's warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions, including the

warranty period and coverage details.

For technical support, spare parts, or warranty claims, please contact the Parkside customer service department or your local retailer. Keep your proof of purchase for any warranty-related inquiries.