

Faladesa B01MY4CK03

Faladesa Ceiling Lamp Instruction Manual

Model: B01MY4CK03

[Safety Information](#) [Package Contents](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be hazardous or fatal. This manual contains important information for the safe installation and operation of this lighting fixture.

- **WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installing or servicing.
- All electrical connections must be in accordance with local codes and ordinances, National Electric Code (NEC), and ANSI/NFPA 70-1999.
- Consult a qualified electrician if you are unsure about wiring procedures.
- This fixture is UL-rated for damp locations. Do not install in areas with direct water exposure.
- Do not exceed the maximum wattage for bulbs specified (E-27 type, 3 bulbs).
- Handle glass components with care to prevent breakage and injury.

2. PACKAGE CONTENTS

Carefully unpack your new lighting fixture and lay out all parts on a clear area. Ensure all items listed below are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- Faladesa Ceiling Lamp Fixture (Metal Base with Glass Shade)
- Mounting Bracket
- Hardware Pack (screws, wire nuts)

Note: Three E-27 light bulbs are **NOT INCLUDED** and must be purchased separately.

3. SETUP AND INSTALLATION

3.1 Tools Required (Not Included)

- Phillips Head Screwdriver
- Flathead Screwdriver
- Wire Strippers
- Electrical Tape
- Safety Glasses
- Ladder

3.2 Pre-Installation

1. **Turn off power:** Locate the circuit breaker or fuse box and turn off the power to the junction box where you will be installing the fixture. Verify the power is off using a voltage tester.
2. **Prepare the area:** Clear the work area and ensure you have a stable ladder.

3.3 Mounting the Fixture

1. Attach the mounting bracket to the ceiling junction box using the screws provided. Ensure the bracket is securely fastened.
2. Make electrical connections: Connect the fixture's wires to the house wires according to the following:
 - Connect the **black** wire from the fixture to the **black** (hot) wire from the junction box.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box.
 - Connect the **ground** wire (bare copper or green) from the fixture to the **ground** wire from the junction box.

Secure all connections with wire nuts and wrap with electrical tape for added safety.

3. Carefully tuck all wires into the junction box.
4. Align the fixture's base with the mounting bracket and secure it with the provided screws.
5. Install three E-27 bulbs (not included) into the sockets. Do not overtighten.
6. Carefully place the glass shade onto the fixture and secure it according to the design (typically with decorative nuts or clips).



Image showing the Faladesa Ceiling Lamp in various colors (yellow, orange, green, black) and a technical drawing with dimensions: 12.99 inches length, 12.99 inches width, and 2.75 inches depth.

4. OPERATION

Once the Faladesa Ceiling Lamp is properly installed and bulbs are inserted, restore power at the circuit breaker. The lamp can then be operated using a standard wall switch connected to the fixture's circuit.

4.1 Bulb Replacement

1. **Turn off power:** Always turn off the power to the fixture at the circuit breaker before replacing bulbs.
2. Allow bulbs to cool completely before touching them.
3. Carefully remove the glass shade to access the bulbs.
4. Unscrew the old E-27 bulb(s) counter-clockwise.
5. Screw in new E-27 bulb(s) clockwise. Do not overtighten.
6. Reattach the glass shade securely.
7. Restore power at the circuit breaker.

5. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your Faladesa Ceiling Lamp.

- **Cleaning:** Turn off power before cleaning. Use a soft, dry or slightly damp cloth to wipe the metal base and glass shade. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.
- **Bulb Type:** Always use E-27 type bulbs. Refer to the specifications for maximum wattage.

6. TROUBLESHOOTING

If you experience issues with your Faladesa Ceiling Lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture	Check circuit breaker or fuse. Ensure wall switch is on.
	Loose or incorrect wiring	Turn off power and check all wire connections. Consult a qualified electrician if unsure.
	Faulty bulb(s)	Replace bulb(s) with new E-27 bulbs.
Light flickers	Loose bulb	Turn off power, tighten bulb(s).
	Incompatible dimmer switch	Ensure dimmer switch is compatible with the bulb type used.
	Loose wiring connection	Turn off power and check all wire connections.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Faladesa
Model Number	B01MY4CK03
Dimensions (L x W x H)	12.99 inches x 12.99 inches x 2.75 inches
Bulb Type	E-27 (3 bulbs required, not included)
Material	Metal base, Glass shade
Mounting Type	Ceiling Mount
Location Rating	UL-rated for damp locations
Item Weight	1.5 Pounds
Power Source	Corded Electric

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Faladesa customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact information for support can typically be found on the product packaging or the manufacturer's official website.

© 2023 Faladesa. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question