

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [iTek](#) /

> [iTek 1HSC-12/0031 1080p Ultra HD Action Sports Camera User Manual](#)

iTek 1HSC-12/0031

iTek 1HSC-12/0031 1080p Ultra HD Action Sports Camera User Manual

Model: 1HSC-12/0031

INTRODUCTION

Thank you for purchasing the iTek 1080p Ultra HD Action Sports Camera, model 1HSC-12/0031. This manual provides essential information for setting up, operating, and maintaining your new action camera. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x iTek 1080p Ultra HD Action Sports Camera
- 1x Waterproof case
- 5x Mounts
- 1x Quick clip
- Bandages (straps)
- 1x USB cable

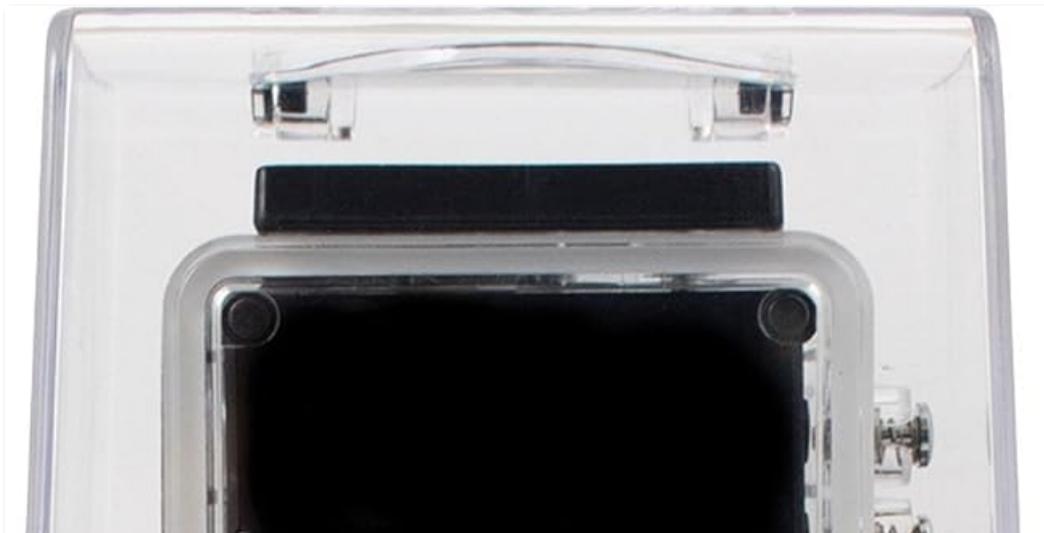




Image: Product packaging displaying the iTek Action Camera and its included accessories such as the waterproof case, various mounts, quick clip, bandages, and USB cable.

SETUP

1. **Insert Micro SD Card:** Open the battery/card compartment. Insert a Micro SD card (not included) into the designated slot. The camera supports Micro SD cards. Ensure the card is formatted before first use (refer to the camera's menu settings).
2. **Install Battery:** This camera requires 1 Lithium Ion battery (not included). Open the battery compartment and insert the battery, ensuring correct polarity.
3. **Charge the Camera:** Connect the camera to a power source using the provided USB cable. The charging indicator will illuminate. Allow the camera to fully charge before first use.
4. **Attach Waterproof Case:** For water activities or protection against impacts, place the camera inside the waterproof case. Ensure the case is securely latched.
5. **Mounting:** Use the various included mounts and quick clip to attach the camera to helmets, handlebars, or other surfaces as needed for your activity.



Image: The iTek Action Camera enclosed within its transparent waterproof case, showing an underwater scene on its 2-inch display screen.

Power On/Off

- To power on, press and hold the Power/Mode button for a few seconds.
- To power off, press and hold the Power/Mode button again until the screen turns off.

Mode Selection

Press the Power/Mode button repeatedly to cycle through different modes: Video Recording, Photo Mode, Playback, and Settings. The current mode will be displayed on the 2-inch screen.

Video Recording (1080p)

- In Video Recording mode, press the Shutter/OK button to start recording. A red indicator light will flash, and a timer will appear on the screen.
- Press the Shutter/OK button again to stop recording. The video will be saved in AVI format.
- The camera supports 1080p video capture resolution.

Photo Capture

- In Photo Mode, press the Shutter/OK button to take a picture. The image will be saved in JPEG format.

Shooting Modes

Access the settings menu to select various shooting modes, including:

- Time Lapse
- Night
- Sports
- Landscape

Connectivity

Connect the camera to a computer using the USB cable to transfer files. The camera is compatible with devices that have a USB port.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Do not use harsh chemicals.
- **Waterproof Case Care:** After use in water, rinse the waterproof case with fresh water and allow it to air dry. Inspect the seals regularly for any damage.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Recharge the battery regularly, even if not in use, to maintain its lifespan. Avoid fully discharging the battery.

TROUBLESHOOTING

- **Camera not powering on:**
 - Ensure the battery is fully charged.
 - Check that the battery is inserted correctly.

- **Cannot record video/take photos:**

- Verify that a Micro SD card is inserted and properly formatted.
- Check if the Micro SD card has sufficient free space.
- Ensure the camera is in the correct mode (Video or Photo).

- **Poor image/video quality:**

- Clean the camera lens.
- Ensure adequate lighting conditions.
- Check camera settings for resolution and white balance.

- **Computer not recognizing camera:**

- Ensure the USB cable is securely connected to both the camera and the computer.
- Try a different USB port or cable.
- The camera functions as a mass storage device; no specific drivers are typically required for basic file transfer on most operating systems.

SPECIFICATIONS

Brand	iTek
Model Number	1HSC-12/0031
Video Capture Resolution	1080p
Video Capture Format	AVI
Supported Image Format	JPEG
Screen Size	2 Inches
Flash Memory Type	Micro SD
Connectivity Technology	USB
Water Resistance Level	Waterproof
Features	Lightweight, Compact, Rugged Design
Shooting Modes	Time Lapse, Night, Sports, Landscape
Digital Zoom	4x
Item Weight	1.1 Pounds
Battery Requirement	1 Lithium Ion battery (not included)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official iTek website. Keep your proof of purchase for any warranty claims.

