

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [auna](#) /

> [Auna Melodie/Stanford Internet Radio User Manual](#)

auna KS2-Melodia CD WD

Auna Melodie/Stanford Internet Radio

Model: KS2-Melodia CD WD

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your Auna Melodie/Stanford Internet Radio. Please read this manual thoroughly before using the device to ensure proper and safe operation. Keep this manual for future reference.

SAFETY INSTRUCTIONS

To prevent fire, electric shock, or product damage, please observe the following safety precautions:

- **Power Source:** Use only the power adapter supplied with the unit. Ensure the voltage matches the requirements of your region.
- **Ventilation:** Do not block any ventilation openings. Allow sufficient space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

PRODUCT OVERVIEW

Front Panel Controls and Display



Figure 1: Front view of the Auna Melodie/Stanford Internet Radio. It features a central LCD display, two front-facing speakers, a CD loading slot, and various control buttons and knobs for navigation, volume, and source selection.

1. **1. Display:** Shows current mode, station information, time, etc.
2. **2. SNOOZE/SLEEP Button:** Activates snooze during alarm, sets sleep timer.
3. **3. SOURCE Button:** Selects input source (Internet Radio, FM, DAB+, CD, Bluetooth, AUX).
4. **4. TUNING / PREV / NEXT Knobs:** Used for tuning radio frequencies, navigating menus, and skipping tracks.
5. **5. INFO Button:** Displays additional information about the current track or station.
6. **6. ALARM Button:** Sets and manages alarms.
7. **7. AUTO SCAN Button:** Initiates automatic scanning for radio stations.
8. **8. EARPHONE Jack:** 3.5mm output for headphones.
9. **9. STANDBY / VOLUME Knob:** Powers the unit on/off and adjusts volume.
10. **10. EJECT Button:** Ejects a CD from the disc slot.
11. **11. CD Slot:** For inserting audio CDs.

Rear Panel Connections



Figure 2: Rear view of the Auna Melodie/Stanford Internet Radio. It shows the telescopic antenna, DC IN port for power, and AUX IN port for external audio devices. The product label with model and serial information is also visible.

1. **1. DC IN (12V 2A):** Power input for the AC adapter.

2. **AUX IN:** 3.5mm stereo input for connecting external audio devices.
3. **Telescopic Antenna:** For FM and DAB+ radio reception. Extend fully for best reception.

Remote Control



Figure 3: The included remote control for the Auna Melodie/Stanford Internet Radio. It provides convenient access to various functions including power, volume, source selection, navigation, and playback controls.

The remote control allows for convenient operation of the radio from a distance. It requires 2x AAA batteries (not included).

- **Power Button:** Turns the unit on or off.
- **Mute Button:** Mutes or unmutes the audio.
- **Volume +/-:** Adjusts the volume level.
- **Navigation Buttons (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Source Button:** Cycles through input sources.
- **Play/Pause, Stop, Skip:** CD and Bluetooth playback controls.
- **Preset Buttons:** For saving and recalling favorite stations.
- *(Note: Specific button functions may vary slightly. Refer to the on-screen menu for detailed remote control interactions.)*

SETUP

1. Unpacking

Carefully remove the radio and all accessories from the packaging. Retain the packaging materials for future transport or storage.

- Auna Melodie/Stanford Internet Radio
- Power Adapter
- Remote Control (batteries not included)
- User Manual (this document)

2. Power Connection

1. Connect the supplied power adapter to the **DC IN (12V 2A)** port on the rear of the radio.
2. Plug the other end of the power adapter into a suitable wall outlet.
3. The radio will enter standby mode.

3. Antenna Connection

For optimal FM and DAB+ radio reception, fully extend the telescopic antenna located on the rear of the unit.

4. Initial Setup (First Use)

When you power on the radio for the first time, it will guide you through an initial setup wizard:

1. Press the **STANDBY / VOLUME** knob to turn on the radio.
2. **Language Selection:** Use the **TUNING** knob to select your preferred language and press **OK** (by pressing the knob) to confirm.
3. **Network Connection:** The radio will prompt you to connect to a Wi-Fi network for Internet Radio functionality.
 - Select "Scan Network" to find available Wi-Fi networks.
 - Choose your network from the list.
 - Enter the Wi-Fi password using the **TUNING** knob to navigate characters and **OK** to select.
 - Once connected, the radio will confirm the connection.
4. **Time and Date:** The radio will attempt to synchronize time and date via the internet. You can also set it manually if preferred.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the radio from standby, press the **STANDBY / VOLUME** knob.
- To put the radio into standby mode, press the **STANDBY / VOLUME** knob again.

Source Selection

Press the **SOURCE** button repeatedly to cycle through the available input modes:

- Internet Radio
- DAB+ Radio
- FM Radio
- CD Player
- Bluetooth

- AUX In

Internet Radio

Requires an active internet connection.

1. Select "Internet Radio" as the source.
2. Navigate through categories (e.g., "Local Stations", "Genre", "Search") using the **TUNING** knob and press **OK** to select.
3. Select your desired station.
4. To save a station as a preset, press and hold the **OK** button or a dedicated preset button on the remote.

DAB+ Radio

Ensure the telescopic antenna is fully extended.

1. Select "DAB+ Radio" as the source.
2. The radio will automatically scan for available DAB+ stations on first use. You can also initiate a scan by pressing the **AUTO SCAN** button.
3. Use the **TUNING** knob to browse the list of found stations and press **OK** to select.

FM Radio

Ensure the telescopic antenna is fully extended.

1. Select "FM Radio" as the source.
2. **Auto Scan:** Press the **AUTO SCAN** button to automatically scan and save available FM stations.
3. **Manual Tuning:** Use the **TUNING** knob to manually adjust the frequency.
4. To save a station as a preset, press and hold the **OK** button or a dedicated preset button on the remote.

CD Playback

1. Select "CD Player" as the source.
2. Gently insert an audio CD into the CD slot with the label side facing up. The radio will automatically load the CD.
3. Playback will begin automatically. Use the **TUNING** knobs (PREV/NEXT) or remote control for track navigation (play, pause, skip).
4. Press the **EJECT** button to remove the CD.

Bluetooth Pairing

1. Select "Bluetooth" as the source. The radio will enter pairing mode and display "Pairing".
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Auna Melodie" (or similar name) from the list of devices.
4. Once paired, the radio will confirm the connection, and you can stream audio from your device.

AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX IN** port on the rear of the radio using a 3.5mm audio cable (not supplied).
2. Select "AUX In" as the source.
3. Audio from the connected device will now play through the radio's speakers. Control playback from your external device.

Alarm and Sleep Timer

- **Alarm:** Press the **ALARM** button to set up alarms. You can configure alarm time, source (buzzer, radio), and frequency (daily, once, weekends, weekdays).
- **Sleep Timer:** Press the **SNOOZE/SLEEP** button repeatedly to set a sleep timer (e.g., 15, 30, 60 minutes). The radio will automatically turn off after the set time.
- **Snooze:** When an alarm sounds, press the **SNOOZE/SLEEP** button to temporarily silence it for a few minutes.

System Settings

Access the main menu to configure various system settings:

- **Network:** Manage Wi-Fi connections, view network information.
- **Time/Date:** Set time format, manual time, auto-update.
- **Language:** Change the display language.
- **Software Update:** Check for and install firmware updates.
- **Factory Reset:** Resets all settings to their default values. *(Use with caution, as all saved settings and presets will be lost.)*

MAINTENANCE

Cleaning

- Always unplug the radio from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD slot, use a specialized CD lens cleaner disc if necessary.

Storage

If you plan to store the radio for an extended period:

- Unplug the power adapter.
- Remove batteries from the remote control.
- Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is recommended to use the original packaging for storage to protect the unit.

TROUBLESHOOTING

If you encounter issues with your Auna Melodie/Stanford Internet Radio, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power / Unit does not turn on.	Power adapter not connected properly or power outlet is faulty.	Ensure the power adapter is securely connected to both the radio and a working wall outlet. Try a different outlet.
No sound.	Volume is too low or muted. Incorrect source selected.	Increase the volume. Check if the unit is muted. Ensure the correct input source is selected.

Problem	Possible Cause	Solution
Internet Radio not connecting / buffering.	Weak Wi-Fi signal or incorrect Wi-Fi password. Internet connection issue.	Check your Wi-Fi password in the settings. Move the radio closer to your Wi-Fi router. Restart your router. Verify your internet connection is active.
Poor FM/DAB+ reception.	Antenna not extended or poor signal area.	Fully extend the telescopic antenna. Try repositioning the radio or antenna for better reception.
CD not playing / Disc error.	Disc is dirty, scratched, or inserted incorrectly. Non-audio CD.	Clean the CD with a soft cloth. Ensure the CD is inserted correctly (label side up). Try a different audio CD.
Bluetooth pairing failed.	Device is too far, Bluetooth not enabled on device, or radio not in pairing mode.	Ensure the radio is in Bluetooth pairing mode. Place your device within 1 meter of the radio. Disable and re-enable Bluetooth on your device.
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and radio.	Replace the batteries (2x AAA). Ensure correct polarity. Remove any obstructions. Point the remote directly at the radio's front panel.

SPECIFICATIONS

Technical Data

Feature	Detail
Model Number	KS2-Melodia CD WD
Brand	auna
Connectivity Technology	Bluetooth, Auxiliary, Wi-Fi (for Internet Radio)
Speaker Type	Stereo
Power Source	Wired (AC Adapter)
Input Voltage	DC 12V 2A (via supplied adapter)
Dimensions (approx.)	46.2 x 24.8 x 24.2 cm (Packaging dimensions, actual unit dimensions will be similar)
Weight (approx.)	3.3 Kilograms
Color	Walnut
Supported Media	Internet Radio, DAB+, FM, Audio CD, Bluetooth Audio, AUX Input

WARRANTY AND SUPPORT

Warranty Information

Auna products are covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Auna website for detailed warranty terms and conditions specific to your region. Keep your proof of purchase (receipt or invoice) as it will be required for any warranty claims.

Customer Support

If you require further assistance or encounter issues not covered in this manual, please contact Auna customer support. Contact details can typically be found on the official Auna website or on the product packaging. When contacting support, please have your product model number (KS2-Melodia CD WD) and purchase details ready.

© 2024 auna. All rights reserved.

Auna Melodie/Stanford Internet Radio User Manual