

Axess SPBL1043YL

AXESS SPBL1043 Mini Portable Bluetooth Speaker User Manual

Your guide to setting up and operating your new portable Bluetooth speaker.

1. INTRODUCTION

The AXESS SPBL1043 is a versatile mini portable Bluetooth speaker designed to deliver clear and dynamic sound. It features A2DP Bluetooth technology for wireless music streaming, an AUX-in line for wired connections, a built-in FM radio, and USB support for various music playback options. The speaker also includes vibrant dancing LED lights for an enhanced audio-visual experience and a built-in rechargeable lithium-ion battery for portability.

Key Features:

- Hi-Fi Bluetooth speaker output with clear sound & dynamic sound effect.
- Wirelessly stream music directly from your smartphone or other Bluetooth enabled device.
- LED Lit side panels produce a cool disco effect.
- Built-in rechargeable lithium ion battery, USB support, aux-in, and FM radio.
- Includes lanyard for easy portability and carrying.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- AXESS SPBL1043 Portable Bluetooth Speaker
- USB Charging Cable
- Lanyard (pre-attached or included separately)
- User Manual (this document)

3. PRODUCT OVERVIEW AND CONTROLS



Image: Front view of the AXESS SPBL1043 speaker, highlighting the speaker grille and the control panel on the right side.

Control Panel and Ports:

Component	Description / Function
OFF/ON Switch	Powers the speaker on or off.
USB Port	For playing music from a USB flash drive.
DC 5V (Micro USB)	Charging port for the speaker's internal battery.
AUX Input	3.5mm audio jack for connecting external audio devices.
Previous Track / Volume Down	Short press for previous track, long press to decrease volume.
Next Track / Volume Up	Short press for next track, long press to increase volume.
M (Mode) Button	Switches between Bluetooth, FM Radio, AUX, and USB modes.
Play/Pause	Plays or pauses audio playback. In FM mode, short press to auto-scan and save stations.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker's internal battery.

1. Connect the supplied USB charging cable to the DC 5V port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light (usually red) will illuminate during charging and turn off when fully

charged.

4. A full charge typically takes 2-3 hours.

4.2 Powering On/Off

- To power on, slide the **OFF/ON** switch to the "ON" position. You will hear an audible prompt.
- To power off, slide the **OFF/ON** switch to the "OFF" position.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (it usually defaults to Bluetooth mode upon power-on, indicated by a blinking blue LED and an audible prompt). If not, press the **M (Mode)** button to switch to Bluetooth mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices. The speaker will appear as "AXESS SPBL1043" or similar.
4. Select "AXESS SPBL1043" to pair. Once successfully paired, the blue LED will stop blinking and remain solid, and you will hear a confirmation sound.
5. You can now play music from your device through the speaker.

5.2 Using AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device.
3. Press the **M (Mode)** button until you hear the "AUX mode" prompt.
4. Control playback and volume from your connected device.

5.3 FM Radio Operation

1. Press the **M (Mode)** button to switch to FM radio mode.
2. To auto-scan and save available FM stations, short press the **Play/Pause** button. The speaker will scan and store stations automatically.
3. Once scanning is complete, use the **Previous Track / Volume Down** and **Next Track / Volume Up** buttons to navigate between saved stations.
4. Long press these buttons to adjust the volume.

5.4 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port on the speaker.
2. The speaker will automatically switch to USB mode and begin playing music from the drive. If not, press the **M (Mode)** button to select USB mode.
3. Use the **Previous Track / Volume Down** and **Next Track / Volume Up** buttons for track navigation, and long press for volume control.
4. Press the **Play/Pause** button to pause or resume playback.

5.5 LED Light Modes

The AXESS SPBL1043 features dynamic LED lights on its side panels that activate automatically when the speaker is powered on. These lights cycle through various colors and patterns, creating a "dancing" or "disco" effect that enhances the listening experience. The LED lights are an integrated feature and do not

have separate control buttons.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use, to maintain battery health.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the supplied USB cable.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode or too far from device. Bluetooth on device is off.	Ensure speaker is in Bluetooth mode (blinking blue LED). Move speaker closer to device. Turn Bluetooth on/off on your device.
No sound from speaker.	Volume is too low. Incorrect mode selected. Device volume is low.	Increase speaker volume by long pressing the "Next Track / Volume Up" button. Press "M" button to select correct mode (Bluetooth, AUX, USB, FM). Increase volume on your connected device.
FM radio reception is poor.	Weak signal.	Reposition the speaker to improve signal reception.
USB playback not working.	USB drive not formatted correctly or contains unsupported files.	Ensure USB drive is formatted to FAT32 and contains MP3 files. Try a different USB drive.

8. SPECIFICATIONS

Feature	Detail
Model Number	SPBL1043YL
Connectivity	Bluetooth, Auxiliary (3.5mm), USB
Speaker Output Power	3 Watts


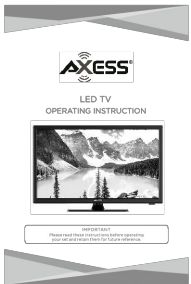

Feature	Detail
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Capacity	1800 mAh
Product Dimensions	9.25 x 3.5 x 3.75 inches
Item Weight	1.15 pounds (approx. 0.52 kg)
Color	Yellow
Manufacturer	AXESS




9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Axess website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Axess. All rights reserved.

Related Documents - SPBL1043YL

	<p>AXESS SPBT1076 Bluetooth Media Speaker User Manual</p> <p>User manual for the AXESS SPBT1076 Bluetooth Media Speaker, detailing features, specifications, operation, and charging instructions.</p>
	<p>Axess 23.6" LED TV Operating Instructions Manual</p> <p>Comprehensive operating instructions for the Axess 23.6-inch LED Television, covering setup, features, remote control, and troubleshooting. Learn how to use your Axess LED TV safely and effectively.</p>
	<p>Axess SPBT1032 Portable Indoor/Outdoor Hi-Fi Cylinder Speaker User Manual</p> <p>User manual for the Axess SPBT1032, a portable indoor/outdoor Hi-Fi cylinder speaker with Bluetooth compatibility, 5.5-inch subwoofer, and various playback options including USB, SD card, and FM radio.</p>

 <p>AXESS PR3206 AM/FM Radio with Media Player</p> <ol style="list-style-type: none"> 1. Telescope Antenna 2. Playing Indicator 3. Tuning Control 4. Tuning Frequency Indicating Window 5. Function Switch/Band Selector 6. Hand Belt 7. Battery Slot (Back) 8. Earphone Jack 9. Volume Control 	<p>Axess PR3206 AM/FM Radio with Media Player User Manual</p> <p>User manual for the Axess PR3206 AM/FM Radio with Media Player, detailing operation instructions, features, and specifications.</p>
 <p>AXESS PABT6020 DOUBLE 15\"</p>	<p>Axess PABT6020 Double 15" Woofer Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the Axess PABT6020 Double 15" Woofer Bluetooth Speaker. Provides detailed information on specifications, panel functions, operation of microphones, Bluetooth connectivity, FM radio, and recording features.</p>
 <p>AXESS SPBT1058 Bluetooth Media Speaker</p>	<p>AXESS SPBT1058 Bluetooth Media Speaker User Manual - Features, Specs, and Operation</p> <p>Comprehensive user manual for the AXESS SPBT1058 Bluetooth Media Speaker. Learn about its features, specifications, controls, Bluetooth pairing, USB playback, FM radio, AUX-IN connection, and charging instructions.</p>