

## Tefal WM756D

# Tefal WM756D12 King Size Semi-Professional Waffle Maker Instruction Manual

Model: WM756D12

## 1. INTRODUCTION

---

Thank you for choosing the Tefal WM756D12 King Size Semi-Professional Waffle Maker. This appliance is designed to help you create delicious, perfectly cooked Belgian waffles. Please read this manual carefully before first use to ensure safe and optimal operation.



Figure 1: Tefal WM756D12 King Size Semi-Professional Waffle Maker

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### 3. PRODUCT COMPONENTS AND FEATURES

---

The Tefal WM756D12 Waffle Maker is designed for convenience and performance. Key features include:

- **Semi-Professional Design:** Equipped with a rotating handle for easy flipping of the plates, ensuring even cooking and delicious results.
- **Adjustable Thermostat:** Allows precise temperature control for perfect waffle browning, from light to dark.
- **Indicator Light:** A practical light indicates when the plates have reached the optimal temperature for cooking.
- **Easy to Clean:** The non-stick plates are dishwasher-safe for effortless cleaning.
- **Compact Storage:** Features a foldable handle and a compact design for convenient storage.

## GAUFRIER SEMI-PROFESSIONNEL



Figure 2: Waffle maker with rotating handle for even cooking.



Figure 3: Adjustable thermostat for precise temperature control.

## 4. SETUP

---

1. **Unpacking:** Carefully remove the waffle maker and all accessories from its packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Remove the cooking plates and wash them with warm, soapy water, then rinse and dry thoroughly. Ensure all parts are completely dry before reassembling.
3. **Placement:** Place the waffle maker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not tangled or obstructing any movement.

## 5. OPERATING INSTRUCTIONS

---

1. **Preheating:** Plug the waffle maker into a suitable electrical outlet. Turn the thermostat to your desired browning level. The indicator light will illuminate, signaling that the appliance is preheating.
2. **Ready Indicator:** The indicator light will turn off or change color (depending on the model) once the waffle maker has reached the set temperature and is ready for use.
3. **Pouring Batter:** Open the waffle maker and carefully pour your waffle batter onto the lower cooking plate. Do not overfill to prevent overflow.
4. **Closing and Rotating:** Close the lid. After a few seconds, use the rotating handle to flip the waffle maker 180

degrees. This ensures even distribution of batter and uniform cooking on both sides.

5. **Cooking Time:** Cook for the recommended time based on your recipe and desired crispiness. The adjustable thermostat allows you to fine-tune the cooking process.
6. **Removing Waffles:** Once cooked, open the waffle maker and carefully remove the waffles using a non-metallic utensil to avoid damaging the non-stick coating.

## 6. MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and performance of your waffle maker.

- **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher-Safe Plates:** The non-stick cooking plates are removable and dishwasher-safe for convenient cleaning. Refer to Figure 4 for an example.
- **Exterior Cleaning:** Wipe the exterior housing with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
- **Storage:** Once clean and dry, the waffle maker can be stored compactly thanks to its foldable handle. Refer to Figure 5 for storage orientation.



Figure 4: Removable plates are dishwasher-safe for easy cleaning.

## FACILE À RANGER



Figure 5: Waffle maker with folded handle for compact vertical storage.

## 7. TROUBLESHOOTING

If you encounter issues with your waffle maker, please consult the following common problems and solutions:

Problem	Possible Cause	Solution
Waffle maker does not heat up.	Not plugged in; power switch off; faulty outlet.	Ensure the appliance is properly plugged in and the power switch is on. Check the electrical outlet with another appliance.
Waffles are not browning evenly.	Insufficient preheating; uneven batter distribution; thermostat setting too low.	Allow the appliance to fully preheat until the indicator light signals readiness. Ensure batter is spread evenly. Adjust the thermostat to a higher setting. Ensure the rotating handle is used to flip the plates during cooking.
Waffles stick to the plates.	Plates not properly seasoned; old or incorrect batter recipe; plates not clean.	Ensure plates are clean and lightly greased before use (if not non-stick). Use a fresh, appropriate waffle batter recipe. Clean plates thoroughly after each use.

If the problem persists, please contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	WM756D
Power	1200 Watts
Voltage	120 Volts
Material	Alloy Steel
Dimensions (L x W x H)	2.5 x 756 x 756 cm; 4.7 kilograms (Note: Dimensions provided in source data appear inconsistent, please refer to product packaging for accurate measurements.)
Item Weight	4.7 Kilograms
Special Features	Rotating Handle, Removable Surface



Figure 6: Product dimensions for the Tefal WM756D12 Waffle Maker.

 
## 9. WARRANTY AND SUPPORT

---


Tefal is committed to providing quality products and support.

- **Repairability:** This product is designed for repairability for 15 years at a fair price, supported by a network of 6200 repairers worldwide. This initiative contributes to environmental protection and waste reduction.
- **Customer Support:** For any questions, concerns, or to locate a repair center, please visit the official Tefal website or contact their customer service department.


### Related Documents - WM756D

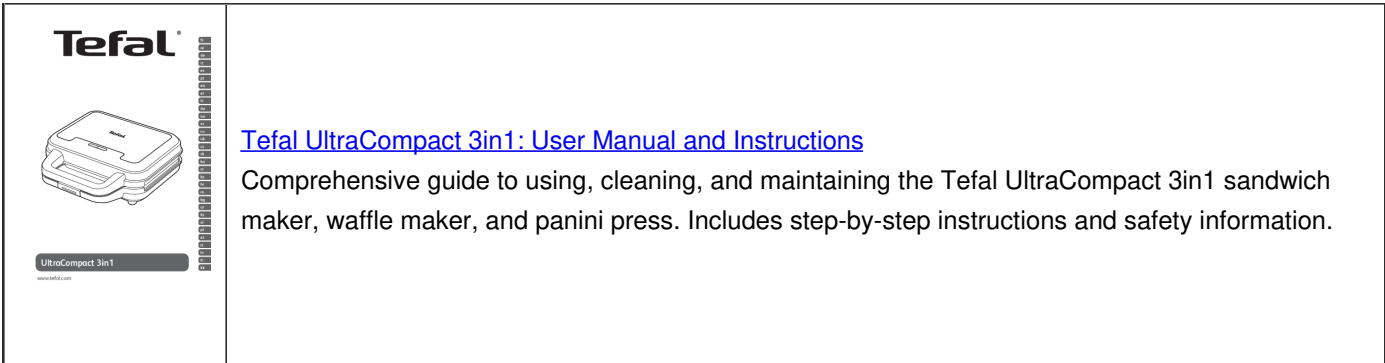

 
Comprehensive guide to using, cleaning, and maintaining the Tefal UltraCompact 3in1 sandwich maker, waffle maker, and panini press. Includes step-by-step instructions and safety information.

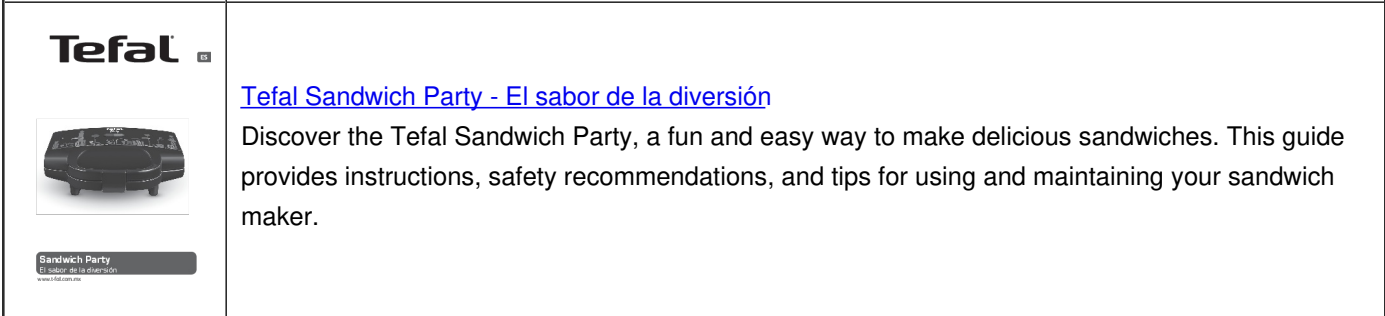

 
Discover the Tefal Sandwich Party, a fun and easy way to make delicious sandwiches. This guide provides instructions, safety recommendations, and tips for using and maintaining your sandwich maker.

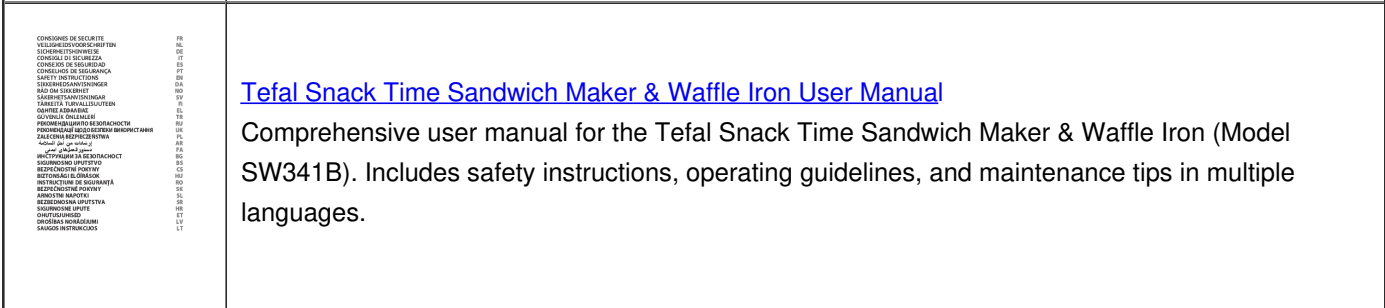

 
Comprehensive user manual for the Tefal Snack Time Sandwich Maker & Waffle Iron (Model SW341B). Includes safety instructions, operating guidelines, and maintenance tips in multiple languages.

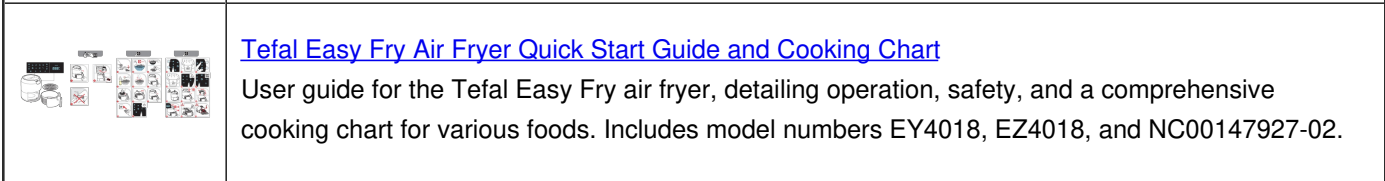

 User guide for the Tefal Easy Fry air fryer, detailing operation, safety, and a comprehensive cooking chart for various foods. Includes model numbers EY4018, EZ4018, and NC00147927-02.

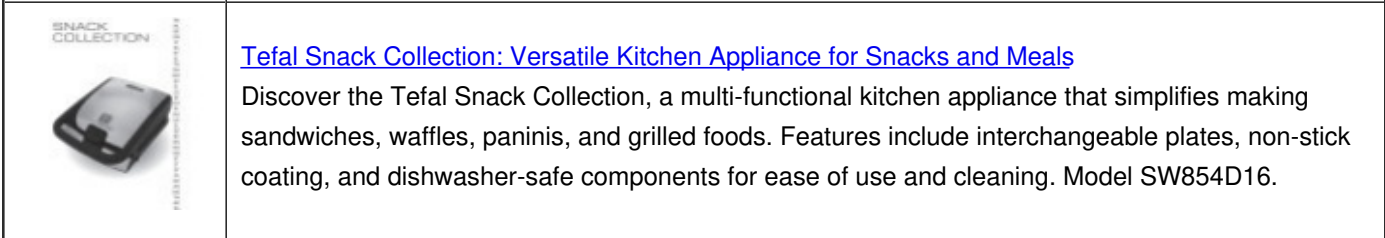

 Discover the Tefal Snack Collection, a multi-functional kitchen appliance that simplifies making sandwiches, waffles, paninis, and grilled foods. Features include interchangeable plates, non-stick coating, and dishwasher-safe components for ease of use and cleaning. Model SW854D16.

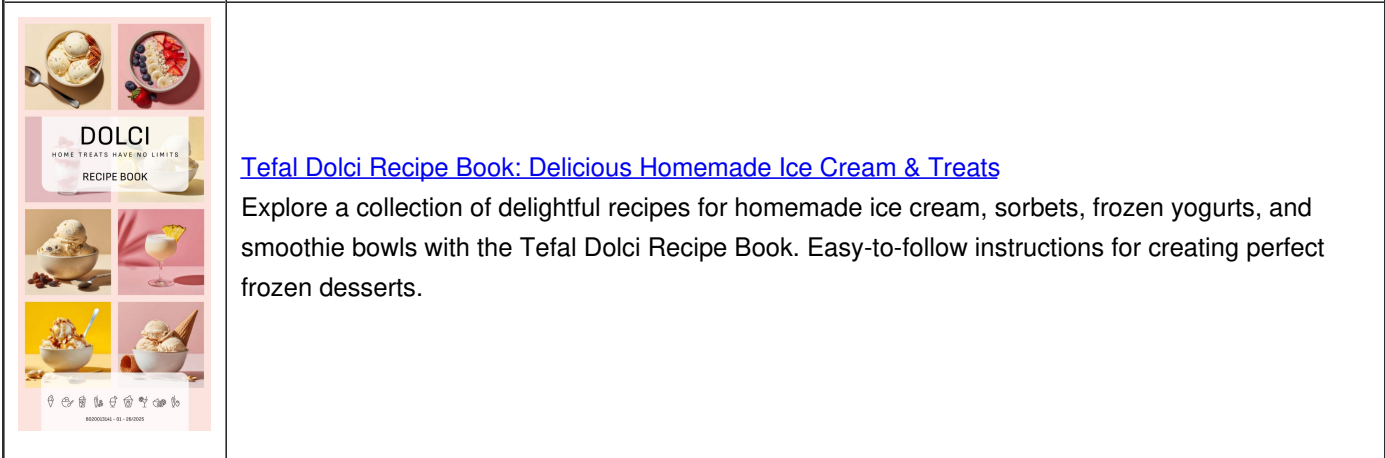

Explore a collection of delightful recipes for homemade ice cream, sorbets, frozen yogurts, and smoothie bowls with the Tefal Dolci Recipe Book. Easy-to-follow instructions for creating perfect frozen desserts.