

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Decathlon](#) /

› [Decathlon ARPENAZ 3+ Camping Tent User Manual](#)

## Decathlon ARPENAZ 3+

# Decathlon ARPENAZ 3+ Camping Tent User Manual

Model: ARPENAZ 3+ (8347890)

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Decathlon ARPENAZ 3+ Camping Tent. Designed for 3 people, this tent offers ease of assembly, two storage areas, and a double roof for enhanced protection. Please read this manual thoroughly before using your tent to ensure proper handling and longevity.

## SAFETY INFORMATION

- Keep all flame and heat sources away from this tent fabric.
- Do not use candles, matches, or other open flames inside the tent.
- Do not cook inside the tent.
- Do not store flammable liquids inside the tent.
- Ensure proper ventilation to avoid suffocation.
- Always secure the tent properly with stakes and guy lines to prevent collapse in windy conditions.

## PACKAGE CONTENTS

Before beginning assembly, verify that all components are present:

- Tent body (inner tent)
- Rainfly (outer tent)
- Tent poles (Aluminum)
- Stakes/Pegs

- Guy lines
- Carry Bag

## SETUP INSTRUCTIONS

### 1. Choosing a Campsite

Select a flat, level area free of sharp objects. Avoid depressions where water might collect. Position the tent with consideration for wind direction and sun exposure.

### 2. Laying Out the Tent

Unpack the tent from its carry bag. Spread the tent body flat on the ground, ensuring the floor is smooth and free of wrinkles.



Image: The ARPENAZ 3+ tent body spread out on a flat surface, ready for pole assembly.

### 3. Assembling the Poles

Connect the aluminum pole sections. The ARPENAZ 3+ typically uses a dome design with intersecting poles. Insert the poles into the sleeves or clips on the tent body. For this model, the poles are designed to create a stable dome structure.



Image: The ARPENAZ 3+ tent with its main poles assembled, forming the basic dome shape. The front entrance is visible.

### 4. Attaching the Rainfly

Drape the rainfly over the assembled tent body, ensuring it is oriented correctly (usually indicated by the brand logo or door alignment). Secure the rainfly to the tent body using the buckles, clips, or Velcro straps provided. This model features a double roof for enhanced weather protection.



Image: The ARPENAZ 3+ tent fully set up with the rainfly in place, viewed from the rear, highlighting its compact and protective design.

## 5. Staking and Guying Out

Stake down the tent corners firmly. Extend and stake out all guy lines to provide maximum stability, especially in windy conditions. Adjust tensioners to keep the tent taut.

## OPERATING THE TENT

### Ventilation

The ARPENAZ 3+ tent is designed with ventilation points to minimize condensation. Ensure vents are open when possible, especially during humid conditions. The double roof design also aids in air circulation.

### Doors and Zippers

This tent features two doors for easy access. Operate zippers carefully to prevent snagging. Always close zippers completely to keep out insects and weather.

### Storage Areas

The tent includes two storage areas, typically vestibules under the rainfly, for gear and footwear. Keep these areas tidy to maintain clear access.

## MAINTENANCE

### Cleaning

After each use, clean the tent. Hand wash with mild soap and water. Do not use harsh detergents or bleach. Rinse thoroughly.

### Drying

Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew and fabric degradation.

### Storage

Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it in its original carry bag.

## Repairs

Small tears can be repaired with tent repair kits. For larger damage, consult a professional repair service or Decathlon customer support.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Condensation inside tent	Lack of ventilation, high humidity	Open vents and doors for air circulation. Ensure rainfly is not touching inner tent.
Tent unstable in wind	Improper staking or guying	Re-stake all corners firmly. Extend and tension all guy lines. Orient tent with narrowest end facing wind.
Water pooling under tent	Uneven ground, poor site selection	Relocate tent to higher, flatter ground. Use a ground tarp if available.
Zipper snagging	Fabric caught in zipper teeth	Gently pull fabric away from zipper. Apply zipper lubricant if needed.

## SPECIFICATIONS

- Model:** ARPENAZ 3+
- Product Number:** 8347890
- Occupancy:** 3 Person
- Seasons:** 4 Season
- Design:** Dome Camping Tent
- Water Resistance:** Waterproof Coating (Waterproof)
- Included Components:** Tent Body, Rainfly, Poles, Carry Bag
- Pole Material:** Aluminum
- Tent Floor Material:** Polyethylene
- Number of Doors:** 2
- Maximum Height:** 118 Centimeters
- Assembly:** Required (Free Standing Installation)
- Product Care:** Hand Wash

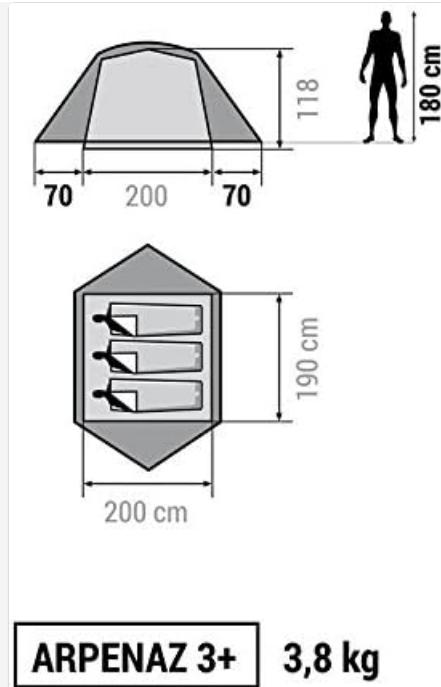


Image: Technical diagram illustrating the dimensions of the ARPENAZ 3+ tent, including height (118 cm) and floor plan for 3 occupants.

## WARRANTY AND SUPPORT

### Warranty Information

For specific warranty details regarding your Decathlon ARPENAZ 3+ Camping Tent, please refer to the warranty card included with your purchase or visit the official Decathlon website. Warranty terms typically cover manufacturing defects.

### Customer Support

If you have any questions, require assistance with setup, or need to report an issue, please contact Decathlon customer support. You can find contact information on the official Decathlon website or through your purchase retailer.

**Decathlon Official Website:** [www.decathlon.com](http://www.decathlon.com)