



Manuals.plus /

› Mp3 Go /

› Mp3 Go Player User Manual

## Mp3 Go Player

# Mp3 Go Player User Manual

Model: Player | ASIN: B01MYF24CM

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Mp3 Go Player. Please read it thoroughly before using the device to ensure proper setup, usage, and maintenance. Retain this manual for future reference.

## 2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to severe impact.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Keep the device away from water and other liquids.
- Use only the specified charging accessories.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

## 3. PACKAGE CONTENTS

Please check the package for the following items:

- Mp3 Go Player
- USB Charging Cable
- User Manual (this document)

If any items are missing or damaged, please contact customer support.

## 4. PRODUCT OVERVIEW

The Mp3 Go Player is designed for portable audio playback. Familiarize yourself with its main components:

- **Display Screen:** Shows menus, track information, and settings.

- **Power/Play/Pause Button:** Turns the device on/off and controls playback.
- **Volume Up/Down Buttons:** Adjusts the audio output level.
- **Navigation Buttons (Up/Down/Left/Right/Menu/Back):** Used to navigate through menus and select options.
- **Headphone Jack (3.5mm):** Connects to headphones or external audio devices.
- **USB Port (Micro-USB/USB-C):** Used for charging and data transfer.
- **MicroSD Card Slot (if applicable):** For expanding storage capacity.

*Note: No product images are available for display in this manual.*

## 5. SETUP

---

### 5.1 Charging the Device

1. Connect the small end of the USB charging cable to the USB port on your Mp3 Go Player.
2. Connect the larger end of the USB cable to a powered USB port on a computer or a compatible USB wall adapter (not included).
3. The device's screen will indicate that it is charging. A full charge typically takes 2-3 hours.
4. Disconnect the cable once charging is complete.

### 5.2 Loading Music Files

1. Ensure the Mp3 Go Player is powered on.
2. Connect the device to your computer using the USB cable.
3. Your computer should recognize the player as a removable disk or media device.
4. Open the device's folder on your computer.
5. Drag and drop your desired audio files (e.g., MP3, WMA, FLAC) into the designated music folder on the player.
6. Once files are transferred, safely eject the device from your computer before disconnecting the USB cable.

### 5.3 Initial Power On

Press and hold the Power button for approximately 3-5 seconds until the screen illuminates and the device powers on.

## 6. OPERATING

---

### 6.1 Basic Playback

1. Connect your headphones to the 3.5mm headphone jack.
2. Navigate to the 'Music' menu using the navigation buttons.
3. Select a song, artist, album, or playlist.
4. Press the Play/Pause button to start playback.
5. Press the Play/Pause button again to pause playback.
6. Use the Volume Up/Down buttons to adjust the listening volume.
7. Use the Left/Right navigation buttons to skip to the previous or next track.

### 6.2 Menu Navigation

- **Menu Button:** Accesses the main menu or context-sensitive options.
- **Up/Down Buttons:** Scrolls through menu options.

- **Right Button:** Selects a highlighted option or enters a sub-menu.
- **Left/Back Button:** Returns to the previous menu or screen.

*Note: No official product videos are available for display in this manual.*

## 7. MAINTENANCE

### 7.1 Cleaning

Wipe the device with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.

### 7.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Store the device in a cool, dry place when not in use for extended periods.

### 7.3 Software Updates

Periodically check the manufacturer's website for any available firmware updates. Follow the provided instructions carefully for any update process.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, perform a reset (refer to specifications for reset method, if available).
No sound from headphones.	Headphones not connected properly; volume too low; corrupted audio file.	Ensure headphones are fully plugged in. Increase volume. Try a different audio file. Test with another pair of headphones.
Computer does not recognize device.	Faulty USB cable; incorrect USB port; driver issue.	Try a different USB cable or USB port on your computer. Restart both the device and computer.
Files not transferring.	Insufficient storage space; incompatible file format.	Check available storage on the device. Ensure files are in a supported format (e.g., MP3).

## 9. SPECIFICATIONS

- **Model:** Player
- **ASIN:** B01MYF24CM
- **Audio Formats:** MP3, WMA, FLAC (may vary by firmware version)
- **Storage:** Internal (capacity not specified), expandable via MicroSD card (up to 32GB/64GB, check packaging)
- **Battery:** Rechargeable Lithium-ion (capacity not specified)
- **Charging Time:** Approximately 2-3 hours
- **Playback Time:** Up to X hours (depending on usage and volume, not specified)

- **Connectivity:** USB (for charging and data transfer), 3.5mm headphone jack
- **Display:** LCD/OLED (type and size not specified)

## 10. WARRANTY AND SUPPORT

---

The Mp3 Go Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or visit the official Mp3 Go website (if available) for contact information.

