

[manuals.plus](#) /

- › [Candy](#) /
- › [Candy CSW 485D-S Washer Dryer User Manual](#)

Candy CSW 485D-S

Candy CSW 485D-S Washer Dryer User Manual

Model: CSW 485D-S

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Candy CSW 485D-S Washer Dryer. Please read these instructions carefully before using the appliance and retain them for future reference. This appliance combines washing and drying functions, offering convenience for your laundry needs.



Figure 1: Front view of the Candy CSW 485D-S Washer Dryer. This image displays the appliance's main door, control panel, and detergent drawer.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly earthed.
- Do not allow children to play with or operate the appliance.
- Keep packaging materials out of reach of children.

- Do not touch the appliance with wet hands or feet.
- Unplug the appliance before cleaning or performing maintenance.
- Do not use flammable liquids near the appliance.
- Ensure the water inlet and outlet hoses are correctly installed to prevent leaks.
- The appliance door can become hot during drying cycles; exercise caution.

3. PRODUCT COMPONENTS

The Candy CSW 485D-S Washer Dryer includes the following main components:

- **Door:** Large XXL door for easy loading and unloading.
- **Detergent Drawer:** Compartments for detergent and fabric softener.
- **Control Panel:** Features a digital display and touch controls for program selection and settings.
- **Digital Display:** Provides information on selected programs, time remaining, and error codes.

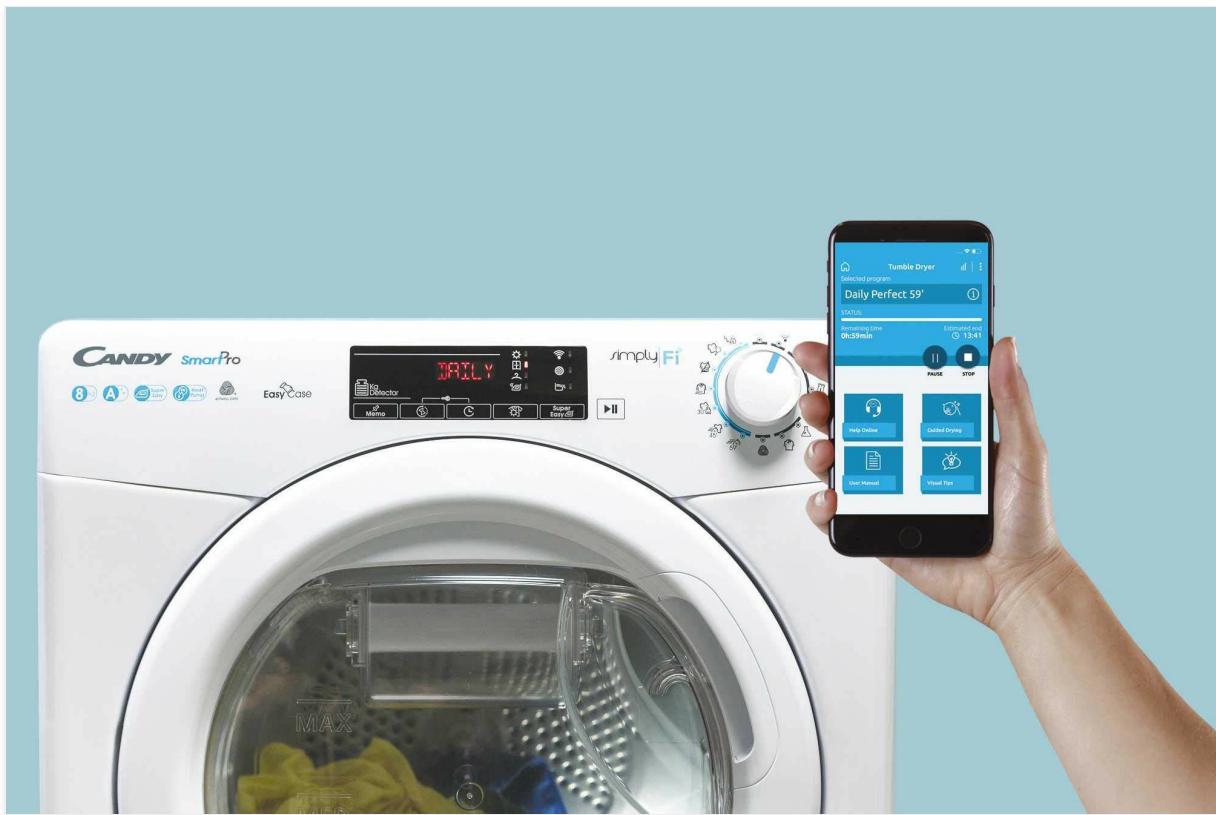


Figure 2: Close-up of the control panel, showing the digital display and program selector. A smartphone is also visible, illustrating the NFC connectivity feature.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials. Remove the transport bolts located at the rear of the appliance. Keep these bolts for future transport if needed.

4.2 Positioning

Place the appliance on a firm, level floor. Ensure there is adequate space around the machine for ventilation and maintenance. Avoid placing it on carpets or near walls that could obstruct airflow.

4.3 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread.
- Ensure the drain hose is securely placed into a standpipe or connected to a suitable drainage system, ensuring it is not kinked.

4.4 Electrical Connection

Connect the power plug to a properly earthed electrical socket. The voltage requirement is 230 Volts. Do not use extension cords or multiple adapters.

4.5 Leveling

Adjust the appliance's feet to ensure it is perfectly level. A level appliance reduces vibration and noise during operation.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

Open the XXL door and load laundry, ensuring not to overload the drum. The maximum washing capacity is 8 kg, and the maximum drying capacity is 5 kg. For optimal drying results, do not exceed the 5 kg limit.

5.2 Adding Detergent and Softener

Pull out the detergent drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

5.3 Program Selection

Turn the program selector knob to choose the desired wash or dry cycle. The digital display will show the estimated program duration. The appliance features 15 programs, including:

- **Woolmark Certified Wool Cycle:** Specifically designed for delicate wool garments, ensuring maximum care.
- **3 Drying Programs:** For various fabric types (wool, synthetics, cotton) with temperature control.
- **Kgs Detector:** Automatically adjusts water and electricity consumption based on the load weight, optimizing efficiency.

5.4 NFC Connectivity (Simply-Fi App)

The appliance is equipped with NFC technology, allowing connection to the Simply-Fi app on your smartphone. This feature enables remote control, access to additional cycles, and diagnostic information. Follow the app's instructions for pairing and usage.

5.5 Starting a Cycle

Press the 'Start/Pause' button to begin the selected program. The display will count down the remaining time.

5.6 Pausing or Canceling a Cycle

To pause a cycle, press the 'Start/Pause' button. To cancel, press and hold the 'Start/Pause' button for a few seconds until the program resets.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washer dryer.

6.1 Cleaning the Detergent Drawer

Periodically remove and clean the detergent drawer under running water to prevent detergent residue buildup.

6.2 Cleaning the Filter

Locate the filter at the bottom front of the appliance. Unscrew and clean it regularly to remove lint and foreign objects. Ensure to place a towel underneath to catch any residual water.

6.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.4 Winter Precautions

If the appliance is to be left in an unheated room during winter, drain all water from the hoses and pump to prevent freezing damage.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not start	No power, door not closed, program not selected.	Check power supply, ensure door is firmly closed, select a program and press start.
Water not filling	Water tap closed, inlet hose kinked, water pressure low.	Open water tap, straighten hose, check water supply.
Water not draining	Drain hose kinked, filter blocked.	Straighten drain hose, clean the filter (refer to Section 6.2).
Excessive vibration/noise	Appliance not level, transport bolts not removed, small items in drum.	Level the appliance (refer to Section 4.5), ensure transport bolts are removed, check drum for foreign objects.
Drying results unsatisfactory	Overloaded, incorrect program, lint filter blocked.	Reduce load (max 5kg for drying), select appropriate drying program, clean lint filter.

8. SPECIFICATIONS

Feature	Value
Model Number	CSW 485D-S
Brand	Candy
Washing Capacity	8 kg
Drying Capacity	5 kg
Maximum Spin Speed	1400 rpm
Dimensions (H x W x D)	85 x 60 x 52 cm
Weight	65 kg
Voltage	230 Volts

Feature	Value
Annual Energy Consumption	5.44 kWh
Control Type	Touch, Fully Automatic
Special Features	Woolmark Certified, Digital Touch Display, NFC Connectivity (Simply-Fi App), Kgs Detector
Color	White

9. WARRANTY AND SUPPORT

9.1 Returns Policy

If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the retailer's help page on returns. If you have received a defective or damaged product, please consult the retailer's help page on defective or damaged products. For specific information on purchases made through a Marketplace seller, please consult the relevant help page.

9.2 Customer Support

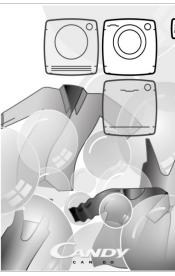
For technical assistance, spare parts, or further information, please contact Candy customer support. Refer to your purchase documentation for contact details.

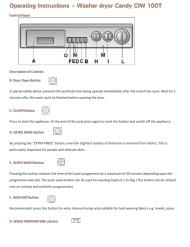
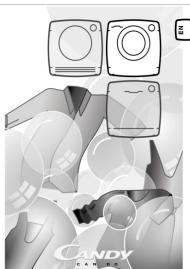
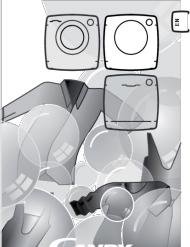
10. PRODUCT VIDEOS

No official product videos from the seller are available for embedding in this manual.

© 2023 Candy. All rights reserved.

Related Documents - CSW 485D-S

 <p>Candy GVW 364TC Washer Dryer: Features and Specifications Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>	 <p>Candy Washing Machine User Manual This user manual provides comprehensive instructions for operating, installing, maintaining, and troubleshooting your Candy washing machine. It covers safety guidelines, program selection, smart features, and technical specifications for models like CSW 2D.</p>
--	---

 <p>Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine</p>	<p>Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.</p>
 <p>Candy CIW 100T Washer Dryer: Operating Instructions and Guide</p>	<p>Detailed operating instructions for the Candy CIW 100T washer dryer, covering control panel functions, wash programs, and drying cycles for optimal use. Learn how to operate your appliance efficiently.</p>
 <p>Candy CSW 2D - VST Washing Machine User Manual</p>	<p>This user manual provides detailed instructions for the Candy CSW 2D - VST washing machine. It covers safe operation, installation, program selection, maintenance, troubleshooting, and smart touch features for optimal laundry care.</p>
 <p>Candy Smart 1D NFC Tumble Dryer User Manual and Instructions</p>	<p>Comprehensive user manual for the Candy Smart 1D NFC tumble dryer, covering safety, installation, operation, maintenance, troubleshooting, and program selection. Includes technical specifications and energy efficiency information.</p>