



[Manuals.plus](#) /

› [Nettech](#) /

› Nettech Universal Remote Control for Sony TVs User Manual

Nettech LYSB01MYU37ON-ELECTRNCS

Universal Remote Control User Manual

Model: LYSB01MYU37ON-ELECTRNCS | Brand: Nettech

INTRODUCTION

This manual provides comprehensive instructions for the Nettech Universal Remote Control, designed for a wide range of Sony LCD, LED, HDTV, Smart, and Bravia 4K Ultra HD TVs. This remote offers immediate functionality without complex programming for compatible models and includes a unique learning feature for enhanced customization.



Image: Front view of the Nettech Universal Remote Control, highlighting its sleek design and button layout.

SETUP

Battery Installation

The Nettech Universal Remote Control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: A close-up view of the remote's battery compartment, showing where to insert two AAA batteries.

Initial Use (No Programming Required)

For most compatible Sony TV models, this remote control is ready to use right out of the box. No programming or pairing is typically required. Simply install the batteries, point the remote at your TV, and begin operation.

OPERATING INSTRUCTIONS

Button Functions

Familiarize yourself with the various buttons and their functions:



Function Button

POWER - Turns the TV on and off.

Color buttons (YELLOW/BLUE/RED/GREEN)—Shortcut keys for interactive functions.

FOOTBALL - Turns on the “live football” mode.

SOCIAL VIEW - Presses to use social network services.

DISCOVER - Access the “Discover” .

NETFLIX - Accesses the "NETFLIX".

SEN - Accesses the "Sony Entertainment Network TM" online service.

RETURN - Returns to the previous menu.

HOME - Press to access the HOME dashboard.

OPTIONS - Displays the available options on the screen.

DISPLAY - Shows current program information for the current channel.

GUIDE - Displays and Electronic Program Guide.

CC - Close the caption.

VOL+/- - Adjusts the volume.

CH+/- - Changes channels.

MUTING - Cuts off the sound temporarily.

Image: An illustration of the remote control highlighting key function buttons and their labels.

- **POWER:** Turns the TV on and off.
- **Color Buttons (YELLOW/BLUE/RED/GREEN):** Shortcut keys for interactive functions, specific to TV model.
- **FOOTBALL:** Activates "live football" mode on compatible TVs.
- **SOCIAL VIEW:** Accesses social network services.
- **DISCOVER:** Accesses the "Discover" feature.
- **NETFLIX:** Directly accesses the Netflix application.
- **SEN:** Accesses the Sony Entertainment Network™ online service.
- **RETURN:** Returns to the previous menu or screen.
- **HOME:** Press to access the HOME dashboard or main menu.
- **OPTIONS:** Displays available options on the screen.
- **DISPLAY:** Shows current program information.

- **GUIDE:** Displays the Electronic Program Guide.
- **CC:** Closes closed captions.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **MUTING:** Mutes or unmutes the sound.
- **JUMP:** Quickly switches between two channels.

Learning Feature

This remote control includes a learning feature, allowing you to customize its functionality and control multiple devices with a single remote. This feature is designed for IR-enabled remotes and requires your original IR remote for programming.

Simple to Program with Instruction

Original IR Remote Needed

ONLY works for IR-enabled remotes
NOT compatible for RF,IP,Bluetooth,Wi-Fi Remotes



Image: Diagram illustrating the learning process, showing two remotes facing each other to transfer IR signals.

To use the learning feature, position the Nettech remote and your original IR remote approximately 1 inch apart, facing each other. Follow the specific instructions provided with your remote for entering learning mode and programming individual buttons. This remote is not compatible with RF, IP, Bluetooth, or Wi-Fi remotes for the learning function.

COMPATIBILITY

The Nettech Universal Remote Control is compatible with a wide range of Sony TV models and original Sony remote

modules. Below is a list of compatible models and remote series:

Compatible Sony TV Remote Modules:

- RMT-TX100U, RMT-TX100D, RMT-TX100B, RMT-TX100P
- RMT-TX101D, RMT-TX101J, RMT-TX102U
- RMT-TX102D, RMT-TX102B, RMT-TX200B, RMT-TX200P, RMT-TX200U
- RMT-TX200E, RMT-TX300U, RMT-TX300E
- RM-YD092, RM-YD103
- And many other older model Sony TV remotes.



Image: A collage showing the Nettech remote alongside several original Sony remote controls it is compatible with.

Compatible Sony TV Models:

This remote is compatible with Sony LCD, LED, HDTV, Smart TVs, Bravia 4K Ultra HD TVs, and Android TVs, including but not limited to the following series:

- KDL-50W800C, KDL-50W850C, KDL-55W800C, KDL-55W850C, KDL-65W800C, KDL-65W850C, KDL-75W800C, KDL-75W850C
- XBR-43X830C, XBR-49X800C, XBR-49X830C, XBR-49X835C, XBR-55X810C, XBR-55X850C, XBR-55X857C, XBR-55X890C, XBR-55X900C, XBR-55X905C, XBR-55X907C
- XBR-65X810C, XBR-65X850C, XBR-65X890C, XBR-65X900C, XBR-65X905C, XBR-65X907C, XBR-65X930C, XBR-75X850C, XBR-75X900C, XBR-75X910C, XBR-75X930C, XBR-75X940C, XBR-75X945C
- XBR-49X700D, XBR-49X750D, XBR-55X705D, XBR-55X707D, XBR-55X750D, XBR-65X750D
- KDL-32R500C, KDL-32W600D, KDL-32W650D, KDL-40R510C, KDL-40R530C, KDL-40R550C, KDL-40W600D, KDL-40W650D, KDL-48R510C, KDL-48R530C, KDL-48R550C, KDL-48W600D, KDL-48W650D, KDL-55W650D, KDL-55W6500, KDL-55W6500D
- KDL-24R400A, KDL-32R300B, KDL-32R300C, KDL-32R330B, KDL-32R400, KDL-32R400A, KDL-32R420B, KDL-32R421A, KDL-40R350B, KDL-40R350D, KDL-40R380B
- And all other compatible Sony LCD LED HDTV Smart TVs.

Universal Remote Control for All SONY TVs



Compatible with:
 LCD / LED / OLED /
 HDTV / UHD / HDR /
 Android TV / BRAVIA 4K Ultra HD Smart TVs



Image: The Nettech remote control positioned next to a modern Sony TV, illustrating its universal compatibility.

Compatible for All SONY Smart TVs



Universal Replacement Remote Control for Vizio TVs with

- ① NETFLIX
- ② SEN
- ③ Football
- ④ Social View
- ⑤ Discover Shortcut App Buttons and Popular Channels Buttons

Image: The Nettech remote control shown with a graphic indicating its compatibility with all Sony Smart TVs, including Netflix and other shortcut buttons.

MAINTENANCE

To ensure the longevity and optimal performance of your Nettech Universal Remote Control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote or subjecting it to strong impacts, which can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your Nettech Universal Remote Control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are installed correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Confirm you are within the effective operating range (typically >10m/33ft).

- **Specific Buttons Not Working:**

- If you used the learning feature, re-program the specific button to ensure the signal was correctly learned from the original remote.
- Ensure the TV is compatible with the specific function (e.g., some older TVs may not support Netflix shortcut buttons).

- **Delayed Response or Intermittent Functionality:**

- This remote is designed for quick transmission response (0.2 seconds). If experiencing delays, check battery levels.
- Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

- **Remote Does Not Control TV:**

- Verify your TV model is listed in the compatibility section. While designed for many Sony TVs, some specific models might require the learning feature if not immediately responsive.
- Remember that the learning feature only works with original IR-enabled remotes, not RF, IP, Bluetooth, or Wi-Fi remotes.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3 x 3 x 3 inches
Item Weight	3 ounces
Item Model Number	LYSB01MYU37ON-ELECTRNCS
Batteries Required	2 AAA batteries (not included)
Manufacturer	Nettech
Country of Origin	China
Color	Black
Max Number of Supported Devices	2 (via learning feature)
Compatible Devices	Television, Set Top Box, Streaming Device

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase or visit the

official Nettech website. Keep your purchase receipt as proof of purchase for any warranty claims.

While the product is designed for immediate use, the learning feature allows for extensive customization. For specific programming queries related to the learning function, consult the detailed instructions that came with your remote or contact customer support.