

Snakebyte SB909733

Snakebyte Game Pad Pro User Manual

Model: SB909733

INTRODUCTION

The Snakebyte Game Pad Pro is a wireless 2.4GHz game controller designed to provide an optimal gaming experience across multiple platforms. Featuring a console-style layout with analog thumbsticks, a digital directional pad, and eight digital buttons, it offers precise control for various game genres. Its integrated Li-Ion battery and included 3-meter USB cable ensure convenience and extended playtime. The controller supports both DirectInput and Xinput, ensuring broad compatibility with PC, Mac, and Linux systems.



Front view of the Snakebyte Game Pad Pro, showcasing its ergonomic design, dual analog sticks, D-pad, and action buttons.

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the integrated Li-Ion battery. Connect the included 3-meter USB cable to the controller's charging port and the other end to a powered USB port on your computer or a USB wall adapter. The charging indicator lights on the controller will provide feedback on the charging status.

2. Wireless Connection (2.4GHz)

The Game Pad Pro connects wirelessly via a 2.4GHz USB dongle. Locate the USB dongle, typically stored within the controller or packaged separately. Insert the USB dongle into an available USB port on your PC, Mac, or Linux system. The controller will automatically attempt to pair with the dongle. Once connected, the connection indicator lights on the controller will illuminate steadily.



Image illustrating the wireless 2.4 GHz connectivity of the Game Pad Pro, emphasizing its cable-free operation.

3. System Compatibility

The controller is designed for maximum compatibility, supporting both DirectInput and Xinput modes. This ensures seamless integration with a wide range of PC games and operating systems, including Windows, Mac, and Linux.



Visual representation indicating the controller's compatibility with DirectInput and Xinput, crucial for broad game support.

OPERATING INSTRUCTIONS

Controller Layout and Functions

The Game Pad Pro features a standard console-style layout for intuitive gameplay:

- **Analog Joysticks:** Two precision analog thumbsticks for 360-degree movement and camera control.
- **Digital Directional Pad (D-Pad):** For precise directional input, ideal for fighting games and menu navigation.
- **Action Buttons:** Eight digital buttons (A, B, X, Y, etc.) for in-game actions.
- **Triggers:** Analog triggers for nuanced control in racing and shooting games.
- **Select/Back Button:** Typically used for menu navigation or secondary functions.
- **Start/Menu Button:** Used to pause games or access in-game menus.
- **Home/Power Button:** Central button for powering on/off the controller and accessing system dashboards.



An overhead view of the Game Pad Pro with key features such as wireless 2.4 GHz, DirectInput and Xinput compatibility, analog joysticks and triggers, and precision components highlighted.

Gaming Experience

The controller's precision components and low wireless latency are designed to provide a responsive and immersive gaming experience. Ensure your game is configured to recognize a gamepad for optimal performance.

MAINTENANCE

To ensure the longevity and optimal performance of your Snakebyte Game Pad Pro, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller's surface. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid abrasive cleaners or solvents.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.

- **Battery Care:** The integrated Li-Ion battery should be charged regularly, even if the controller is not in frequent use, to maintain battery health. Avoid completely draining the battery for extended periods.
- **USB Cable:** Handle the USB charging cable with care. Avoid sharp bends or excessive pulling that could damage the cable or connectors.

TROUBLESHOOTING

If you encounter issues with your Game Pad Pro, please refer to the following common solutions:

Controller Not Connecting/Responding

- **Check USB Dongle:** Ensure the 2.4GHz USB dongle is securely inserted into a working USB port on your computer. Try a different USB port.
- **Re-pair:** Power off the controller, remove the USB dongle, then reinsert the dongle and power on the controller to re-establish the connection.
- **Battery Level:** Ensure the controller has sufficient battery charge. Connect it to the USB cable for charging.
- **Interference:** Move the controller closer to the USB dongle or away from other wireless devices that might cause interference.

Buttons/Joysticks Not Working Correctly

- **Game Configuration:** Verify that the game's control settings are correctly configured for a gamepad and that the input mode (DirectInput/Xinput) is appropriate for the game.
- **Driver Issues:** For PC, ensure your operating system's drivers are up to date. For Mac/Linux, while the product is compatible, some systems may require specific configurations or third-party drivers for full functionality. Consult your operating system's support resources.
- **Restart:** Restart your computer and the controller.

Charging Issues

- **Check Cable:** Ensure the USB charging cable is not damaged and is securely connected to both the controller and the power source.
- **Power Source:** Try a different USB port or a different USB wall adapter.

SPECIFICATIONS

Model Number	SB909733
Connectivity	Wireless 2.4GHz
Compatibility	PC, Mac, Linux (DirectInput & Xinput)
Battery Type	Integrated Li-Ion Battery
Cable Length	3m USB Cable (included)
Product Dimensions	4.72 x 3.15 x 6.3 inches

Item Weight	10.9 ounces
-------------	-------------

WARRANTY INFORMATION

The Snakebyte Game Pad Pro comes with a **5-year warranty**. This warranty covers manufacturing defects and ensures the product meets its specified performance standards under normal use. Please retain your proof of purchase for warranty claims.







Image displaying the 5-year warranty for the product.

For detailed terms and conditions of the warranty, please refer to the official Snakebyte website or contact customer support.

SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Snakebyte website or contact their customer service department. Up-to-date contact information and FAQs can typically be found on their support pages.

Online Resources: [Visit the Snakebyte Store on Amazon](#)

	<p>Snakebyte GAMES: TOWER 5 for PS5 - Assembly and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Snakebyte GAMES: TOWER 5 storage and accessory solution for PlayStation 5. Includes product information, content list, assembly instructions, and safety precautions in multiple languages.</p>
	<p>snakebyte KEY:BOARD PRO™ Gaming Keyboard: Instruction Manual & Features</p> <p>Download the official instruction manual for the snakebyte KEY:BOARD PRO™ gaming keyboard. Learn about installation, media controls, RGB lighting effects, conflict-free gaming keys, safety guidelines, and technical support.</p>
	<p>SNAKEBYTE PG915420 Pebble Game Controller Quick Start Guide</p> <p>User manual and quick start guide for the SNAKEBYTE PG915420 Pebble game controller, detailing setup and usage instructions for optimal gaming.</p>
	<p>Pebble Gear 7" Kids Tablet Quick Start Guide</p> <p>Quick start guide for the Pebble Gear 7" Kids Tablet, covering setup, home screen overview, accessories, and support information.</p>