

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smartby](#) /

› [AKB72914265 Universal Remote Control Replacement for LG TV 3D LCD LED HDTV Smart TV - All Models](#)

Smartby LYSB01MZ5HPQJ-ELECTRNCS

AKB72914265 Universal Remote Control

INSTRUCTION MANUAL

Brand: Smartby

1. Product Overview

This Smartby AKB72914265 Universal Remote Control is designed as a direct replacement for various LG TV models, including 3D, LCD, LED, and Smart TVs. It comes pre-programmed and requires no additional setup or programming, allowing for immediate use upon battery installation.



Image 1: Front view of the AKB72914265 Universal Remote Control, showing all buttons and layout. This remote is black with clearly labeled buttons for power, numbers, volume, channel, menu, and navigation.

Key features include:

- Brand new condition, ready to use out of the box.
- No programming required; simply insert batteries.
- Compatible with a wide range of LG TV models, including 32LV2500UG, 32LV3400UA, 55LV5300UA, 55LK520, 22LV2500, and many others.
- Functions as a substitute for numerous LG remote models such as AKB69680416, AKB72914009, AKB72915207, and more.

2. Setup

2.1 Battery Installation

To begin using your remote control, you must first install the batteries. This remote typically requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image 2: Back view of the remote control, highlighting the battery compartment. The compartment is a rectangular indentation on the lower half of the remote's back.

2.2 Initial Use

This universal remote control is pre-programmed for LG TVs. No manual programming or code entry is required. Once batteries are installed, the remote is ready for immediate use with compatible LG television models.

3. Operating Instructions

Familiarize yourself with the primary functions of the remote control buttons:

POWER (●): Turns the TV on or off.

INPUT / AV MODE: Selects the input source (HDMI, AV, Component, etc.).

NUMBER BUTTONS (0-9): Directly enters channel numbers.

VOLUME (+/-): Increases or decreases the volume level.

CHANNEL (P +/-): Changes the TV channel up or down.

MUTE: Mutes or unmutes the TV sound.

MENU: Accesses the TV's main menu.

OK / NAVIGATION BUTTONS: Confirms selections and navigates through menus (Up, Down, Left, Right).

BACK / EXIT: Returns to the previous screen or exits the current menu.

GUIDE / INFO / PORTAL: Accesses TV program guide, information display, or smart TV portal functions.

COLOR BUTTONS (Red, Green, Yellow, Blue): Used for specific functions within menus or smart TV applications.

TEXT / T.OPT / SUBTITLE: Accesses teletext, text options, or subtitle controls.

Q.MENU / AD / ALARM: Quick menu access, audio description, or alarm functions.

3D: Activates or deactivates 3D mode on compatible TVs.

For specific advanced functions, refer to your LG television's original user manual, as this universal remote replicates the primary functions of many LG remotes.

4. Maintenance

4.1 Cleaning the Remote

To maintain the remote's appearance and functionality:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance degrades (e.g., buttons become unresponsive, range decreases). Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

5. Troubleshooting

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are within the effective operating range of the TV.

- **Certain buttons not working:**

- This remote is designed to replicate standard LG TV functions. Some advanced or smart TV specific functions might require the original TV remote or a smart remote.
- Ensure the button is not stuck or dirty.

- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure a clear line of sight to the TV's IR receiver.

If the problem persists after trying these steps, please refer to the support information provided in this manual.

6. Specifications

Product Dimensions	9.4 x 2.4 x 1.3 inches
Item Weight	3.2 ounces
Model Number	LYSB01MZ5HPQJ-ELECTRNCS
ASIN	B01MZ5HPQJ
Brand	Smartby
Connectivity Technology	Infrared
Compatible Devices	Television (LG TVs)
Max Number of Supported Devices	1

7. Warranty and Support

7.1 Warranty Information

Specific warranty details for this product are typically provided by the seller or manufacturer at the time of purchase. Please retain your proof of purchase for any warranty claims. For general return policies, refer to the retailer's terms and conditions (e.g., Amazon's 30-day return policy mentioned in product details).

7.2 Customer Support

For further assistance, troubleshooting not covered in this manual, or inquiries regarding your Smartby AKB72914265 Universal Remote Control, please contact the seller or manufacturer directly through the platform where the product was purchased. You can often find seller contact information on your order details page.

No official product videos were found for this item from the manufacturer or seller.

© 2024 Smartby. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.