

Nilfisk Multi II 30L T VSC INOX

Nilfisk Multi II 30L T VSC INOX Wet & Dry Vacuum Cleaner User Manual

Model: Multi II 30L T VSC INOX (18451553)

Brand: Nilfisk

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Nilfisk Multi II 30L T VSC INOX wet and dry vacuum cleaner. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INSTRUCTIONS

WARNING: Always disconnect the appliance from the power supply before cleaning or performing maintenance.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not use the appliance to vacuum flammable or explosive materials.
- Do not immerse the appliance in water.
- Always use the correct filter for wet or dry vacuuming.
- Keep children and unauthorized persons away from the appliance during operation.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT OVERVIEW & COMPONENTS

The Nilfisk Multi II 30L T VSC INOX is a versatile wet and dry vacuum cleaner designed for various cleaning tasks. Key features include:

- Large 30L stainless steel tank.

- Powerful suction with variable speed control.
- Blower function for clearing debris.
- Integrated power outlet for electric tools with automatic start/stop.
- Filter cleaning indicator and 'Push & Clean' function.
- Can be used with or without a dust bag.

Included Accessories:

ACCESSOIRES INCLUS



Image: A collection of included accessories, including a wet and dry floor nozzle, crevice nozzle, hose, and filter.

- Wet and Dry Floor Nozzle
- Crevice Nozzle
- Hose Storage Hook
- Disposable Dust Bag
- Cartridge Filter

4. ASSEMBLY & SETUP

4.1 Unpacking and Initial Assembly

1. Carefully remove all components from the packaging.
2. Attach the wheels to the base of the vacuum cleaner.
3. Secure the motor head onto the stainless steel tank using the side clips.

Your browser does not support the video tag.

Video: Demonstrates the assembly of the Nilfisk Multi II 30L T VSC INOX, including attaching the hose and accessories for storage.

4.2 Hose and Accessory Connection

1. Connect the flexible hose to the suction inlet on the front of the tank for vacuuming.
2. For the blower function, connect the hose to the outlet on the rear of the motor head.
3. Attach the desired accessory (floor nozzle, crevice nozzle) to the end of the hose or extension tubes.

4.3 Filter Installation

The vacuum uses a cartridge filter suitable for both wet and dry use. For dry vacuuming, a disposable dust bag can also be installed for easier debris disposal.

1. Ensure the cartridge filter is securely in place under the motor head.
2. For dry vacuuming, open the motor head clips and lift the motor head. Place a disposable dust bag over the inlet inside the tank, ensuring it is properly sealed. Reattach the motor head.

Your browser does not support the video tag.

Video: Shows how to remove and replace the filter, and how to install a dust bag for dry vacuuming.

4.4 Power Connection & Mode Selection

1. Plug the power cord into a suitable electrical outlet.
2. Use the ON/OFF switch on the motor head to power on the vacuum.
3. Adjust suction power using the variable speed control dial.
4. To use the power tool outlet, plug your electric tool into the integrated socket on the vacuum. Select the appropriate switch position for synchronized operation (vacuum starts when the tool starts).



Image: Close-up of the vacuum's top panel, showing the ON/OFF switch, variable speed control, filter cleaning button, and power tool outlet.

5. OPERATING INSTRUCTIONS

5.1 Dry Vacuuming

1. Ensure a dust bag is installed for optimal dry debris collection and filter protection.
2. Attach the floor nozzle or crevice nozzle as needed.
3. Turn on the vacuum using the ON/OFF switch. Adjust suction power.
4. Move the nozzle over the dry surface to collect dust and debris.



Image: The vacuum cleaner's floor nozzle collecting dry debris from a tiled floor.



Image: The crevice nozzle being used to clean tight spaces in a car interior.

5.2 Wet Vacuuming

1. Remove any dust bag if installed. The cartridge filter is suitable for wet use.
2. Attach the wet floor nozzle.
3. Turn on the vacuum.
4. Move the nozzle over the liquid spill to collect it. The float mechanism will stop suction when the tank is full.



5.3 Blower Function

1. Connect the hose to the blower outlet on the rear of the motor head.
2. Turn on the vacuum.
3. Direct the airflow to clear leaves, dust, or inflate items.



Image: A person using the vacuum's blower function to clear leaves from an outdoor patio.



Image: The vacuum's blower function being used to inflate an air mattress outdoors.

5.4 Using the Power Tool Socket

1. Plug your electric tool into the integrated power outlet on the vacuum.
2. Set the vacuum's switch to the power tool synchronization mode.

3. When you start your electric tool, the vacuum will automatically turn on to collect dust and debris. It will turn off shortly after the tool is switched off.



Image: The vacuum cleaner connected to a jigsaw, demonstrating the power tool synchronization feature.

6. MAINTENANCE

WARNING: Always unplug the vacuum cleaner before performing any maintenance.

6.1 Emptying the Tank

1. Unclip the motor head and lift it off the tank.
2. For dry debris with a dust bag, carefully remove the bag and dispose of it.
3. For wet debris or dry debris without a bag, empty the tank into a suitable container.
4. Clean the inside of the tank with water and mild detergent if necessary, then dry thoroughly.

6.2 Filter Cleaning & Replacement

The filter cleaning indicator will illuminate when the filter needs attention. Use the 'Push & Clean' function for quick cleaning during operation.

1. To manually clean the filter, unclip the motor head and remove it.
2. Carefully remove the cartridge filter. Tap it gently to dislodge dust or rinse it with water if heavily soiled (ensure it is completely dry before re-installation for dry vacuuming).
3. Replace the filter if it is damaged or no longer cleans effectively.

6.3 General Cleaning

- Wipe the exterior of the vacuum cleaner with a damp cloth.
- Clean the hose and accessories regularly to prevent blockages.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not start	No power supply; ON/OFF switch not engaged.	Check power cord connection; Ensure switch is in 'ON' position.
Loss of suction power	Clogged filter; Full tank; Blocked hose/nozzle.	Clean or replace filter; Empty tank; Clear blockages.
Water leaks from tank	Tank is overfilled; Seal is damaged.	Empty tank; Check and replace tank seal if necessary.
Blower function not working	Hose not connected to blower outlet; Motor issue.	Ensure hose is correctly connected to the blower outlet; Contact service if motor issue suspected.

8. SPECIFICATIONS

Feature	Specification
Brand	Nilfisk
Model Name	Multi II 30L T VSC INOX
Model Number	18451553
Power (Watts)	1400 W
Voltage	230 Volts
Current Intensity	6.09 A
Capacity	30 Liters
Item Weight	10.5 Kilograms
Hose Length	4 Meters
Noise Level	87 Decibels
Filter Type	Cartridge
Special Features	Bag, Bagless, Filter Cleaning Indicator, Power Tool Outlet
Dimensions (L x W x H)	42.6L x 37.4W x 68.4H cm

9. WARRANTY & SUPPORT

Your Nilfisk Multi II 30L T VSC INOX vacuum cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Nilfisk customer support or visit the official Nilfisk website. Ensure you have your model number (18451553) and proof of purchase available.

