

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BLACK+DECKER](#) /

› [BLACK+DECKER 60V MAX Cordless Hedge Trimmer LHT360CFF User Manual](#)

BLACK+DECKER LHT360CFF

BLACK+DECKER 60V MAX Cordless Hedge Trimmer LHT360CFF User Manual

Model: LHT360CFF

INTRODUCTION

Thank you for choosing the BLACK+DECKER 60V MAX Cordless Hedge Trimmer LHT360CFF. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your hedge trimmer. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear eye protection and heavy-duty gloves when operating the hedge trimmer.
- Keep hands and all body parts away from the blades.
- Do not operate the trimmer in wet conditions or near electrical wires.
- Ensure the battery is fully charged before use.
- Inspect the trimmer for damage before each use.
- Keep children and bystanders away from the operating area.

SETUP

1. Battery Installation and Charging

Insert the 60V MAX battery into the battery port until it clicks into place. To charge, remove the battery and place it into the BLACK+DECKER 60V MAX charger. Ensure the charger is connected to a standard power outlet. The indicator light on the charger will show the charging status.



Image: User operating the BLACK+DECKER 60V MAX Cordless Hedge Trimmer. The image shows a person wearing safety glasses and gloves, holding the hedge trimmer and actively trimming a hedge. The 60V battery pack is visible on the tool.

2. Blade Guard Removal

Before operation, carefully remove the blade sheath from the cutting blades. Always replace the blade sheath when the trimmer is not in use or during storage.

OPERATING INSTRUCTIONS

1. Starting and Stopping the Trimmer

1. To start, grasp the front handle and the rear handle firmly.
2. Depress the lock-off button (if present) and squeeze the trigger switch.
3. To stop, release the trigger switch.

2. Trimming Techniques

Hold the trimmer with both hands, ensuring a balanced stance. Use a sweeping motion to cut hedges. For vertical surfaces, begin at the bottom and sweep upwards. For horizontal surfaces, hold the trimmer at a slight angle to guide clippings away.

3. Using the POWERCUT™ Feature

The POWERCUT™ feature allows you to power through jams. If the blade gets stuck on a thick branch, press the POWERCUT™ button. This will momentarily increase power to clear the obstruction.

4. Utilizing the SAWBLADE™ Tip

The SAWBLADE™ tip is designed to cut branches up to 1.5 inches thick. Position the saw blade tip over the branch and apply steady pressure to cut through.

Your browser does not support the video tag.

Video: Demonstrates the features of the BLACK+DECKER 60V MAX Hedge Trimmer, including the POWERCUT™ function for clearing jams and the SAWBLADE™ tip for cutting thicker branches. It also highlights the soft grip for user comfort and the 3/4 inch cut capacity.

MAINTENANCE

1. Blade Care

After each use, clean the blades with a stiff brush to remove debris. Apply a light machine oil or blade lubricant to the blades to prevent rust and ensure smooth operation.

2. Storage

Always replace the blade sheath before storing the trimmer. Store the trimmer in a dry, secure location out of reach of children. Remove the battery before long-term storage.

3. Battery Care

Store batteries in a cool, dry place. Do not store batteries in direct sunlight or where temperatures can exceed 104°F (40°C). For long-term storage, charge batteries fully every 6 months.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not start	Battery not inserted correctly or discharged.	Ensure battery is fully seated and charged.
Blades jam frequently	Cutting material too thick; blades dull or dirty.	Use POWERCUT™ feature; clean and lubricate blades; sharpen or replace blades if necessary.
Reduced cutting performance	Dull blades; low battery charge.	Sharpen or replace blades; recharge battery.

SPECIFICATIONS

Model: LHT360CFF

Brand: BLACK+DECKER

Power Source: Battery Powered (60V MAX*)

Blade Length: 24 Inches

Cutting Width: 24 Inches

Item Weight: 8.4 Pounds

Product Dimensions: 30"L x 8"W x 7"H

Blade Material: Metal

Features: POWERCUT™ feature, SAWBLADE™ tip (cuts up to 1.5 inches thick)

*Maximum initial battery voltage (measured without a workload) is 60 volts. Nominal voltage is 54.

WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the official BLACK+DECKER website or contact their customer service. Keep your proof of purchase for warranty claims.

[Visit BLACK+DECKER Official Website](#)

© 2026 BLACK+DECKER. All rights reserved.